



Contents

68 - Interior equipment	1
1 Interior rear-view mirror	1
1.1 Interior rear-view mirror - remove and install	1
1.2 Interior rear-view mirror support - fasten	1
1.3 Internal rearview mirror with automatic anti-glare - assembly overview	2
1.4 Internal rearview mirror with automatic anti-glare - assembly overview	4
1.5 Internal rearview mirror with automatic anti-glare - remove and install	4
1.6 Fastening support of mirror with automatic anti-glare (with rain sensor) - install	5
1.7 Internal rearview mirror with automatic anti-glare (with rain sensor) - assembly overview	7
1.8 Internal rear-view mirror with automatic anti-glare (with rain sensor) - remove and install	8
2 Object compartments, covers and lids	9
2.1 centre console - general assembly overview	9
2.2 centre console - remove and install	9
2.3 Centre console (automated transmission) - assembly overview	10
2.4 Centre console (automated transmission) - remove and install	11
2.5 Rear console - assembly overview	13
2.6 Object compartment on B-pillar (Saveiro "extended cab") - assembly overview	15
2.7 B-pillar object compartment (Saveiro "extended cab") - remove and install	16
2.8 Glove box	17
2.9 Coat hook holder (Saveiro) - assembly overview	20
2.10 Coat hook holder (Saveiro) - remove and install	21
2.11 Dash panel centre frame - remove and install	22
2.12 Dash panel centre frame (with RCD 320G radio) - remove and install	23
2.13 Radio trim - remove and install	23
2.14 Net partition	24
3 sun visor	28
3.1 Sun visor - assembly overview	28
3.2 Sun visor - remove and install	28
4 Roof grab handles	30
4.1 Roof grab handle - remove and install	30
69 - Passenger protection	31
1 Seat belts - general information	31
1.1 Safety measures for belt tensioner	32
1.2 Special seat belt pre-tensioner instructions	33
1.3 belt tensioner - check	33
1.4 Storage, transportation and disposal of pre-tensioner units	33
2 Seat belts - check	34
2.1 Check points	34
3 Seat belts	38
3.1 Front seat belt ("2-door" Gol with pre-tensioner) - assembly overview	38
3.2 Front seat belt ("2-door" Gol with pre-tensioner) - remove and install	39
3.3 Front seat belt ("2-door" Gol without pre-tensioner) - assembly overview	40
3.4 Front seat belt ("2-door" Gol without pre-tensioner) - remove and install	41
3.5 Front seat belt ("4-door" Gol/Voyage with pre-tensioner) - assembly overview	43
3.6 Seat belt ("4-door" Gol/Voyage with pre-tensioner) - remove and install	44
3.7 Front seat belt ("4-door" Gol/Voyage without pre-tensioner) - assembly overview	46
3.8 Front seat belt ("4-door" Gol/Voyage without pre-tensioner) - remove and install	47
3.9 Front seat belt (Saveiro "single cab" with pre-tensioner) - assembly overview	49
3.10 Front seat belt (Saveiro "single cab" with pre-tensioner) - remove and install	50
3.11 Front seat belt (Saveiro "single cab" without pre-tensioner) - assembly overview	52



3.12	Front seat belt (Saveiro "single cab" without pre-tensioner) - remove and install	53
3.13	Front seat belt (Saveiro "extended cab" with pre-tensioner) - assembly overview	55
3.14	Front seat belt (Saveiro "extended cab" with pre-tensioner) - remove and install	56
3.15	Front seat belt (Saveiro "extended cab" without pre-tensioner) - assembly overview	58
3.16	Front seat belt (Saveiro "extended cab" without pre-tensioner) - remove and install	59
3.17	Front seat belt (Saveiro "double cab") - assembly overview	61
3.18	Front seat belt (Saveiro "double cab") - remove and install	62
3.19	Height adjuster - remove and install	63
3.20	Front seat belt lower fastening point ("2-door" Gol) - remove and install	64
3.21	Front seat belt lower fastening point ("4-door" Gol/Voyage) - remove and install	65
3.22	Front seat belt lower fastening point (Saveiro "single cab") - remove and install	66
3.23	Front seat belt lower fastening point (Saveiro "extended cab") - remove and install	67
3.24	Front seat belt lower fastening point (Saveiro "double cab") - remove and install	68
3.25	Fastening of the front belt - remove and install	69
3.26	Back seat belt without retractor ("2-door" Gol) - assembly overview	71
3.27	Rear seat belts without automatic retractor ("2-door" Gol) - remove and install	71
3.28	Rear seat belts with automatic retractor ("2-door" Gol) - assembly overview	72
3.29	Rear seat belts with automatic retractor ("2-door" Gol) - remove and install	73
3.30	Rear seat belts ("4-door" Gol) - assembly overview	74
3.31	Rear seat belts with automatic retractor ("4-door" Gol) - remove and install	75
3.32	Rear seat belts without automatic retractor ("4-door" Gol) - remove and install	77
3.33	Rear seat belts (Voyage) - assembly overview	78
3.34	Rear seat belts with automatic retractor (Voyage) - remove and install	79
3.35	Rear seat belts without automatic retractor (Voyage) - remove and install	81
3.36	Rear seat belts (Saveiro "double cab") - assembly overview	82
3.37	Rear seat belts (Saveiro "double cab") - remove and install	83
3.38	Rear seat belt lower fastening point ("2-door" Gol) - remove and install	84
3.39	Rear seat belt lower fastening point ("4-door" Gol/Voyage) - remove and install	85
3.40	Rear seat belt lower fastening point (Saveiro "double cab") - remove and install	86
3.41	Lap belt with double latch (Gol/Voyage) - remove and install	87
3.42	Abdominal belt with double latch (Saveiro "double cab") - remove and install	88
4	Airbag	90
4.1	Installation locations - assembly overview	90
4.2	Safety measures for working with Airbags	91
4.3	Storage, transportation and disposal of Airbag units	93
4.4	Airbag triggers after an accident - replace	93
4.5	Triggering device for driver's airbag N95 - identify	94
4.6	Triggering device for driver's airbag N95 (TRW) - remove and install	94
4.7	Triggering device for driver's airbag N95 (Autoliv) - remove and install	97
4.8	Ignition device for driver's airbag N95 (with multifunction steering wheel) - remove and install	100
4.9	Connector of the airbag coil and return spring with sliding ring F138 (version 1) - remove and install	102
4.10	Connector of the airbag coil and return spring with sliding ring F138 (version 2) - remove and install	103
4.11	Triggering device 1 for front passenger's airbag N131 - remove and install	104
4.12	Airbag control unit J234 - remove and install	107
4.13	Components - adapting/verifying	110
70	Trim, insulation	112
1	Dash panel	112
1.1	Dash panel - remove and install	112
1.2	Dash panel cross member - remove and install	114
1.3	Side support for dash panel support - remove and install	120
1.4	(Fixed) upper steering column lining - remove and install	121
1.5	(Fixed) lower steering column lining - remove and install	122



1.6	Upper steering column lining (with adjustment) - remove and install	123
1.7	Lower steering column lining (with adjustment) - remove and install	124
2	Doors' linings (2 doors)	126
2.1	Door trim - assembly overview	126
2.2	Door lining - remove and install	127
3	Doors' linings (4 doors)	129
3.1	Front door lining - assembly overview	129
3.2	Front door lining - remove and install	130
3.3	Rear door lining - assembly overview	131
3.4	Rear door lining - remove and install	133
3.5	Escutcheon (with locking rod) - remove and install	134
3.6	Escutcheon (without locking rod) - remove and install	135
4	Lining of columns and sides	137
4.1	Column A lining - remove and install	137
4.2	B-pillar upper lining ("2-door" Gol) - assembly overview	137
4.3	Upper B-pillar lining ("2-door" Gol) - remove and install	138
4.4	B-pillar upper lining ("4-door" Gol/Voyage) - assembly overview	139
4.5	Upper B-pillar lining ("4-door" Gol/Voyage) - remove and install	140
4.6	B-pillar upper lining (Saveiro "extended cab") - assembly overview	141
4.7	B-pillar upper lining (Saveiro "extended cab") - remove and install	142
4.8	Upper B-pillar lining (Saveiro "double cab") - assembly overview	143
4.9	Upper B-pillar lining (Saveiro "double cab") - remove and install	144
4.10	B-pillar lower lining ("4-door" Gol/Voyage) - assembly overview	145
4.11	Lower B-pillar lining ("4-door" Gol/Voyage) - remove and install	146
4.12	B-pillar lower lining (Saveiro "single cab") - assembly overview	147
4.13	B-pillar lower lining (Saveiro "single cab") - remove and install	148
4.14	B-pillar lower lining (Saveiro "extended cab") - assembly overview	149
4.15	B-pillar lower lining (Saveiro "extended cab") - remove and install	150
4.16	C-pillar upper lining ("2-door" Gol) - assembly overview	151
4.17	Upper C-pillar lining ("2-door" Gol) - remove and install	153
4.18	C-pillar upper lining ("4-door" Gol) - assembly overview	155
4.19	Upper C-pillar lining ("4-door" Gol) - remove and install	156
4.20	C-pillar upper lining (Voyage) - assembly overview	160
4.21	C-pillar upper lining (Voyage) - assembly overview	160
4.22	Upper C-pillar lining (Saveiro "double cab") - assembly overview	162
4.23	Upper C-pillar lining (Saveiro "double cab") - remove and install	163
4.24	C-pillar lower lining - assembly overview	164
4.25	C-pillar lower lining - remove and install	165
4.26	Cross member upper lining (Saveiro "extended cab") - assembly overview	166
4.27	Cross member upper lining (Saveiro "extended cab") - remove and install	167
4.28	Cross member lower lining (Saveiro "extended cab") - assembly overview	167
4.29	Cross member lower lining (Saveiro "extended cab") - remove and install	168
4.30	Side lining ("2-door" Gol) - assembly overview	169
4.31	Side lining ("2-door" Gol) - remove and install	171
4.32	Side lining (Saveiro "double cab") - assembly overview	174
4.33	Side lining (Saveiro "double cab") - remove and install	175
5	Linings of the luggage compartment	177
5.1	Rear lid lining (Gol) - assembly overview	177
5.2	Rear lid lining (Gol) - remove and install	178
5.3	Rear lid lining (Voyage) - assembly overview	179
5.4	Rear lid lining (Voyage) - remove and install	179
5.5	Rear lid tail light covers (Voyage) - assembly overview	180
5.6	Rear lid tail light covers (Voyage) - remove and install	181
5.7	Rear lid lining (Saveiro) - assembly overview	181
5.8	Rear lid lining (Saveiro) - remove and install	182



5.9	Luggage compartment cover (Gol) - remove and install	183
5.10	Luggage compartment cover (Voyage) - assembly overview	185
5.11	Luggage compartment cover (Voyage) - remove and install	185
5.12	Rear panel lining - remove and install	186
5.13	Side luggage compartment lining (Gol) - assembly overview	186
5.14	Luggage compartment side lining (Gol) - remove and install	187
5.15	Luggage compartment side lining (Voyage) - assembly overview	188
5.16	Luggage compartment side lining (Voyage) - remove and install	189
6	Luggage compartment tray	191
6.1	Luggage compartment tray (Voyage) - assembly overview	191
6.2	Luggage compartment tray (Voyage) - remove and install	191
7	Roof lining	194
7.1	Moulded headliner ("2-door" Gol) - assembly overview	194
7.2	Moulded headliner ("2-door" Gol) - assembly overview	194
7.3	Moulded headliner ("4-door" Gol) - assembly overview	195
7.4	Moulded headliner ("4-door" Gol) - assembly overview	196
7.5	Moulded headliner (Voyage) - assembly overview	197
7.6	Moulded headliner (Voyage) - remove and install	198
7.7	Moulded headliner (Saveiro "single cab") - assembly overview	199
7.8	Moulded headliner (Saveiro "single cab") - remove and install	200
7.9	Moulded headliner (Saveiro "extended cab") - assembly overview	201
7.10	Moulded headliner (Saveiro "extended cab") - remove and install	202
7.11	Moulded headliner (Saveiro "double cab") - assembly overview	203
7.12	Moulded headliner (Saveiro "double cab") - remove and install	204
7.13	Moulded headliner - replace	205
8	Noise insulation and insulation	207
8.1	Tools	207
8.2	Assembly overview	207
8.3	Floor lining ("2-door" Gol) - remove and install	221
8.4	Floor lining ("4-door" Gol/Voyage) - remove and install	222
8.5	Floor covering (Saveiro "single cab") - remove and install	224
8.6	Floor covering (Saveiro "extended cab") - remove and install	225
8.7	Floor covering (Saveiro "double cab") - remove and install	226
72	Seat frames	228
1	Front seats	228
1.1	Front seat - remove and install	228
1.2	Front seat covers- assembly overview	231
1.3	Front seat covers- remove and install	232
1.4	Fire extinguisher support - remove and install	235
1.5	Front seat head restraint - assembly overview	235
1.6	Front seat sliding guides (side) - replace	236
1.7	Front seat sliding guide (centre) - replace	237
1.8	Longitudinal adjustment lever - assembly overview	237
1.9	Front seat backrest - removal and installation	238
1.10	Backrest unlocking cable (2 doors) - assembly overview	239
1.11	Backrest unlocking cable (2 doors) - remove and install	240
1.12	Front seat activation lever (2-doors) - remove and install	241
1.13	Front seat head restraint guide - remove and install	241
2	Rear seats	243
2.1	(Bench) rear seat - remove and install	243
2.2	Rear bench seat (split) - remove and install	244
2.3	Rear seat (Saveiro "double cab") - remove and install	246
2.4	Rear seat backrest (bench) - assembly overview	247
2.5	(Bench) back seat backrest - remove and install	248



2.6	Rear seat backrest (split) - assembly overview	249
2.7	Rear seat backrest (split) - remove and install	250
2.8	Rear seat backrest (Saveiro "double cab") - assembly overview	251
2.9	Rear seat backrest (Saveiro "double cab") - remove and install	252
2.10	Rear seat backrest stop - assembly overview	253
2.11	Rear seat backrest stop - remove and install	254
2.12	Rear seat head restraint - remove and install	255
2.13	Rear seat head restraint guide - remove and install	255
2.14	Rear seat head restraint guide (Saveiro "double cab") - remove and install	257
2.15	Rear seat backrest unlocking button - remove and install	257
74	Seat - padding, covers	259
1	Front seats lining and padding	259
1.1	Front seat lining and padding - assembly overview	259
1.2	Front seat backrest lining and padding - remove and install	259
1.3	Front backrest lining and padding - assembly overview	260
1.4	Front seat backrest lining and padding - remove and install	261
1.5	Front seat head restraint lining and padding - remove and install	262
2	Rear seat linings and paddings	264
2.1	Rear bench seat lining and padding - assembly overview	264
2.2	Rear seat backrest lining and padding - remove and install	264
2.3	Rear seat lining and padding (split) - assembly overview	265
2.4	Rear seat lining and padding (split) - remove and install	266
2.5	Rear seat backrest lining and padding- assembly overview	267
2.6	Rear seat backrest lining and padding - remove and install	268
2.7	Rear seat (split) backrest lining and padding - assembly overview	269
2.8	Rear seat (split) backrest lining and padding - remove and install	270