



Contents

00 - Technical data	1
1 Communication system information	1
1.1 General information	1
1.2 Diagnostics	1
1.3 Locating defects and indicating faults	1
91 - Radio, telephone, navigation	2
1 Radio / CD player	2
1.1 Radio Structure / Radio systems	2
1.2 Radio (RCD 320G) / CD player - assembly overview	3
1.3 Radio (RCD 320G) / CD player - remove and install	10
1.4 Radio (RCD 320G) / CD player - pin assignment	14
1.5 Radio (RCD 320G) / CD player - anti-theft system	18
2 Loudspeaker systems	21
2.1 Front bass speakers R21 and/or R23 - replace	21
2.2 Rear bass speakers R15 and/or R17 (Gol) - replace	22
2.3 Rear bass speakers R15 and/or R17 (Voyage) - replace	22
2.4 Rear bass speakers R15 and/or R17 (Saveiro) - replace	23
2.5 Front treble speaker R20 and/or R22 (front tweeter) - replace	24
3 Multifunction steering wheel	26
3.1 Multifunction steering wheel - general information	26
3.2 Multifunction steering wheel - general assembly overview	26
3.3 Command keys - remove and install	27
3.4 Multifunction steering wheel - adjust	29
4 Antenna system	30
4.1 Antenna R11 - assembly overview	30
4.2 Antenna R11 - remove and install	30
4.3 Antenna cable - assembly overview	32
4.4 Antenna cable (Radio RCD 320G / CD player) - remove and install	33
5 Interference suppression measures	36
6 Ambient temperature sensor G17	37
6.1 Ambient temperature sensor G17 - assembly overview	37
6.2 Ambient temperature sensor G17 - remove and install	38
6.3 Ambient temperature sensor G17 - check	38