



Contents

00 - Technical data	1
1 Assessment of crashed vehicles	1
2 General recommendations	3
3 Technical data	4
3.1 Chassis	4
3.2 Steering	4
40 - Front suspension	5
1 Assessment of crashed vehicles	5
2 Front suspension - raise the front axle with vehicle unloaded	6
2.1 Raise the front axle with vehicle unloaded (empty)	6
3 Front suspension - repair	9
3.1 Front suspension - general overview of assembly	9
4 I - Auxiliary frame (assembly mounting) , anti-roll bar, wishbones - repair	11
4.1 Auxiliary frame (assembly mounting), anti-roll bar, wishbones, - assembly overview	11
4.2 Thread in longitudinal member - repair	13
4.3 Swivel joint - check for clearance	14
4.4 Swivel guide - remove and install	14
4.5 Swivel guides - installation position	18
4.6 Wishbone (transversal) - remove and install	18
4.7 Wishbone - replace front metal-rubber bearing	21
4.8 Wishbone - replace the rear metal-rubber bearing	23
4.9 Auxiliary frame (assembly mounting) - remove and install	26
4.10 Auxiliary frame (assembly mounting) - position	29
4.11 Anti-roll bar - remove and install	32
5 II - Wheel roller bearings - repair	35
5.1 Wheel roller bearings - general overview of assembly	35
5.2 Hub and wheel bearing - remove and install	37
6 III - Front suspension column - repair	46
6.1 Front suspension column - general overview of assembly	46
6.2 Suspension strut - remove and install	47
6.3 Front suspension spring - remove and install	51
7 Constant velocity drive shaft - remove and install	54
7.1 Fastening nut (dodecagonal) of the drive shaft - loosen and tighten	54
7.2 Constant velocity drive shaft - remove and install	56
8 IV - Drive shaft with constant velocity joint - repair	63
8.1 Drive shaft with constant velocity joint - assembly overview	63
8.2 Drive shaft with constant velocity joint - repair	65
42 - Rear suspension	69
1 Rear suspension - raise the rear axle with the vehicle unloaded	69
1.1 Lift the rear axle with the vehicle unloaded (empty)	69
2 Rear suspension (Gol and Voyage) - repair	72
2.1 Rear suspension (Gol and Voyage) - assembly overview	72
2.2 Shock absorber (Gol and Voyage) - remove and install	74
2.3 Wheel roller bearing/hub unit (Gol Voyage) - remove and install	76
2.4 Rear axle (Gol and Voyage) - remove and install	79
2.5 Coil spring (Gol and Voyage) - remove and install	83
2.6 Split metal/rubber bearing on the rear axle (Gol and Voyage) - remove and install	85
2.7 Shaft end - check	92
2.8 Rear suspension (Gol and Voyage) - remove and install	92



3	Rear suspension (Saveiro)- repair	98
3.1	Rear suspension (Saveiro) (drum brake) - general overview of assembly	98
3.2	Rear suspension (Saveiro) (disc brake) - general overview of assembly	101
3.3	Shock absorber (Saveiro) - assembly overview	104
3.4	Shock absorber (Saveiro) - remove and install	105
3.5	Wheel roller bearings (Saveiro) (drum brakes) - assembly overview	106
3.6	Wheel bearings (Saveiro) (disc brakes) - assembly overview	108
3.7	Wheel roller bearing/hub unit (Saveiro) (drum brakes) - remove and install	109
3.8	Wheel roller bearing/hub unit (Saveiro) (disc brakes) - remove and install	111
3.9	Rear axle (Saveiro) - remove and install	114
3.10	Coil spring (Saveiro) - remove and install	118
3.11	Metal-rubber bearing - remove and install	119
44	Wheels, tyres, vehicle geometry	125
1	Wheel bolts	125
1.1	Wheel bolts - tightening torque	125
2	Vehicle alignment	126
2.1	Generalities	126
2.2	Checking conditions:	127
2.3	Preparation for measurement	127
2.4	Sequence for vehicle alignment	128
2.5	Nominal values for vehicle alignment	128
2.6	Vehicles in "zero" transverse tilting position	130
2.7	Camber on front axle - adjust	131
2.8	Camber on rear axle - adjust	131
2.9	Convergence on front axle - adjust	132
2.10	Convergence on rear axle - adjust	132
2.11	Left and right-hand steering - check	132
48	Steering	134
1	Steering wheel	134
1.1	Horn button H - remove and install	134
1.2	Steering wheel - assembly overview	135
1.3	Steering wheel - remove and install	136
2	Fixed steering column - repair	139
2.1	Fixed steering wheel support and column - assembly overview	139
2.2	Fixed steering column - remove and install	140
3	Adjustable steering column - repair	146
3.1	Adjustable steering support and column - assembly overview	146
3.2	Adjustable steering column - remove and install	146
4	Mechanical steering - repair	153
4.1	Mechanical steering wheel - assembly overview	153
4.2	Mechanical steering box - remove and install	154
4.3	Mechanical steering box - disassemble and assemble	157
5	Power steering box - repair	162
5.1	Power steering - assembly overview	162
5.2	Power steering box - remove and install	163
5.3	Power steering box - disassemble and assemble	167
6	Hydraulic pump, compensation reservoir, hydraulic pipes (power steering)	172
6.1	Hydraulic pump with hydraulic tubes - assembly overview	172
6.2	Hydraulic pump - assembly overview	175
6.3	Hydraulic pump - remove and install	175
6.4	Hydraulic pump operating pressure - check	179
6.5	Power steering system oil - replenish	184



7	Hydraulic pump, compensation reservoir, hydraulic pipes (Power steering/EA211 Engine)	185
7.1	Hydraulic pump with hydraulic tubes (EA211 Engine) - assembly overview	185
7.2	Hydraulic pump - assembly overview	188
7.3	Hydraulic pump - remove and install	188
7.4	Hydraulic pump operating pressure - check	191
7.5	Power steering system oil - replenish	196