



Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
1.2 Prefix, correspondence, gear ratio, filling volume	2
2 gearbox assembly scheme	5
2.1 Nomenclature	5
2.2 Gear ratios	6
3 Gearbox ratio "i"	7
3.1 Gearbox ratio "i" - calculation	7
4 General repair instructions	8
4.1 gearbox	8
4.2 Gaskets and retainers	8
4.3 Screws, nuts	9
4.4 Roller Bearings	9
4.5 Adjustment shims	9
4.6 Synchronizer rings	10
30 - Clutch	11
1 Command system	11
1.1 Command system - component overview	11
1.2 Command pedals - assembly overview	12
1.3 Clutch pedal switch F36 - remove and install	13
1.4 Clutch pedal return spring - remove and install	14
1.5 Clutch pedal support - remove and install	15
1.6 Clutch pedal - remove install	18
1.7 Hydraulic system - assembly overview	19
1.8 Transmitting cylinder - clutch hydraulic drive - remove and install	23
2 Clutch drive mechanism	27
2.1 Clutch drive mechanism - assembly overview	27
2.2 Clutch slave cylinder - remove and install	28
2.3 Clutch drive mechanism - bleed	29
3 Clutch	31
3.1 Clutch - assembly overview	31
3.2 Clutch - repair	32
34 - Controls, housing	34
1 Shift mechanism	34
1.1 Shift mechanism - installation position	34
1.2 Selector - component overview	36
1.3 Drive cables	37
1.4 Handle and boot on the gear lever - assembly overview	45
1.5 Handle and boot on the gear lever - remove and install	45
1.6 Selector and lever - remove and install	47
1.7 Gearshift lever and mechanism - repair	49
1.8 Selector and lever - adjust	52
1.9 Selector and lever - functional check	54
2 gearbox - remove and install	55
2.1 Gearbox for vehicles with engines (CCNA, CCRA, CFZA, CPBA) - remove and install	55
2.2 Gearbox for vehicles with engines (CNXA) - remove and install	70
2.3 Gearbox - transport	82
3 Gearbox oil level	84
3.1 Oil level - check	84



3.2	Oil level - replenish	84
4	gearbox - disassemble and assemble	86
4.1	Gearbox - overview	86
4.2	gearbox - assembly overview	87
4.3	Gearbox housing cover and 5th gear	88
4.4	Clutch housing	89
4.5	Input shaft, planet pinion, differential, selection mechanism and selector forks	90
4.6	Input shaft, planet pinion, differential, selection mechanism and selector forks - disassemble and assemble	92
5	Gearbox and clutch housings	100
5.1	Gearbox and clutch housings - repair	100
6	Gear selection mechanism - adjust	106
6.1	Gear selection mechanism - disassemble and assemble	106
7	Selector forks	109
7.1	Selector forks - disassemble and assemble	109
35 - Gears, shafts		114
1	Input shaft	114
1.1	Primary shaft - general overview of assembly	114
1.2	Input shaft - disassemble and assemble	116
2	Planet pinion	125
2.1	Pinion shaft - general overview of assembly	125
2.2	Planet pinion - disassemble and assemble	128
39 - Final drive - differential		134
1	Drive flange	134
1.1	Left drive flange retainer (left side) - replace	134
1.2	Drive flange retainer (right side) - replace	136
2	Differential	140
2.1	Differential - general overview of assembly	140
2.2	Differential - disassemble and assemble	142
2.3	Differential - adjust	148