



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Gearbox identification</b>	<b>1</b>
1.1 Location on gearbox	1
1.2 Prefix, correspondence, gear ratio, filling volume	1
<b>2 gearbox assembly scheme</b>	<b>3</b>
2.1 Nomenclature	3
2.2 Gear ratios	4
<b>3 Gear ratio calculation "I"</b>	<b>5</b>
<b>4 General repair instructions</b>	<b>6</b>
4.1 gearbox	6
4.2 Gaskets and retainers	6
4.3 Screws, nuts	7
4.4 Roller Bearings	7
4.5 Adjustment shims	7
4.6 Synchronizer rings	8
<b>30 - Clutch</b>	<b>9</b>
<b>1 Clutch drive mechanism - repair</b>	<b>9</b>
1.1 Hydraulic system - assembly overview	10
1.2 Clutch slave cylinder - remove and install	11
<b>2 Clutch drive mechanism - repair</b>	<b>13</b>
<b>3 Clutch - repair</b>	<b>15</b>
<b>34 - Controls, housing</b>	<b>18</b>
<b>1 Diagnosis, measurement and information system</b>	<b>18</b>
1.1 Connect	18
<b>2 Electronic components and installation locations</b>	<b>19</b>
2.1 "Tiptronic" upshift switch on the steering wheel E438 and/or "Tiptronic" downshift switch on the steering wheel E439	20
2.2 Gear identification sensor 2 G616	21
2.3 Gearbox input speed sensor G182	22
2.4 Gear identification sensor G604	23
2.5 Diagnosis socket	24
2.6 Selected gear indicator Y6	25
2.7 Automatic gearbox control unit J217	25
<b>3 Selector lever</b>	<b>26</b>
3.1 Selector lever - assembly overview	26
3.2 Selector lever handle - remove and install	27
3.3 Upper selector lever cover - remove and install	28
3.4 Selector lever - remove and install	29
3.5 Lower selector lever cover - remove and install	30
3.6 Selection lever boot - adjust	31
3.7 Selector lever operating positions - check	32
<b>4 Gear selection mechanism - assembly overview</b>	<b>33</b>
4.1 Gear selection mechanism - assembly overview in the transmission	33
4.2 Gear selection mechanism - remove and install	34
<b>5 gearbox - remove and install</b>	<b>42</b>
5.1 Removal	43
5.2 Installation	47
5.3 Tightening torques	51
<b>6 Gear selection mechanism - repair</b>	<b>54</b>



6.1	Gear selection mechanism - components assembly overview	55
6.2	Electro-valves set - assembly overview	59
6.3	Electro-valves set - remove and install	59
6.4	High-pressure slave cylinder - replace	60
6.5	Pressure tube - replace	61
6.6	Maximum pressure valve - replace	62
6.7	Gearbox hydraulic pressure sensor G270 - replace	62
6.8	Hydraulic oil reservoir - remove and install	62
6.9	Electric motor for the Hydraulic gearbox pump V387 - remove and install	63
6.10	Gearbox hydraulic pressure pump V387 - remove and install	64
6.11	Return tube - replace	65
6.12	Wiring harness - remove and install	65
6.13	Connector bracket (wiring harness) - remove and install	66
6.14	Tightening torques	67
<b>7</b>	<b>Gear oil level - check and replenish</b>	<b>68</b>
7.1	Oil level - check	68
7.2	Oil level - replenish	68
<b>8</b>	<b>Oil level for the gear selection mechanism - check and replenish</b>	<b>69</b>
8.1	Oil level - check	69
8.2	Oil level - replenish	70
<b>9</b>	<b>gearbox - disassemble and assemble</b>	<b>71</b>
9.1	gearbox - assembly overview	72
9.2	I - Gearbox housing cover and 5th gear	73
9.3	II - Clutch housing	74
9.4	III - Input shaft, planet pinion, differential, selection mechanism and selector forks	75
9.5	Input shaft, planet pinion, differential, selection mechanism and selector forks - disassemble and assemble	76
<b>10</b>	<b>Gearbox and clutch housings - repair</b>	<b>84</b>
<b>11</b>	<b>Selector forks - disassemble and assemble</b>	<b>90</b>
<b>35 - Gears, shafts</b>		<b>95</b>
1	Input shaft - disassemble and assemble	95
2	Planet pinion - disassemble and assemble	106
<b>39 - Final drive - differential</b>		<b>114</b>
<b>1</b>	<b>Retainer for the drive flange - replace</b>	<b>114</b>
1.1	Left drive flange retainer (left side) - replace	114
1.2	Drive flange retainer (right side) - replace	117
<b>2</b>	<b>Differential - repair</b>	<b>120</b>
2.1	Differential - disassemble and assemble	120
2.2	Differential - adjust	128