



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine characteristics	1
10 - Removing and installing engine	2
1 Engine - remove and install	2
1.1 Removal - recommendations	6
1.2 Engine - fasten to assembly stand	11
1.3 Installation notes	11
1.4 Tightening torques	12
1.5 Engine and gearbox support set - align	13
1.6 Power-drive unit supports	14
1.7 Additional notes and installation works in vehicles with air conditioning	16
13 - Crankshaft group	18
1 Engine - assembly and disassembly	18
1.1 Seal lid - replace	23
1.2 Poly-V belt (elastic) - remove and install	23
2 Crankshaft and flywheel flanges - remove and install	27
2.1 Flywheel - remove and install	28
2.2 Crankshaft seal (pulley side) - replace	29
2.3 Crankshaft flange (flywheel side) with Engine speed sensor G28 rotor - replace	31
3 Crankshaft - remove and install	40
3.1 Identifying engine bearing shells	41
3.2 Colour codes	41
3.3 Crankshaft - dimensions	42
4 Pistons and connecting rods - removal and installation	43
4.1 Piston and cylinder - dimensions	46
15 - Cylinder head, valve gear	48
1 Cylinder head - assembly and disassembly	48
1.1 Toothed belt semi-automatic tensioning pulley - check	51
1.2 Toothed belt - remove and install, adjust	52
1.3 Cylinder head - remove and install	56
1.4 Compression - check	62
2 Camshaft - repair	66
2.1 Camshaft - check axial clearance	69
2.2 Valve seat - trim	70
2.3 Camshaft seal - replace	72
2.4 Camshaft and cylinder head cover - removal and installation	75
2.5 Valve guides - check	78
2.6 Valve rod sealant - replacement	79
17 - Lubrication	83
1 Lubrication system components	83
1.1 Lubricating system components - assembly overview	83
1.2 Engine oil	85
1.3 Crankcase - remove and install	86
1.4 Oil filter - replace	88
1.5 Oil pump - remove and install	90
1.6 Oil pressure switch F1 - remove and install	93



1.7	Oil pressure and Oil pressure switch F1 - check	94
19 - Cooling	96
1	Cooling system components	96
1.1	Cooling system components, body side	96
1.2	Cooling system components, engine side	98
1.3	Hose connection diagram for cooling system	101
1.4	Cooling system - drainage and replenishment	102
1.5	Cooling system - check air-tightness	108
1.6	Coolant tank flap - check safety valve	110
1.7	Radiator - remove and install	111
1.8	Water pump - remove and install	113
20 - Fuel supply system	116
1	Fuel supply system components	116
1.1	Fuel tank components with accessories and fuel filter - removal and installation	116
1.2	Safety measures regarding work on the fuel supply systems	119
1.3	Cleaning rules	120
1.4	Cold start system components - remove and install	120
1.5	Fuel pump (pre-supply pump) G6 - remove and install	121
1.6	Fuel level sensor G - remove and install	124
1.7	Fuel reservoir - remove and install	124
1.8	Fuel pump (pre-supply pump) G6 - check	126
2	Engine power electronic adjustment (electronic accelerator) - check	136
2.1	Electronic accelerator system operation	136
3	Activated charcoal filter system	138
3.1	Operation	138
3.2	Activated charcoal filter system components - repair	138
3.3	Fuel tank ventilation - check	139
24 - Mixture preparation - injection	141
1	Injection system - repair	141
1.1	General instructions regarding the injection system	141
1.2	Component location	141
1.3	Injection components - remove and install	144
1.4	Intake manifold - remove and install	147
1.5	Fuel distributor with injectors - removal and installation	148
1.6	Air filter set - assemble and disassemble	149
1.7	Air filter - remove and install	150
1.8	Safety measures	150
1.9	Cleaning rules	151
1.10	Technical data	152
2	Component checks	153
2.1	Injection valves - check	153
2.2	Supply system pressure, fuel pressure gauge and residual pressure - check	155
3	READINESS code	162
3.1	Creating and Interpreting the READINESS code	162
4	Engine control unit J623	163
4.1	Engine control unit J623 - remove and install	163
4.2	Adjust components	163
4.3	Check the event memory in the Engine control unit J623 and delete it	164
26 - Exhaust system	166
1	Exhaust system components	166



1.1	Intake manifold with catalytic converter, front exhaust manifold, intermediate silencer and installation parts	166
1.2	Rear muffler with supports	168
28 - Glow plug system	170	
1	Ignition system	170
1.1	General instructions regarding the ignition system	170
1.2	Ignition system components - remove and install	170
1.3	Safety measures	172
1.4	Spark plugs Q - test data	172