

001 - Basic equipment	1-18
1. Basic equipment	1
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	2
3. Ignition/starter switch, Onboard supply control unit	3
4. Onboard supply control unit	4
5. Onboard supply control unit	5
6. Onboard supply control unit	6
7. Onboard supply control unit	7
8. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	8
9. Intermittent wiper switch, Onboard supply control unit, Windscreen wiper motor, Windscreen and rear window washer pump	9
10. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light	10
11. Brake light switch, Brake pedal switch, Horn or dual tone horn, Onboard supply control unit, 12 V socket, Front interior light	11
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	12
13. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fresh air blower	13
14. Reversing light switch, Fresh air blower and radiator fan relay, Onboard supply control unit, Radiator fan	14
15. Onboard supply control unit, Left headlight twin filament bulb, Left side light bulb, Left tail light bulb, Front left turn signal bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb	15
16. Onboard supply control unit, Right headlight twin filament bulb, Right tail light bulb, Right side light bulb, Front right turn signal bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb	16
17. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Clutch pedal switch, Rev. counter, Fuel pump relay, Immobiliser control unit, Dash panel insert	17
18. Fuel gauge, Speedometer, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	18
002 - Basic equipment	19-37
1. Basic equipment	19
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	20
3. Ignition/starter switch, Onboard supply control unit	21
4. Onboard supply control unit	22
5. Onboard supply control unit	23
6. Onboard supply control unit	24
7. Onboard supply control unit	25
8. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	26
9. Intermittent wiper switch, Onboard supply control unit, Windscreen wiper motor, Windscreen and rear window washer pump	27
10. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light, Additional brake light bulb	28
11. Brake light switch, Brake pedal switch, Horn or dual tone horn, Onboard supply control unit, 12 V socket, Front interior light	29
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	30
13. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fresh air blower	31
14. Heated rear window button, Reversing light switch, Fresh air blower and radiator fan relay, Onboard supply control unit, Radiator fan	32
15. Rear lid contact switch, Onboard supply control unit, Left headlight twin filament bulb, Left side light bulb, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb	33
16. Onboard supply control unit, Right headlight twin filament bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Number plate light	34
17. Rear lid release switch, Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, Heated rear window	35
18. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Clutch pedal switch, Rev. counter, Fuel pump relay, Immobiliser control unit, Dash panel insert	36
19. Fuel gauge, Speedometer, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	37
003 - 1.0l engine , CPBA	38-56
1. 1.0l engine . CPBA	38

2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	39
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	40
4. Onboard supply control unit	41
5. Fuel pump relay, X-contact relief relay, Onboard supply control unit	42
6. Engine speed sender, Knock sensor 1, Radiator fan 2nd speed relay, Onboard supply control unit, Engine control unit, Activated charcoal filter solenoid valve 1	43
7. Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Onboard supply control unit, Engine control unit	44
8. Onboard supply control unit, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	45
9. Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Onboard supply control unit, Engine control unit, Fuel pump for cold start	46
10. Accelerator position sender, Accelerator position sender 2, Onboard supply control unit, Engine control unit	47
11. Lambda probe, Lambda probe after catalytic converter, Onboard supply control unit, Engine control unit	48
12. Clutch pedal switch, Pressure sensor, Onboard supply control unit, Engine control unit, Cold start valve	49
13. Brake light switch, Onboard supply control unit, Engine control unit	50
14. Onboard supply control unit, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plugs	51
15. Cold start device relay, Fresh air blower and radiator fan relay, Onboard supply control unit, Engine control unit, Voltage supply relay 1, Radiator fan	52
16. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	53
17. Speedometer sender, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	54
18. Fuel gauge, Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Coolant temperature warning lamp (too cold), Brake system warning lamp, Electronic power control fault lamp	55
19. Coolant temperature gauge, Speedometer, Control unit in dash panel insert, Dash panel insert, Reserve fuel warning lamp, Malfunction warning lamp	56
004 - 1.6l petrol engine , CFZA	57-73
1. 1.6l petrol engine , CFZA	57
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	58
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	59
4. Onboard supply control unit	60
5. Onboard supply control unit	61
6. Clutch pedal switch, Radiator fan 2nd speed relay, Fresh air blower and radiator fan relay, Onboard supply control unit, Engine control unit	62
7. Lambda probe, Onboard supply control unit, Engine control unit	63
8. Accelerator position sender, Lambda probe after catalytic converter, Accelerator position sender 2, Onboard supply control unit, Engine control unit	64
9. Engine speed sender, Knock sensor 1, Fuel pump relay, Onboard supply control unit, Engine control unit, Voltage supply relay 1, Activated charcoal filter solenoid valve 1	65
10. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Onboard supply control unit, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	66
11. Coolant temperature sender, Onboard supply control unit, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	67
12. Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Onboard supply control unit, Engine control unit	68
13. Brake light switch, Brake pedal switch, Pressure sensor, Onboard supply control unit, Engine control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	69
14. Fuel gauge sender, Fuel system pressurisation pump, Speedometer sender, Onboard supply control unit	70
15. Fresh air blower switch, Heater/heat output switch, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	71
16. Handbrake warning switch, Brake fluid level warning contact, Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Brake system warning lamp, Electronic power control fault lamp	72
17. Oil pressure switch. Coolant temperature gauge. Control unit in dash panel insert. Dash panel	73

insert, Oil pressure warning lamp, Coolant temperature warning lamp (too cold), Reserve fuel warning lamp, Malfunction warning lamp	
005 - 1.6l engine , CCRA	74-89
1. 1.6l engine , CCRA	74
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	75
3. Ignition/starter switch, Onboard supply control unit	76
4. Fuse 2 in fuse holder A, Fuse 9 in fuse holder A, Fuse 22 in fuse holder A, Fuse 26 in fuse holder A, Fuse 34 in fuse holder A, Fuse 36 in fuse holder A, Fuse 38 in fuse holder A	77
5. Fuse 7 in fuse holder A, Fuse 15 in fuse holder A, Fuse 24 in fuse holder A, Fuse 29 in fuse holder A, Fuse 30 in fuse holder A, Fuse 40 in fuse holder A, Fuse 41 in fuse holder A	78
6. Lambda probe, Lambda probe after catalytic converter, Engine control unit	79
7. Accelerator position sender, Accelerator position sender 2, Starter motor relay, Engine control unit, Fuel pump for cold start	80
8. Radiator fan 2nd speed relay, Engine control unit, Radiator fan series resistor, Radiator fan	81
9. Fuel pump relay, Cold start device relay, X-contact relief relay, Fresh air blower and radiator fan relay, Engine control unit	82
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Engine control unit	83
11. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	84
12. Engine control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	85
13. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	86
14. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	87
15. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Fuel gauge sender, Dash panel insert, Oil pressure warning lamp, Malfunction warning lamp, Electronic power control fault lamp	88
16. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	89
006 - Radio	90-97
1. Radio	90
2. Battery, Starter, Alternator, Onboard supply control unit	91
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	92
4. Onboard supply control unit	93
5. Onboard supply control unit, Radio, Front right treble loudspeaker, Front right bass loudspeaker	94
6. Onboard supply control unit, Radio, Front left treble loudspeaker, Front left bass loudspeaker	95
7. Onboard supply control unit, Radio, Rear left bass loudspeaker, Rear right bass loudspeaker	96
8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	97
007 - Air conditioning system	98-105
1. Air conditioning system	98
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	99
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	100
4. Onboard supply control unit	101
5. Air conditioning system control unit, Onboard supply control unit, Fresh air and air recirculation flap control motor	102
6. Fresh air blower switch, Air conditioning system control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	103
7. Radiator fan 2nd speed relay, Air conditioning system switch-off relay, Onboard supply control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	104
8. Rev. counter, Pressure sensor, Speedometer, Fresh air blower and radiator fan relay, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	105
008 - Airbag systems	106-115
1. Airbag systems	106
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	107
3. Ignition/starter switch, Onboard supply control unit	108
4. Onboard supply control unit	109
5. X-contact relief relay, Onboard supply control unit	110
6. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Driver side airbag igniter	111
7. Airbag control unit, Front passenger side airbag deactivated warning lamp	112
8. Airbag control unit	113
9. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag igniter 1. Driver seat belt tensioner igniter 1. Front passenger seat belt	114

tensioner igniter 1	
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Airbag warning lamp	115
009 - Anti-lock brake system (ABS)	116-125
1. Anti-lock brake system (ABS)	116
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	117
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	118
4. Onboard supply control unit	119
5. Brake light switch, Brake fluid level warning contact, Brake pedal switch, Onboard supply control unit	120
6. X-contact relief relay, Onboard supply control unit	121
7. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp	122
8. ABS control unit, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve	123
9. ABS control unit, ABS solenoid valve relay, Front right ABS inlet valve, Rear right ABS inlet valve	124
10. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, ABS return flow pump relay, Rear left ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve	125
010 - Fog light and rear fog light	126-139
1. Fog light and rear fog light	126
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	127
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	128
4. Onboard supply control unit	129
5. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	130
6. Onboard supply control unit, Rear left fog light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left brake and tail light bulb	131
7. Onboard supply control unit	132
8. Front and rear fog light switch, Fog light relay, Onboard supply control unit, Front and rear fog light switch illumination bulb	133
9. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	134
10. Onboard supply control unit, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right brake and tail light bulb	135
11. Onboard supply control unit, Rear left fog light bulb	136
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	137
13. Left fog light bulb, Right fog light bulb, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb	138
14. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	139
011 - Interactive system	140-144
1. Interactive system	140
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	141
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	142
4. Onboard supply control unit	143
5. Multifunction display call-up button, Heated rear window button, Rev. counter, Speedometer, Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	144
012 - Window wash/wipe system and heated rear window	145-154
1. Window wash/wipe system and heated rear window	145
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	146
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	147
4. X-contact relief relay, Onboard supply control unit	148
5. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	149
6. Multifunction display call-up button, Heated rear window button, Onboard supply control unit	150
7. Onboard supply control unit	151
8. Intermittent wiper switch, Rear wiper switch, Multifunction display call-up button, Onboard supply control unit	152
9. Intermittent wiper switch, Onboard supply control unit, Windscreen wiper motor	153
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	154
013 - Dual headlight	155-163



1. Dual headlight	155
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	156
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	157
4. Onboard supply control unit	158
5. Onboard supply control unit, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb	159
6. Onboard supply control unit, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	160
7. Light switch, Turn signal switch, Horn plate, Horn activation contact ring, Onboard supply control unit	161
8. Headlight main beam relay, Dipped beam relay, Onboard supply control unit	162
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	163
014 - Electric windows, rear vent windows	164-171
1. Electric windows, rear vent windows	164
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	165
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	166
4. Onboard supply control unit	167
5. Front left window regulator switch, Front right window regulator switch in driver door, Window regulator switch in front passenger door, Central control unit for window regulators, Driver side window regulator motor, Front passenger side window regulator motor	168
6. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Central control unit for window regulators, Window regulator switch illumination bulb, Rear left window regulator motor, Rear right window regulator motor	169
7. Rear window regulator isolation switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Central control unit for window regulators, Window regulator switch illumination bulb, Rear window regulator isolation switch illumination bulb	170
8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	171
015 - Parking aid (PDC)	172-179
1. Parking aid (PDC)	172
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	173
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	174
4. Reversing light switch, Onboard supply control unit	175
5. Rear centre left parking aid sender, Rear centre right parking aid sender, Rear parking aid warning buzzer, Parking aid control unit, Onboard supply control unit	176
6. Rear left parking aid sender, Rear right parking aid sender, Parking aid control unit, Onboard supply control unit	177
7. Parking aid control unit, Onboard supply control unit	178
8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	179
016 - Automated manual gearbox , CCRA,CFZA	180-195
1. Automated manual gearbox , CCRA,CFZA	180
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	181
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	182
4. Onboard supply control unit	183
5. Automatic gearbox control unit, Gearbox hydraulic pump relay, Onboard supply control unit, Hydraulic pump for gearbox	184
6. Automatic gearbox control unit, Onboard supply control unit, Clutch actuator valve, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3	185
7. Gearbox input speed sender, Clutch position sender, Gear detection sensor, Automatic gearbox control unit, Onboard supply control unit	186
8. Ambient temperature sensor, Gearbox hydraulic pressure sender, Sensor 2 for gear detection, Automatic gearbox control unit, Onboard supply control unit	187
9. Brake light switch, Driver door contact switch, Handbrake warning switch, Brake pedal switch, Automatic gearbox control unit, Onboard supply control unit	188
10. Onboard supply control unit, Selector lever sensors control unit	189
11. Starter motor relay, X contact relief relay 2, Terminal 15 relief relay, Onboard supply control unit	190
12. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit	191
13. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel. Onboard supply control unit	192

14. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit	193
15. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Onboard supply control unit	194
16. Rev. counter, Speedometer, Control unit in dash panel insert, Starter motor relay 2, Dash panel insert, Alternator warning lamp, Malfunction warning lamp	195
017 - Multifunction steering wheel	196-204
1. Multifunction steering wheel	196
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	197
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	198
4. Onboard supply control unit	199
5. Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Driver side airbag igniter	200
6. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Onboard supply control unit	201
7. Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Driver side airbag igniter	202
8. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Onboard supply control unit	203
9. Rev. counter, Speedometer, Multifunction indicator, Dash panel insert, Alternator warning lamp	204
018 - Coming home	205-217
1. Coming home	205
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	206
3. Ignition/starter switch, Reversing light switch, Onboard supply control unit, Terminal 30 wiring junction	207
4. Onboard supply control unit	208
5. Onboard supply control unit, Left side light bulb, Right side light bulb	209
6. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	210
7. Onboard supply control unit, Right tail light bulb, Front right turn signal bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right brake and tail light bulb	211
8. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Right reversing light bulb	212
9. Onboard supply control unit, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	213
10. X-contact relief relay, Onboard supply control unit, Left reversing light bulb, Left brake and tail light bulb	214
11. Headlight dipper and flasher switch, Onboard supply control unit, Left headlight twin filament bulb, Right headlight twin filament bulb	215
12. Headlight main beam relay, Dipped beam relay, Number plate light	216
13. Rev. counter, Speedometer, Control unit in dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	217
019 - System for lowering passenger side mirror	218-226
1. System for lowering passenger side mirror	218
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	219
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	220
4. Onboard supply control unit	221
5. Folding exterior mirror control unit, Onboard supply control unit	222
6. Reversing light switch, Folding exterior mirror control unit, Onboard supply control unit	223
7. Mirror adjustment changeover switch, Onboard supply control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor, Driver side mirror adjustment motor	224
8. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Onboard supply control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor, Front passenger side mirror adjustment motor	225
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	226
020 - Onboard supply control unit	227-240
1. Onboard supply control unit	227
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	228
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	229

4. Onboard supply control unit	230
5. Onboard supply control unit	231
6. Onboard supply control unit	232
7. Onboard supply control unit	233
8. Onboard supply control unit, Windscreen wiper motor	234
9. Onboard supply control unit	235
10. Onboard supply control unit	236
11. Onboard supply control unit	237
12. Onboard supply control unit	238
13. Onboard supply control unit	239
14. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp	240
021 - Central locking	241-251
1. Central locking	241
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	242
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	243
4. Onboard supply control unit	244
5. Anti-theft alarm and vermin repellent system contact switch, Anti-theft alarm ultrasonic sensor, Anti-theft alarm system horn, Onboard supply control unit, Alarm horn relay	245
6. Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Onboard supply control unit	246
7. Driver side interior locking switch, Driver door power latching system contact switch, Front passenger door power latching system contact switch, Onboard supply control unit, Driver door power latching motor	247
8. Onboard supply control unit, Front passenger door power latching motor, Rear left power latching motor, Rear right power latching motor	248
9. Rear lid release switch, Rear lid contact switch, Onboard supply control unit, Rear lid release motor, Luggage compartment light	249
10. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front interior light, Rear left reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	250
11. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Alarm system warning lamp	251
022 - Light switch	252-260
1. Light switch	252
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	253
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	254
4. Onboard supply control unit	255
5. Onboard supply control unit	256
6. Light switch, Onboard supply control unit, Light switch illumination bulb	257
7. Intermittent wiper switch, Airbag coil connector and return ring with slip ring, Onboard supply control unit	258
8. Turn signal switch, Headlight dipper and flasher switch, Rear wiper switch, Intermittent wiper regulator, Multifunction display call-up button, Onboard supply control unit	259
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp, Left turn signal warning lamp	260
023 - Basic equipment	261-279
1. Basic equipment	261
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	262
3. Ignition/starter switch, Onboard supply control unit	263
4. Onboard supply control unit	264
5. Onboard supply control unit	265
6. Onboard supply control unit	266
7. Onboard supply control unit	267
8. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	268
9. Intermittent wiper switch, Onboard supply control unit, Windscreen wiper motor, Windscreen and rear window washer pump	269
10. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light	270
11. Brake light switch, Brake pedal switch, Horn or dual tone horn, Onboard supply control unit, 12 V socket, Front interior light	271
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	272
13. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fresh air blower series resistor with overheating fuse. Fresh air blower	273

14. Reversing light switch, Fresh air blower and radiator fan relay, Onboard supply control unit, 12 V socket 2, Radiator fan	274
15. Onboard supply control unit, Left side light bulb, Left tail light bulb, Front left turn signal bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb	275
16. Onboard supply control unit, Left headlight twin filament bulb, Right headlight twin filament bulb, Right tail light bulb, Right side light bulb, Front right turn signal bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb	276
17. Load area illumination relay, Additional brake light bulb, Load area illumination bulb	277
18. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Clutch pedal switch, Rev. counter, Fuel pump relay, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert	278
19. Fuel gauge, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	279
024 - Fog light and rear fog light	280-292
1. Fog light and rear fog light	280
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	281
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	282
4. Onboard supply control unit	283
5. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	284
6. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Rear left fog light bulb, Rear left turn signal bulb, Left reversing light bulb, Left brake and tail light bulb	285
7. Onboard supply control unit	286
8. Front and rear fog light switch, Fog light relay, Onboard supply control unit, Front and rear fog light switch illumination bulb	287
9. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	288
10. Onboard supply control unit, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb	289
11. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	290
12. Fog light relay, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	291
13. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	292
025 - 1.6l engine , CCRA	293-308
1. 1.6l engine , CCRA	293
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	294
3. Ignition/starter switch, Onboard supply control unit	295
4. Fuse 2 in fuse holder A, Fuse 7 in fuse holder A, Fuse 9 in fuse holder A, Fuse 22 in fuse holder A, Fuse 26 in fuse holder A, Fuse 34 in fuse holder A, Fuse 38 in fuse holder A	296
5. Fuse 15 in fuse holder A, Fuse 29 in fuse holder A, Fuse 36 in fuse holder A, Fuse 40 in fuse holder A, Fuse 41 in fuse holder A	297
6. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Voltage supply relay 1	298
7. Accelerator position sender, Accelerator position sender 2, Engine control unit, Fuel pump for cold start	299
8. Radiator fan 2nd speed relay, Engine control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	300
9. Fuel pump relay, Cold start device relay, X-contact relief relay, Fresh air blower and radiator fan relay, Engine control unit	301
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Engine control unit	302
11. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	303
12. Engine control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	304
13. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	305
14. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	306
15. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Fuel gauge sender, Fuel system pressurisation pump, Dash panel insert, Oil pressure warning lamp, Malfunction warning lamp, Electronic power control fault lamp	307
16. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	308
026 - 1.6l engine , CFZA	309-324
1. 1.6l engine , CFZA	309
2. Batterv. Starter. Alternator. Voltage regulator. Onboard supply control unit	310



3. Ignition/starter switch, Onboard supply control unit	311
4. Fuse 2 in fuse holder A, Fuse 7 in fuse holder A, Fuse 9 in fuse holder A, Fuse 22 in fuse holder A, Fuse 26 in fuse holder A, Fuse 34 in fuse holder A, Fuse 38 in fuse holder A	312
5. Fuse 15 in fuse holder A, Fuse 29 in fuse holder A, Fuse 36 in fuse holder A, Fuse 40 in fuse holder A, Fuse 41 in fuse holder A	313
6. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Voltage supply relay 1	314
7. Accelerator position sender, Accelerator position sender 2, Engine control unit	315
8. Radiator fan 2nd speed relay, Engine control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	316
9. Fuel pump relay, X-contact relief relay, Fresh air blower and radiator fan relay, Engine control unit	317
10. Brake light switch, Clutch pedal switch, Brake pedal switch, Engine control unit	318
11. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	319
12. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	320
13. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	321
14. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	322
15. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Fuel gauge sender, Fuel system pressurisation pump, Dash panel insert, Oil pressure warning lamp, Malfunction warning lamp, Electronic power control fault lamp	323
16. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	324
027 - Basic equipment	325-344
1. Basic equipment	325
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	326
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	327
4. Onboard supply control unit	328
5. Onboard supply control unit	329
6. Onboard supply control unit	330
7. Onboard supply control unit	331
8. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	332
9. Intermittent wiper switch, Onboard supply control unit, Windscreen and rear window washer pump	333
10. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light	334
11. Brake light switch, Horn or dual tone horn, Onboard supply control unit, 12 V socket, Front interior light	335
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	336
13. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	337
14. Reversing light switch, Fresh air blower and radiator fan relay, Onboard supply control unit, Radiator fan	338
15. Onboard supply control unit, Left headlight twin filament bulb, Left side light bulb, Left tail light bulb, Front left turn signal bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb	339
16. Onboard supply control unit, Right headlight twin filament bulb, Right tail light bulb, Right side light bulb, Front right turn signal bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Additional brake light bulb	340
17. Onboard supply control unit, Windscreen wiper motor	341
18. Clutch pedal switch, Onboard supply control unit, Number plate light	342
19. Immobiliser reader coil, Handbrake warning switch, Brake fluid level warning contact, Fuel pump relay, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Oil pressure warning lamp, Brake system warning lamp	343
20. Fuel gauge, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	344
028 - Basic equipment	345-366
1. Basic equipment	345
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	346
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	347
4. Onboard supply control unit	348
5. Onboard supply control unit	349
6. Onboard supply control unit	350

7. Onboard supply control unit	351
8. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	352
9. Intermittent wiper switch, Onboard supply control unit, Windscreen and rear window washer pump	353
10. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light	354
11. Brake light switch, Horn or dual tone horn, Onboard supply control unit, 12 V socket, Front interior light	355
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	356
13. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	357
14. Reversing light switch, Fresh air blower and radiator fan relay, Onboard supply control unit, Radiator fan	358
15. Onboard supply control unit, Left headlight twin filament bulb, Left side light bulb, Front left turn signal bulb	359
16. Onboard supply control unit, Right headlight twin filament bulb, Right side light bulb, Front right turn signal bulb, Additional brake light bulb, Heated rear window	360
17. Onboard supply control unit, Windscreen wiper motor	361
18. Clutch pedal switch, Onboard supply control unit, Number plate light	362
19. Rear lid release switch, Heated rear window button, Rear lid contact switch, Onboard supply control unit, Left tail light bulb, Left reversing light bulb, Rear lid release motor	363
20. Onboard supply control unit, Right tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb	364
21. Rev. counter, Fuel pump relay, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Oil pressure warning lamp, Coolant temperature warning lamp (too cold), Brake system warning lamp	365
22. Fuel gauge, Speedometer, Control unit in dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	366
029 - Basic equipment	367-387
1. Basic equipment	367
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	368
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	369
4. Onboard supply control unit	370
5. Onboard supply control unit	371
6. Onboard supply control unit	372
7. Onboard supply control unit	373
8. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	374
9. Intermittent wiper switch, Onboard supply control unit, High-level brake light bulb, Windscreen and rear window washer pump	375
10. Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light	376
11. Brake light switch, Horn or dual tone horn, Onboard supply control unit, 12 V socket, Front interior light	377
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	378
13. Fresh air blower switch, Heater/heat output switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	379
14. Reversing light switch, Fresh air blower and radiator fan relay, Onboard supply control unit, 12 V socket 2, Radiator fan	380
15. Onboard supply control unit, Left side light bulb, Left tail light bulb, Front left turn signal bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Number plate light	381
16. Onboard supply control unit, Left headlight twin filament bulb, Right headlight twin filament bulb, Right tail light bulb, Right side light bulb, Front right turn signal bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb	382
17. Load area illumination switch, Button for two-part rear lid, Load area illumination relay, High-level brake light bulb, Load area illumination bulb, Rear interior light, Rear left interior light, Rear right interior light	383
18. Onboard supply control unit	384
19. Onboard supply control unit, Windscreen wiper motor	385
20. Rev. counter, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Oil pressure warning lamp, Coolant temperature warning lamp (too cold), Brake system warning lamp	386
21. Fuel gauge. Speedometer. Control unit in dash panel insert. Main beam warning lamp. Alternator	387

warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	
030 - Radio	388-397
1. Radio	388
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	389
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	390
4. Onboard supply control unit	391
5. Onboard supply control unit, Radio, Front right treble loudspeaker, Front right bass loudspeaker	392
6. Onboard supply control unit, Radio, Front left treble loudspeaker, Front left bass loudspeaker	393
7. Onboard supply control unit, Radio, Aerial, Rear left bass loudspeaker, Rear right bass loudspeaker, Aerial amplifier	394
8. Onboard supply control unit	395
9. Onboard supply control unit	396
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	397
031 - Air conditioning system	398-406
1. Air conditioning system	398
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	399
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	400
4. Onboard supply control unit	401
5. Air conditioning system control unit, Fresh air and air recirculation flap control motor	402
6. Fresh air blower switch, Air conditioning system control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	403
7. Radiator fan 2nd speed relay, Air conditioning system switch-off relay, Onboard supply control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	404
8. Onboard supply control unit	405
9. Rev. counter, Pressure sensor, Speedometer, Fresh air blower and radiator fan relay, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	406
032 - Airbag systems	407-416
1. Airbag systems	407
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	408
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	409
4. Onboard supply control unit	410
5. X-contact relief relay, Onboard supply control unit	411
6. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Driver side airbag igniter	412
7. Airbag control unit, Front passenger side airbag deactivated warning lamp	413
8. Airbag control unit	414
9. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag igniter 1, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	415
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Airbag warning lamp	416
033 - Anti-lock brake system (ABS)	417-427
1. Anti-lock brake system (ABS)	417
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	418
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	419
4. Onboard supply control unit	420
5. Brake light switch, Brake fluid level warning contact, Onboard supply control unit	421
6. X-contact relief relay, Onboard supply control unit	422
7. Onboard supply control unit	423
8. ABS control unit, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve	424
9. ABS control unit, ABS solenoid valve relay, Front right ABS inlet valve, Rear right ABS inlet valve	425
10. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, ABS return flow pump relay, Rear left ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve	426
11. Handbrake warning switch, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp, Brake system warning lamp	427
034 - Fog light and rear fog light	428-443
1. Fog light and rear fog light	428
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	429
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	430
4. Onboard supply control unit	431

5. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	432
6. Onboard supply control unit, Rear left fog light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left brake and tail light bulb	433
7. Onboard supply control unit	434
8. Front and rear fog light switch, Fog light relay, Onboard supply control unit, Front and rear fog light switch illumination bulb	435
9. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	436
10. Onboard supply control unit, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right brake and tail light bulb	437
11. Onboard supply control unit, Rear left fog light bulb	438
12. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	439
13. Left fog light bulb, Right fog light bulb, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb	440
14. Onboard supply control unit	441
15. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	442
16. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	443
035 - Fog light and rear fog light	444-458
1. Fog light and rear fog light	444
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	445
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	446
4. Onboard supply control unit	447
5. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	448
6. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Rear left fog light bulb, Rear left turn signal bulb, Left reversing light bulb, Left brake and tail light bulb	449
7. Onboard supply control unit	450
8. Front and rear fog light switch, Fog light relay, Onboard supply control unit, Front and rear fog light switch illumination bulb	451
9. Headlight main beam relay, X-contact relief relay, Dipped beam relay, Onboard supply control unit	452
10. Onboard supply control unit, Right tail light bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb	453
11. Light switch, Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Horn plate, Horn activation contact ring, Onboard supply control unit	454
12. Fog light relay, Left main beam headlight and fog light bulb, Right main beam headlight and fog light bulb	455
13. Onboard supply control unit	456
14. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	457
15. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	458
036 - Window wash/wipe system and heated rear window	459-471
1. Window wash/wipe system and heated rear window	459
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	460
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	461
4. Onboard supply control unit	462
5. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	463
6. Multifunction display call-up button, Heated rear window button, Onboard supply control unit	464
7. Onboard supply control unit	465
8. Intermittent wiper switch, Rear wiper switch, Multifunction display call-up button, Onboard supply control unit	466
9. Intermittent wiper switch, Onboard supply control unit	467
10. Onboard supply control unit, Windscreen wiper motor	468
11. X-contact relief relay, Onboard supply control unit	469
12. Heated rear window button, Onboard supply control unit	470
13. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	471
037 - Dual headlight	472-482
1. Dual headlight	472
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	473
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	474
4. Onboard supply control unit	475



5. Onboard supply control unit, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb	476
6. Onboard supply control unit, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	477
7. Light switch, Turn signal switch, Horn plate, Horn activation contact ring, Onboard supply control unit	478
8. Headlight main beam relay, Dipped beam relay, Onboard supply control unit	479
9. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	480
10. Onboard supply control unit	481
11. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Left turn signal warning lamp, Right turn signal warning lamp	482
038 - Electric windows, rear vent windows	483-491
1. Electric windows, rear vent windows	483
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	484
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	485
4. Onboard supply control unit	486
5. Front left window regulator switch, Front right window regulator switch in driver door, Window regulator switch in front passenger door, Central control unit for window regulators, Driver side window regulator motor, Front passenger side window regulator motor	487
6. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Central control unit for window regulators, Window regulator switch illumination bulb, Rear left window regulator motor, Rear right window regulator motor	488
7. Rear window regulator isolation switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Central control unit for window regulators, Window regulator switch illumination bulb, Rear window regulator isolation switch illumination bulb	489
8. Onboard supply control unit	490
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	491
039 - Parking aid (PDC)	492-501
1. Parking aid (PDC)	492
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	493
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	494
4. Onboard supply control unit	495
5. Rear centre right parking aid sender, Rear right parking aid sender, Rear parking aid warning buzzer, Parking aid control unit, Onboard supply control unit	496
6. Rear left parking aid sender, Parking aid control unit, Onboard supply control unit	497
7. Parking aid control unit, Onboard supply control unit	498
8. Rear centre left parking aid sender, Parking aid control unit, Onboard supply control unit	499
9. Reversing light switch, Onboard supply control unit	500
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	501
040 - Automated manual gearbox , CCRA,CFZA,CNXA,CWSA	502-517
1. Automated manual gearbox , CCRA,CFZA,CNXA,CWSA	502
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	503
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	504
4. Onboard supply control unit	505
5. Gearbox hydraulic pump relay, Automated manual gearbox control unit, Onboard supply control unit, Hydraulic pump for gearbox	506
6. Automated manual gearbox control unit, Onboard supply control unit, Clutch actuator valve, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3	507
7. Gearbox input speed sender, Clutch position sender, Gear detection sensor, Automated manual gearbox control unit, Onboard supply control unit	508
8. Ambient temperature sensor, Gearbox hydraulic pressure sender, Sensor 2 for gear detection, Automated manual gearbox control unit, Onboard supply control unit	509
9. Brake light switch, Driver door contact switch, Handbrake warning switch, Automated manual gearbox control unit, Onboard supply control unit	510
10. Onboard supply control unit, Selector lever sensors control unit	511
11. Starter motor relay, X contact relief relay 2, Terminal 15 relief relay, Onboard supply control unit	512
12. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit	513
13. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down. Multifunction buttons on left in steering wheel.	514

Multifunction buttons on right in steering wheel, Onboard supply control unit	
14. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit	515
15. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Onboard supply control unit	516
16. Rev. counter, Speedometer, Control unit in dash panel insert, Starter motor relay 2, Dash panel insert, Alternator warning lamp, Malfunction warning lamp	517
041 - Multifunction steering wheel	518-527
1. Multifunction steering wheel	518
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	519
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	520
4. Onboard supply control unit	521
5. Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Driver side airbag igniter	522
6. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	523
7. Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate, Driver side airbag igniter	524
8. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	525
9. Onboard supply control unit	526
10. Rev. counter, Speedometer, Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	527
042 - Coming home	528-541
1. Coming home	528
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	529
3. Ignition/starter switch, Reversing light switch, Onboard supply control unit, Terminal 30 wiring junction	530
4. Onboard supply control unit	531
5. Onboard supply control unit, Left side light bulb, Right side light bulb	532
6. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	533
7. Onboard supply control unit, Right tail light bulb, Front right turn signal bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right brake and tail light bulb	534
8. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Right reversing light bulb	535
9. Onboard supply control unit, Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	536
10. X-contact relief relay, Onboard supply control unit, Left reversing light bulb, Left brake and tail light bulb	537
11. Headlight dipper and flasher switch, Onboard supply control unit, Left headlight twin filament bulb, Right headlight twin filament bulb	538
12. Headlight main beam relay, Dipped beam relay, Onboard supply control unit, Number plate light	539
13. Onboard supply control unit	540
14. Rev. counter, Speedometer, Control unit in dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	541
043 - System for lowering passenger side mirror	542-550
1. System for lowering passenger side mirror	542
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	543
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	544
4. Onboard supply control unit	545
5. Control unit for lowering passenger side mirror	546
6. Reversing light switch, Onboard supply control unit, Control unit for lowering passenger side mirror	547
7. Mirror adjustment changeover switch, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor	548
8. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2, Front passenger side mirror adjustment motor	549
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	550
044 - Onboard supply control unit . (BFM)	551-564

1. Onboard supply control unit , (BFM)	551
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	552
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	553
4. Onboard supply control unit	554
5. Onboard supply control unit	555
6. Onboard supply control unit	556
7. Onboard supply control unit	557
8. Onboard supply control unit, Windscreen wiper motor	558
9. Onboard supply control unit	559
10. Onboard supply control unit	560
11. Onboard supply control unit	561
12. Onboard supply control unit	562
13. Onboard supply control unit	563
14. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp	564
045 - Onboard supply control unit , (BCM)	565-580
1. Onboard supply control unit , (BCM)	565
2. Voltage regulator, Onboard supply control unit	566
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	567
4. Onboard supply control unit	568
5. Onboard supply control unit	569
6. Onboard supply control unit	570
7. Onboard supply control unit	571
8. Onboard supply control unit	572
9. Onboard supply control unit	573
10. Onboard supply control unit	574
11. Onboard supply control unit	575
12. Onboard supply control unit	576
13. Onboard supply control unit	577
14. Onboard supply control unit	578
15. Onboard supply control unit	579
16. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp	580
046 - Central locking	581-597
1. Central locking	581
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	582
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	583
4. Onboard supply control unit	584
5. Anti-theft alarm ultrasonic sensor, Anti-theft alarm system horn, Onboard supply control unit, Alarm horn relay	585
6. Driver door contact switch, Front passenger door contact switch, Rear left door contact switch, Rear right door contact switch, Onboard supply control unit	586
7. Driver side interior locking switch, Driver door power latching system contact switch, Onboard supply control unit, Interior lock switch illumination bulb, Driver door power latching motor	587
8. Onboard supply control unit, Front passenger door power latching motor, Rear left power latching motor, Rear right power latching motor	588
9. Rear lid contact switch, Onboard supply control unit, Luggage compartment light	589
10. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	590
11. Rear lid release switch, Front passenger door power latching system contact switch, Onboard supply control unit, Front passenger door power latching motor	591
12. Onboard supply control unit, Front interior light, Rear left reading light, Rear right reading light, Front passenger reading light, Driver side reading light	592
13. Onboard supply control unit, Rear lid release motor	593
14. Anti-theft alarm and vermin repellent system contact switch, Onboard supply control unit	594
15. Onboard supply control unit	595
16. Onboard supply control unit	596
17. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Alarm system warning lamp	597
047 - Light switch	598-609
1. Light switch	598
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	599
3. Ignition/starter switch. Onboard supply control unit. Terminal 30 wiring junction	600

4. Onboard supply control unit	601
5. Onboard supply control unit	602
6. Light switch, Onboard supply control unit	603
7. Airbag coil connector and return ring with slip ring, Onboard supply control unit, Light switch illumination bulb	604
8. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Multifunction display call-up button, Onboard supply control unit	605
9. Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit	606
10. Turn signal switch, Headlight dipper and flasher switch, Steering angle sender, Onboard supply control unit	607
11. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	608
12. Multifunction display call-up button, Heated rear window button, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp	609
048 - 1.6l engine , CCRA	610-626
1. 1.6l engine , CCRA	610
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	611
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	612
4. Onboard supply control unit	613
5. Onboard supply control unit	614
6. Onboard supply control unit	615
7. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Voltage supply relay 1	616
8. Accelerator position sender, Accelerator position sender 2, Engine control unit, Fuel pump for cold start	617
9. Radiator fan 2nd speed relay, Engine control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	618
10. Fuel pump relay, Cold start device relay, X-contact relief relay, Fresh air blower and radiator fan relay, Engine control unit	619
11. Brake light switch, Clutch pedal switch, Engine control unit	620
12. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	621
13. Engine control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	622
14. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	623
15. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	624
16. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	625
17. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	626
049 - 1.6l engine , CFZA	627-643
1. 1.6l engine , CFZA	627
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	628
3. Ignition/starter switch, Onboard supply control unit	629
4. Onboard supply control unit	630
5. Onboard supply control unit	631
6. Onboard supply control unit	632
7. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Voltage supply relay 1	633
8. Accelerator position sender, Accelerator position sender 2, Fuel pump relay, Engine control unit	634
9. Radiator fan 2nd speed relay, Engine control unit, Air conditioning system magnetic clutch, Radiator fan series resistor, Radiator fan	635
10. Cruise control system switch, Cruise control system (CCS) SET button, X-contact relief relay, Fresh air blower and radiator fan relay, Engine control unit	636
11. Brake light switch, Clutch pedal switch, Engine control unit	637
12. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	638
13. Engine control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	639
14. Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	640
15. Engine speed sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	641
16. Handbrake warning switch. Fuel gauge sender. Fuel system pressurisation pump. Dash panel insert.	642



Oil pressure warning lamp, Malfunction warning lamp, Electronic power control fault lamp	
17. Coolant temperature gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	643
050 - 1.6l engine , CWSA	644-661
1. 1.6l engine , CWSA	644
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	645
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	646
4. Onboard supply control unit	647
5. X-contact relief relay, Onboard supply control unit	648
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	649
7. Coolant temperature sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	650
8. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plugs	651
9. Accelerator position sender, Accelerator position sender 2, Engine control unit	652
10. Engine speed sender, Lambda probe, Lambda probe after catalytic converter, Engine control unit	653
11. Cruise control system switch, Cruise control system (CCS) SET button, Engine control unit	654
12. Fuel pump relay, Radiator fan 2nd speed relay, Engine control unit, Voltage supply relay 1	655
13. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	656
14. Clutch pedal switch, Pressure sensor, Fresh air blower and radiator fan relay, Engine control unit, Radiator fan series resistor, Radiator fan	657
15. Brake light switch, Knock sensor 1, Engine control unit	658
16. Fuel gauge sender, Fuel system pressurisation pump	659
17. Fuel gauge, Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Coolant temperature warning lamp (too cold), Electronic power control fault lamp	660
18. Handbrake warning switch, Oil pressure switch, Brake fluid level warning contact, Speedometer, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	661
051 - 1.6l engine , CNXA	662-680
1. 1.6l engine , CNXA	662
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	663
3. Ignition/starter switch, Onboard supply control unit, Terminal 30 wiring junction	664
4. Onboard supply control unit	665
5. X-contact relief relay, Onboard supply control unit	666
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	667
7. Coolant temperature sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	668
8. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plugs	669
9. Accelerator position sender, Accelerator position sender 2, Engine control unit	670
10. Engine speed sender, Lambda probe, Lambda probe after catalytic converter, Engine control unit	671
11. Cruise control system switch, Cruise control system (CCS) SET button, Engine control unit	672
12. Fuel pump relay, Radiator fan 2nd speed relay, Engine control unit, Voltage supply relay 1	673
13. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	674
14. Clutch pedal switch, Pressure sensor, Fresh air blower and radiator fan relay, Engine control unit, Radiator fan series resistor, Radiator fan	675
15. Brake light switch, Knock sensor 1, Engine control unit	676
16. Glow plug relay, Glow plug activation control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3, Fuel preheating element 4	677
17. Fuel gauge sender, Fuel system pressurisation pump	678
18. Fuel gauge, Rev. counter, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Coolant temperature warning lamp (too cold), Electronic power control fault lamp	679
19. Coolant temperature gauge, Speedometer, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Reserve fuel warning lamp, Brake system warning lamp, Malfunction warning lamp	680
052 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , CNXA,CWSA	681-689
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , CNXA,CWSA	681
2. Battery, Starter, Alternator, Voltage regulator	682
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	683
4. Onboard supply control unit	684

5. Brake light switch, Front left speed sensor, ABS control unit, ABS solenoid valve relay, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve	685
6. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, ABS control unit, Rear right ABS inlet valve, Rear left ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve	686
7. Button for TCS and electronic stabilisation program, Driving program button, ABS control unit, ABS return flow pump relay, ABS hydraulic pump	687
8. Steering angle sender, Lateral acceleration sender, Yaw rate sender, Longitudinal acceleration sender, ABS control unit	688
9. Handbrake warning switch, Brake fluid level warning contact, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp, Brake system warning lamp, Warning lamp for electronic stabilisation program and TCS	689
053 - Preparation for radio	690-698
1. Preparation for radio	690
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	691
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit, Terminal 30 wiring junction	692
4. Onboard supply control unit	693
5. Onboard supply control unit	694
6. Onboard supply control unit, Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	695
7. Onboard supply control unit, Front left treble loudspeaker, Front left bass loudspeaker	696
8. Onboard supply control unit, Aerial, Rear left bass loudspeaker, Aerial amplifier	697
9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	698
801 - -Fitting Locations - Earth points - 3	699-705
1. Earth Points	699-705
1.1 Engine compartment earth points	699-700
1.2 Vehicle interior earth points	701-702
1.3 Earth points in the rear vehicle area	703-705
802 - -Fitting Locations: Fuses - 3	706-713
1. Fuses	706-713
1.1 Fuse locations	706
1.2 Battery fuse holder -S-	707
1.2.1 Battery fuse holder, as of May 2012	707
1.3 Fuse holder -SA-	708-713
1.3.1 Fuse holder -SA-, as of May, 2012	709-713
803 - -Fitting Locations: Relays - 3	714-717
1. Relays	714-717
1.1 Relay plate to the left, behind the dash panel	714-715
1.1.1 Relay description:	714-715
1.2 Relay to the right, behind the dash panel	716-717
1.2.1 Relay description:	716-717
804 - -Fitting Locations: Control Units - 3	718-742
1. Control units	718-742
1.1 Instrument cluster indicator control unit -J285-	719-720
1.1.2 Connector description:	719-720
1.2 Onboard network control unit -J519-	721-722
1.2.2 Connector description:	721-722
1.3 Engine control unit -J623-	723-724
1.3.2 Connector description:	723-724
1.4 Engine control unit -J623-	725-726
1.4.2 Connector description:	725-726
1.5 Engine control unit -J623-	727-728
1.5.2 Connector description:	727-728
1.6 ABS control unit -J104-	729-730
1.6.2 Connector description:	729-730
1.7 Airbag control unit -J234-	731-732
1.7.2 Connector description:	731-732
1.8 Air conditioning control unit -J301-	733-734
1.8.2 Connector description:	733-734
1.9 Central control unit for window control -J1015-	735-736
1.9.2 Connector description:	735-736
1.10 Parking assist control unit -J446-	737-738
1.10.2 Connector description:	737-738

1.11 Automatic gearbox control unit -J217-	739-740
1.11.2 Connector description:	739-740
1.12 Selector lever sensors control unit -J587-	741-742
1.12.2 Connector description:	741-742