



## Contents

<b>27 - Starter, current supply, CCS</b> .....	<b>1</b>
<b>1 Battery</b> .....	<b>1</b>
1.1 Battery A - disconnect and connect .....	2
1.2 Battery A - remove and install .....	6
1.3 Battery A console - remove and install .....	9
1.4 Tightening torques - battery .....	11
<b>2 Starting motor</b> .....	<b>12</b>
2.1 Starter B - remove and install .....	12
2.2 Starter B - (Manufacturer Valeo) - disassemble and assemble .....	14
2.3 Starter B - (Manufacturer Bosch) - disassemble and assemble .....	18
2.4 Tightening torques - Starter .....	30
<b>3 Alternator</b> .....	<b>31</b>
3.1 Generator (Alternator) C - fastening cable (B+) .....	31
3.2 Generator (Alternator) C - check Poly-V belt .....	32
3.3 Generator (Alternator) C engines 1.0l and 1.6l - assembly general view .....	33
3.4 Generator (Alternator) C engines 1.0l and 1.6l - remove and install .....	35
3.5 Generator (Alternator) C - replace Poly-V belt pulley .....	38
3.6 Voltage regulator C1 (Manufacturer Bosch) - disassemble and assemble .....	39
3.7 Voltage regulator C1 (Manufacturer Valeo) - disassemble and assemble .....	40
3.8 Tightening torques - Alternator .....	42
<b>90 - Gauges, instruments</b> .....	<b>43</b>
<b>1 Combined instrument</b> .....	<b>43</b>
1.1 Locating defects and indicating faults .....	43
1.2 Combined instrument K - replace .....	44
1.3 Combined instrument K - remove and install .....	45
1.4 Combined instrument K - description of rear part .....	47
1.5 Combined instrument K - connector pinout .....	47
1.6 Combined instrument K - control light symbols .....	48
<b>2 Indication of Service Interval</b> .....	<b>51</b>
2.1 Reset service interval indicator .....	51
<b>3 12 Volt socket</b> .....	<b>52</b>
3.1 12 volt socket U5 - assembly overview .....	52
3.2 12 volt socket U5 - remove and install .....	52
3.3 Electric socket 2 - 12V U18 (Saveiro Cross) - assembly overview .....	55
3.4 Electric socket 2 - 12V U18 (Saveiro Cross) - remove and install .....	56
3.5 Electric socket 2 - 12V U18 (Saveiro Cross) - replace .....	57
<b>92 - Windscreen wash/wipe system</b> .....	<b>60</b>
<b>1 Windscreen wiper system</b> .....	<b>60</b>
1.1 Windscreen wiper system (version 1) - assembly overview .....	62
1.2 Windscreen wiper blade (version 1) - remove and install .....	62
1.3 Windscreen wiper system (version 2) - assembly overview .....	63
1.4 Windscreen wiper blade (version 2) - remove and install .....	63
1.5 Windscreen wiper blade and arm set - remove and install .....	64
1.6 Windscreen wiper mechanism - remove and install .....	66
1.7 Windscreen wiper motor V - disassemble and assemble .....	67
1.8 Mount (bushing) for the mechanism support - remove and install .....	68
1.9 Windscreen wiper blade resting position (version 1) - adjust .....	69
1.10 Windscreen wiper blade resting position (version 2) - adjust .....	70
1.11 Blade application angle on windscreen - adjust .....	70
1.12 Tightening torques - Windscreen wiper system .....	71



<b>2</b>	<b>Windscreen washer system</b>	<b>72</b>
2.1	Windscreen washer system - assembly overview	73
2.2	Reservoir for the windscreen and rear window washer system - remove and install	73
2.3	Windscreen washer pump V5 and/or Rear window washer pump V13 - remove and install	74
2.4	Windscreen washer system spray nozzles - replace	75
2.5	Windscreen washer system spray nozzles - adjust	75
<b>3</b>	<b>Rear window wiper system</b>	<b>77</b>
3.1	Rear window wiper and washer system - assembly overview	78
3.2	Rear window wiper arm - remove and install	79
3.3	Rear window wiper motor V12 - remove and install	79
3.4	Rear window wiper blade resting position - adjust	80
3.5	Rear window wiper blade - remove and install	80
3.6	Tightening torques - rear window wiper system	80
<b>4</b>	<b>Rear window washer system</b>	<b>82</b>
4.1	Rear window washer system - assembly overview	82
4.2	Rear window washer system spray nozzle - replace	83
4.3	Rear window washer system spray nozzle - adjust	83
<b>94</b>	<b>Lights, bulbs, switches - exterior</b>	<b>85</b>
<b>1</b>	<b>Main headlights</b>	<b>85</b>
1.1	Main headlights - assembly overview	86
1.2	Main Headlights - remove and install	87
1.3	Main headlight lamps (single) - replace	87
1.4	Main headlight lamps (twin) - replace	89
<b>2</b>	<b>Fog lights</b>	<b>91</b>
2.1	Fog lights - remove and install	91
2.2	Auxiliary headlights (Saveiro Cross and Gol Rallye) - assembly overview	93
2.3	Auxiliary headlights (Saveiro Cross and Gol Rallye) - remove and install	93
<b>3</b>	<b>Headlights - check adjustment</b>	<b>96</b>
3.1	Check headlight adjustment (with the new inspection display without 15° adjustment line).	97
3.2	Headlights - adjust	98
<b>4</b>	<b>Side indicator lights</b>	<b>101</b>
4.1	Side indicator lights incorporated to external rear-view mirrors	101
<b>5</b>	<b>Tail lights</b>	<b>102</b>
5.1	Tail lights (Gol) - assembly overview	103
5.2	Tail lights (Voyage) - assembly overview	105
5.3	Tail lights (Saveiro) - assembly overview	107
<b>6</b>	<b>License plate light</b>	<b>110</b>
6.1	License plate light - remove and install	110
6.2	License plate light X - replace the lamp	111
<b>7</b>	<b>Additional brake light</b>	<b>112</b>
7.1	Auxiliary brake light (Gol) - remove and install	112
7.2	Auxiliary brake light (Voyage) - remove and install	113
7.3	Auxiliary brake light (Saveiro) - remove and install	113
<b>8</b>	<b>Switch set</b>	<b>115</b>
8.1	Light switch E1 / Flashing/turn light switch E2 and Windscreen wiper timer switch (intermittent operation) E22 - remove and install	115
8.2	Connectors pinout in the switch set for turn lights and window wipers/washers	116
<b>9</b>	<b>Steering lock set</b>	<b>117</b>
9.1	Steering lock set - remove and install	117
<b>10</b>	<b>Ignition/starter switch and key cylinder</b>	<b>119</b>
10.1	Key cylinder - remove and install	119



10.2	Ignition switch D - remove and install	121
10.3	Ignition switch D - pinout	121
<b>11</b>	<b>Auxiliary parking system</b>	<b>122</b>
11.1	Locating defects and indicating faults	122
11.2	Auxiliary parking system - assembly general view	123
11.3	Control unit for parking aid J446 - remove and install	125
11.4	Warning buzzer for rear parking aid H15 - remove and install	126
11.5	Park Assist steering sensor (Gol) - remove and install	126
11.6	Park Assist steering sensor (Voyage) - remove and install	128
11.7	Park Assist steering sensor (Saveiro) - remove and install	129
<b>96</b>	<b>- Lights, bulbs, switches - interior</b>	<b>132</b>
<b>1</b>	<b>Internal lights and switches</b>	<b>132</b>
1.1	Switches on the center dash panel frame - remove and install	132
1.2	Warning light switch E3 - removal and install	133
1.3	Left front power window drive switch E40 and/or Right front power window drive switch E41 - remove and install	134
1.4	Switch for int. locking, driver side E150	134
1.5	Rear-view mirror adjustment switch E43 with Switch for rear-view mirror adjustment E48 - removal and installation	135
1.6	Front internal lighting switch (door contact) E459 - remove and install	135
1.7	Luggage compartment lighting switch F5 - remove and install	136
1.8	Internal lighting fixture - remove and install	136
1.9	Internal front light W1 - replace	137
1.10	Left centre reading light W39 and/or Right centre reading light W40 - replace	138
1.11	Make-up mirror lighting - remove and install	139
1.12	Make-up mirror lighting lamp L31 - replace	140
1.13	Luggage compartment lighting - remove and install	140
1.14	Luggage Compartment lighting fixture W3 - replace	141
1.15	Internal rear light W43 - remove and install	141
<b>2</b>	<b>Horn</b>	<b>144</b>
2.1	Treble tone horn H2 - remove and install	144
<b>3</b>	<b>Immobilizer</b>	<b>146</b>
3.1	Immobilizer control unit J362 - replace	146
3.2	Immobilizer reading coil D2 - remove and install	146
3.3	Ignition key - variable code transponder	146
3.4	Ignition key - adapt to immobilizer	146
3.5	Ignition key - replace battery	146
<b>4</b>	<b>Alarm System</b>	<b>147</b>
4.1	Locating defects and indicating faults	147
4.2	Anti-theft alarm system - activate and deactivate	147
4.3	Ultra-sound sensor for alarm system G209 - remove and install	148
4.4	Alarm system horn H8 - remove and install	148
<b>97</b>	<b>- Wiring</b>	<b>150</b>
<b>1</b>	<b>Fuse and relay support</b>	<b>150</b>
1.1	Fuse and relay support - remove and install	150
<b>2</b>	<b>Boot cover of engine compartment</b>	<b>151</b>
2.1	Boot cover on engine compartment partition panel - remove and install	151
<b>3</b>	<b>Fuse box</b>	<b>153</b>
3.1	Fuse box - remove and install	153
<b>4</b>	<b>Control units</b>	<b>159</b>
4.1	Central control unit for the convenience system J393	159
4.2	Interactive System control unit J879 - remove and install	159
4.3	Control unit of lights with windscreen wiper functions J917	161