



Contents

00 - Technical data	1
1 Assessment of crashed vehicles	1
2 General recommendations	3
3 Technical data	4
3.1 Chassis	4
3.2 Steering	4
40 - Front suspension	5
1 Assessment of crashed vehicles	5
2 Front suspension - raise the front axle with vehicle unloaded	6
2.1 Raise the front axle with vehicle unloaded (empty)	6
3 Front suspension - repair	9
3.1 Front suspension - general overview of assembly	9
4 I - Auxiliary frame (assembly mounting) , anti-roll bar, wishbones - repair	11
4.1 Auxiliary frame (assembly mounting), anti-roll bar, wishbones, - assembly overview	11
4.2 Thread in longitudinal member - repair	13
4.3 Swivel joint - check for clearance	14
4.4 Swivel guide - remove and install	15
4.5 Swivel guides - installation position	18
4.6 Wishbone (transversal) - remove and install	18
4.7 Wishbone - replace front metal-rubber bearing	22
4.8 Wishbone - replace the rear metal-rubber bearing	24
4.9 Auxiliary frame (assembly mounting) - remove and install	26
4.10 Auxiliary frame (assembly mounting) - position	29
4.11 Anti-roll bar - remove and install	32
5 II - Wheel roller bearings - repair	35
5.1 Wheel roller bearings - general overview of assembly	35
5.2 Hub and wheel bearing - remove and install	37
6 III - Front suspension column - repair	46
6.1 Front suspension column - general overview of assembly	46
6.2 Suspension strut - remove and install	47
6.3 Front suspension spring - remove and install	52
7 Constant velocity drive shaft - remove and install	54
7.1 Fastening nut (dodecagonal) of the drive shaft - loosen and tighten	54
7.2 Constant velocity drive shaft - remove and install	56
8 IV - Drive shaft with constant velocity joint - repair	63
8.1 Drive shaft with constant velocity joint - assembly overview	63
8.2 Drive shaft with constant velocity joint - repair	65
42 - Rear suspension	69
1 Rear suspension - raise the rear axle with the vehicle unloaded	69
1.1 Lift the rear axle with the vehicle unloaded (empty)	69
2 Rear suspension (Gol and Voyage) - repair	72
2.1 Rear suspension (Gol and Voyage) - assembly overview	72
2.2 Shock absorber (Gol and Voyage) - remove and install	74
2.3 Rear wheel roller bearing (Gol and Voyage) - check and adjust clearance	77
2.4 Inner/outer rear wheel roller bearing (Gol and Voyage) - remove and install	80
2.5 Rear axle (Gol and Voyage) - remove and install	83
2.6 Rear wheel inner roller bearing sealant (Gol and Voyage) - remove and install	86
2.7 Coil spring (Gol and Voyage) - remove and install	87
2.8 Split metal/rubber bearing on the rear axle (Gol and Voyage) - remove and install	90



2.9	Shaft end - check	96
2.10	Rear suspension (Gol and Voyage) - remove and install	97
3	Rear suspension (Saveiro)- repair	102
3.1	Rear suspension (Saveiro) - assembly overview	102
3.2	Shock absorber (Saveiro) - assembly overview	105
3.3	Shock absorber (Saveiro) - remove and install	106
3.4	Wheel roller bearing (Saveiro) - assembly overview	108
3.5	Wheel roller bearing/hub unit (Saveiro) - remove and install	109
3.6	Rear axle (Saveiro) - remove and install	112
3.7	Coil spring (Saveiro) - remove and install	116
3.8	Metal-rubber bearing - remove and install	118
44	Vehicle wheels, tyres, measurement	123
1	Wheel bolts	123
1.1	Wheel bolts - tightening torque	123
2	Vehicle alignment	124
2.1	Generalities	124
2.2	Checking conditions:	125
2.3	Preparation for measurement	125
2.4	Sequence for vehicle alignment	126
2.5	Nominal values for vehicle alignment	126
2.6	Vehicles in "zero" transverse tilting position	128
2.7	Camber on front axle - adjust	129
2.8	Camber on rear axle - adjust	129
2.9	Convergence on front axle - adjust	129
2.10	Convergence on rear axle - adjust	130
2.11	Left and right-hand steering - check	130
48	Steering	132
1	Steering wheel	132
1.1	Horn button H - remove and install	132
1.2	Steering wheel - assembly overview	134
1.3	Steering wheel - remove and install	134
2	Fixed steering column - repair	137
2.1	Fixed steering wheel support and column - assembly overview	137
2.2	Fixed steering column - remove and install	138
3	Adjustable steering column - repair	144
3.1	Adjustable steering support and column - assembly overview	144
3.2	Adjustable steering column - remove and install	144
4	Mechanical steering - repair	151
4.1	Mechanical steering wheel - assembly overview	151
4.2	Mechanical steering box - remove and install	152
4.3	Mechanical steering box - disassemble and assemble	155
5	Power steering box - repair	160
5.1	Power steering - assembly overview	160
5.2	Power steering box - remove and install	161
5.3	Power steering box - disassemble and assemble	165
6	Hydraulic pump, compensation reservoir, hydraulic pipes (power steering)	170
6.1	Hydraulic pump with hydraulic tubes - assembly overview	170
6.2	Hydraulic pump - assembly overview	173
6.3	Hydraulic pump - remove and install	173
6.4	Hydraulic pump operating pressure - check	177
6.5	Power steering system oil - replenish	182