



Contents

00 - Technical Data	1
1 gearbox identification	1
1.1 Location on gearbox	1
1.2 Prefix, correspondence, gear ratio, filling volume	1
2 gearbox assembly scheme	3
2.1 Nomenclature	3
2.2 Gear ratios	4
3 Gear ratio calculation „i“	5
4 General repair instructions	6
4.1 gearbox	6
4.2 Gaskets and retainers	6
4.3 Screws, nuts	7
4.4 Roller Bearings	7
4.5 Adjustment shims	7
4.6 Synchronizer rings	8
30 - Clutch - control system	9
1 Clutch drive mechanism - repair	9
1.1 Hydraulic system - assembly overview	10
1.2 Clutch slave cylinder - remove and install	11
2 Clutch drive mechanism - repair	13
3 Clutch - repair	15
34 - Drive, housing	18
1 Diagnosis, measurement and information system	18
1.1 Connect	18
2 Electronic components and installation locations	19
2.1 "Tiptronic" upshift switch on the steering wheel E438 and/or "Tiptronic" downshift switch on the steering wheel E439	20
2.2 Gear identification sensor 2 G616	21
2.3 Gearbox input speed sensor G182	22
2.4 Gear identification sensor G604	23
2.5 Diagnosis socket	24
2.6 Selected gear indicator Y6	25
2.7 Automatic gearbox control unit J217	25
3 Selector lever	26
3.1 Selector lever - assembly overview	26
3.2 Selector lever handle - remove and install	27
3.3 Upper selector lever cover - remove and install	28
3.4 Selector lever - remove and install	29
3.5 Lower selector lever cover - remove and install	30
3.6 Selection lever boot - adjust	31
3.7 Selector lever operating positions - check	32
4 Gear selection mechanism - remove and install	33
4.1 Gear selection mechanism - assembly overview	33
4.2 Gear selection mechanism - remove and install	34
5 Gear selection mechanism - disassemble and assemble	42
5.1 Gear selection mechanism - assembly overview	43
5.2 Valve set - assembly overview	47
5.3 Valve set - remove and install	47
5.4 High-pressure slave cylinder - replace	48
5.5 Pressure tube - replace	49



5.6	Maximum pressure valve - replace	49
5.7	Gearbox hydraulic pressure sensor G270 - replace	49
5.8	Electric motor for the Hydraulic gearbox pump V387 - remove and install	50
5.9	Gearbox hydraulic pressure pump V387 - remove and install	51
5.10	Hydraulic oil reservoir - remove and install	52
5.11	Return tube - replace	52
5.12	Wiring harness - remove and install	53
5.13	Connector bracket (wiring harness) - remove and install	54
5.14	Tightening torques	55
6	gearbox - remove and install	56
6.1	Removal	57
6.2	Installation	62
6.3	Tightening torques	65
7	Gear oil level - check and replenish	67
7.1	Oil level - check	67
7.2	Oil level - replenish	67
8	Oil level for the gear selection mechanism - check and replenish	68
8.1	Oil level - check	68
8.2	Oil level - replenish	69
9	gearbox - disassemble and assemble	70
9.1	gearbox - assembly overview	71
9.2	I - Gearbox housing cover and 5th gear	72
9.3	II - Clutch housing	73
9.4	III - Input shaft, planet pinion, differential, selection mechanism and selector forks	74
9.5	Input shaft, planet pinion, differential, selection mechanism and selector forks - disassemble and assemble	75
10	Gearbox and clutch housings - repair	83
11	Selector forks - disassemble and assemble	89
35	Gears and shafts	94
1	Input shaft - disassemble and assemble	94
2	Planet pinion - disassemble and assemble	105
39	gearbox shafts, differential	113
1	Retainer for the drive flange - replace	113
1.1	Left drive flange retainer (left side) - replace	113
1.2	Drive flange retainer (right side) - replace	116
2	Differential - repair	119
2.1	Differential - disassemble and assemble	119
2.2	Differential - adjust	127