



## Contents

<b>00 - Technical data</b>	<b>1</b>
1 <b>gearbox identification</b>	1
1.1    Location on gearbox	1
1.2    Prefix, correspondence, gear ratio, filling volume	2
2 <b>gearbox assembly scheme</b>	4
2.1    Nomenclature	4
2.2    Gear ratios	5
3 <b>Gear ratio calculation "i"</b>	6
4 <b>General repair instructions</b>	7
4.1    gearbox	7
4.2    Gaskets and retainers	7
4.3    Screws, nuts	8
4.4    Roller Bearings	8
4.5    Adjustment shims	8
4.6    Synchronizer rings	9
<b>30 - Clutch</b>	<b>10</b>
1 <b>Control system - repair</b>	10
1.1    I - Command pedals - assembly overview	10
1.2    Clutch pedal switch F36 - remove and install	12
1.3    Clutch pedal return spring - remove and install	13
1.4    Clutch pedal support - remove and install	15
1.5    Clutch pedal - remove install	18
1.6    II - Hydraulic system - assembly overview	20
1.7    Transmitting cylinder - clutch hydraulic drive - remove and install	21
1.8    Clutch slave cylinder - remove and install	23
1.9    Clutch system - bleed	24
2 <b>Clutch drive mechanism - repair</b>	26
3 <b>Clutch - repair</b>	28
<b>34 - Controls, housing</b>	<b>31</b>
1 <b>Shift mechanism - repair</b>	31
1.1    Shift mechanism - installation position	31
1.2    Shift mechanism - (version 1)	32
1.3    Shift mechanism - (version 2)	33
1.4    I - Drive cables	33
1.5    II - Handle and boot on the gear lever - assembly overview	39
1.6    Handle and boot on the gear lever - remove and install	39
1.7    III - Gear lever and mechanism - repair	41
1.8    Gearshift mechanism - remove and install	44
1.9    Gear selection mechanism - adjust	47
2 <b>gearbox - remove and install</b>	51
2.1    Removal	53
2.2    Installation	60
2.3    Tightening torques	65
3 <b>gearbox oil level - check and replenish</b>	67
4 <b>gearbox - disassemble and assemble</b>	69
4.1    gearbox - assembly overview	70
4.2    I - Gearbox housing cover and 5th gear	71
4.3    II - Clutch housing	72
4.4    III - Input shaft, planet pinion, differential, selection mechanism and selector forks	73



4.5	Input shaft, planet pinion, differential, selection mechanism and selector forks - disassemble and assemble .....	75
5	<b>Gearbox and clutch housings - repair .....</b>	<b>83</b>
6	Gear selection mechanism - disassemble and assemble .....	89
7	Selector forks - disassemble and assemble .....	92
<b>35</b>	<b>- Gears, shafts .....</b>	<b>97</b>
1	Input shaft - disassemble and assemble .....	97
2	Planet pinion - disassemble and assemble .....	108
<b>39</b>	<b>- Final drive - differential .....</b>	<b>116</b>
1	<b>Retainer for the drive flange - replace .....</b>	<b>116</b>
1.1	Left drive flange retainer (left side) - replace .....	116
1.2	Drive flange retainer (right side) - replace .....	119
2	<b>Differential - repair .....</b>	<b>122</b>
2.1	Differential - disassemble and assemble .....	122
2.2	Differential - adjust .....	130