

Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Brakes	1
45 - Anti-locking brake system	2
1 Safety precautions and general servicing information	2
1.1 Safety precautions and general servicing information	2
1.2 High- and low pressure test	3
2 Removing and installing components of ABS system on front axle	4
2.1 Removing and installing components of ABS system on front axle	4
2.2 Removing and installing speed sensor	6
2.3 Checking rotor	6
3 Removing and installing components of ABS system on rear axle, FWD models	7
3.1 Removing and installing components of ABS system on rear axle, FWD models	7
3.2 Removing and installing speed sensor	10
3.3 Checking rotor	11
4 Removing and installing components of ABS system on rear axle, 4WD models	12
4.1 Removing and installing components of ABS system on rear axle, 4WD models	12
4.2 Removing and installing speed sensor	14
4.3 Checking rotor	15
5 Anti-lock brake system (ABS)	15
5.1 Anti-lock brake system (ABS)	15
5.2 Hydraulic unit and brake pipes	16
5.3 Removing and installing ABS control unit	20
6 Anti-lock brake system (ABS) with electronic differential lock	21
6.1 Anti-lock brake system (ABS) with electronic differential lock	21
6.2 Hydraulic unit and brake pipes	22
7 Anti-lock brake system (ABS)	25
7.1 Anti-lock brake system (ABS)	25
7.2 ABS with electronic differential lock (ABS/EDL), ABS/EDL with traction control system (TCS)	25
7.3 Hydraulic unit and brake pipes	25
7.4 Removing and installing control unit for ABS/EDL or TCS	30
8 Bosch 5.0 Anti-lock brake system (ABS) as of MY '95 (chassis no. 4ASN ...)	31
8.1 Bosch 5.0 Anti-lock brake system (ABS) as of MY '95 (chassis no. 4ASN ...)	31
8.2 ABS with electronic differential lock (ABS/EDL), ABS/EDL with traction control system (TCS)	31
8.3 Hydraulic unit and brake pipes	32
8.4 Removing and installing control unit for ABS/EDL or TCS	39
46 - Brakes, Brake mechanics	40
1 Servicing front brakes	40
1.1 Servicing front brakes	40
1.2 Servicing Teves/Ate front brakes	40
1.3 Removing and installing brake pads	46
1.4 Servicing front brake, internal caliper disc brake	49
1.5 Removing and installing brake pads	52
1.6 Servicing front brakes, two-piston brake	55
1.7 Removing and installing brake pads	60
2 Servicing rear wheel brake (disc brake)	64
2.1 Servicing rear wheel brake (disc brake)	64
2.2 Removing and installing brake pads	68



2.3	Basic setting of rear wheel brake	70
2.4	Adjusting handbrake	71
3	Servicing rear wheel brake (drum brake)	73
3.1	Servicing rear wheel brake (drum brake)	73
3.2	Removing and installing rear brake	73
3.3	Resetting brake	76
3.4	Servicing rear brakes	77
3.5	Removing and installing brake shoes	80
3.6	Adjusting handbrake	81
4	Handbrake lever - exploded view	82
4.1	Handbrake lever - exploded view	82
4.2	Removing and installing handbrake lever	85
5	Assembly overview: Brake pedal	86
5.1	Assembly overview: Brake pedal	86
6	Assembly overview: Brake pedal, Audi S4/S6	92
6.1	Assembly overview: Brake pedal, Audi S4/S6	92
47 - Brakes, Brake hydraulics		98
1	Pressurised leak test	98
1.1	Pressurised leak test	98
2	Servicing Teves/Ate front brake calipers	99
2.1	Servicing Teves/Ate front brake calipers	99
2.2	Removing and installing piston for front brake caliper	102
3	Servicing front brake caliper, two-piston brake caliper	105
3.1	Servicing front brake caliper, two-piston brake caliper	105
3.2	Removing and installing piston for front brake caliper	108
4	Servicing rear brake caliper	110
4.1	Servicing rear brake caliper	110
4.2	Removing and installing rear brake caliper piston	114
5	Checking and adjusting brake pressure regulator	117
5.1	Checking and adjusting brake pressure regulator	117
5.2	Vehicles with front-wheel drive	117
5.3	Vehicles with four-wheel drive	118
6	Checking brake pressure reducer	119
6.1	Checking brake pressure reducer	119
7	Bleeding braking system, vehicles with and without ABS	121
7.1	Bleeding braking system, vehicles with and without ABS	121
7.2	Bleeding brake system with brake filling and bleeding appliance V.A.G 1869	121
7.3	Brake fluid: changing (every 24 months)	124
8	Assembly overview: Vacuum-type brake servo/brake master cylinder	127
8.1	Assembly overview: Vacuum-type brake servo/brake master cylinder	127
8.2	Removing and installing brake servo with brake master cylinder	135
9	Assembly overview: Hydraulic brake servo/brake master cylinder	137
9.1	Assembly overview: Hydraulic brake servo/brake master cylinder	137
10	Removing and installing pressure reservoir for hydraulic brake servo	143
10.1	Removing and installing pressure reservoir for hydraulic brake servo	143
10.2	Checking operating pressure of hydraulic brake servo system	148
10.3	Checking charge pressure of pressure reservoir	150
10.4	Checking pressure relief valve of pressure reservoir	150
10.5	Checking non-return valve of pressure reservoir	151