

## Contents

<b>44 - Wheels, tyres, vehicle geometry</b> .....	<b>1</b>
<b>1 Wheel/Tyre Guide - general information</b> .....	<b>1</b>
<b>2 How to use the Wheel/Tyre Guide</b> .....	<b>2</b>
2.1 Overview .....	2
2.2 General notes .....	2
2.3 Notes .....	3
2.4 Explanations on world regions .....	3
2.5 Definition of tyre package .....	4
2.6 Determining correct tyre package via version code .....	5
2.7 NEDC, WLTP and RDE .....	6
<b>3 Legal and technical requirements (documents)</b> .....	<b>8</b>
3.1 Legal requirements .....	8
3.2 Technical requirements .....	8
3.3 Load capacity depending on speed and winter tyres .....	9
3.4 Registration documents since 1 October 2005 .....	10
3.5 COC document (EC certificate of conformity) .....	11
3.6 EC type approval number, sales type and trade name .....	11
<b>4 Wheel change</b> .....	<b>12</b>
4.1 Fitting instructions .....	12
4.2 Corrosion protection for wheel centring seat .....	15
4.3 Fitting wheels .....	16
4.4 Position of anti-theft wheel bolts - steel wheels .....	18
<b>5 Tyre assembly</b> .....	<b>19</b>
5.1 Assembly overview - alloy wheel .....	19
5.2 Assembly overview - run-flat wheels with Audi PAX tyres .....	19
5.3 Pressing tyre off .....	19
5.4 Removing tyre sealant .....	20
5.5 Removing tyre .....	20
5.6 Bringing tyre up to assembly temperature .....	23
5.7 Fitting tyre .....	25
5.8 Match-mounting rim and tyre .....	30
5.9 Checking radial and lateral runout on wheel/tyre .....	31
5.10 Match-mounting wheel and tyre .....	34
5.11 Vibration control system VAS 6230 A .....	35
5.12 Balancing wheel .....	35
<b>6 Tyre Pressure Monitoring System</b> .....	<b>41</b>
6.1 System description - Tyre Pressure Monitoring System .....	41
6.2 Assembly overview - tyre pressure sensor .....	43
6.3 Removing and installing tyre pressure sensor .....	49
6.4 Removing and installing metal valve .....	53
<b>7 Wheel bolts</b> .....	<b>55</b>
7.1 Tightening wheel bolts correctly .....	55
7.2 Tightening torques for wheel bolts .....	56
7.3 Wheel bolts - versions .....	58
7.4 Anti-theft wheel bolt .....	59
7.5 Adapter sets for anti-theft wheel bolts .....	59
<b>8 Information on tyres</b> .....	<b>62</b>
8.1 Tyre requirements and tyre maintenance .....	62
8.2 Tyre markings .....	66
8.3 Markings on tyre sidewall - Audi PAX tyres .....	73
8.4 EU tyre label .....	73
8.5 Construction - belted radial tyre .....	78



8.6	Construction and markings - SST tyre, run-flat tyre	79
8.7	Construction - run-flat tyre with Seal Inside technology	80
8.8	Self supporting tyres (SST) with run-flat capability	82
8.9	Storing tyres	84
8.10	Tyre ageing	84
<b>9</b>	<b>Tyre sealant</b>	<b>86</b>
9.1	Disposal of sealant	86
<b>10</b>	<b>Information on wheel rims</b>	<b>87</b>
10.1	Construction - wheel rim	87
10.2	Identification	88
10.3	Composite wheels	89
10.4	Alloy wheels - care and maintenance	89
10.5	Alloy wheels - repairing	90
10.6	Removing and installing hub cover - alloy wheels with open threaded connection	90
10.7	Renewing trim elements	91
10.8	Removing and installing valve	98
<b>11</b>	<b>Problems with handling and driving characteristics</b>	<b>101</b>
11.1	Tyre noise	101
11.2	Vehicle pulls to one side	103
11.3	Rough running and vibration	108
11.4	Flat spots caused by storage and handling	110
<b>12</b>	<b>Evaluating tyres/tyre damage</b>	<b>112</b>
12.1	Flat spots caused by storage and handling	112
12.2	Undulations	112
12.3	Saw-tooth wear	113
12.4	Flat spots caused by hard braking	114
12.5	Swellings in tyre sidewall	115
12.6	Cuts	116
12.7	Damage caused by foreign objects	116
12.8	Torn tread	117
12.9	Tyre damage due to insufficient inflation pressure	117
12.10	Checking tyres	117
12.11	Damage occurring when fitting tyres	119
<b>13</b>	<b>Tyre wear</b>	<b>120</b>
13.1	Factors influencing tyre service life	120
13.2	Saw-tooth wear	121
13.3	Wear of high-speed tyres	121
13.4	Measuring tread depth	122
13.5	One-sided wear	122
13.6	Outer shoulder wear	125
13.7	Diagonal erosion	126
13.8	Wear in middle of tyre	126
13.9	Permissible differences in tread depth	127
<b>14</b>	<b>Assembly overviews</b>	<b>128</b>
14.1	Assembly overview - alloy wheel	128
14.2	Assembly overview - run-flat wheels with Audi PAX tyres	130
<b>15</b>	<b>Snow chains</b>	<b>133</b>
15.1	Fitting and using snow chains	133
<b>16</b>	<b>Standard/temporary spare wheels and recommended temporary spare tyres</b>	<b>134</b>
16.1	Notes on using temporary spare wheels	134
16.2	Spare wheel with warning sticker	135
16.3	Retrofitting standard/temporary spare wheel	135