

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Transmission layout	10
2.1 Transmission layout	10
3 Calculations	12
3.1 Calculations	12
3.2 Calculating transmission ratios "i"	12
4 General repair instructions	12
4.1 General repair instructions	12
30 - Clutch	16
1 Servicing clutch mechanism	16
1.1 Servicing clutch mechanism	16
1.2 Assembly overview - pedal cluster (LHD vehicles)	17
1.3 Assembly overview - pedal cluster (RHD vehicles)	24
1.4 Hydraulic system - general layout	31
1.5 Bleeding clutch system	34
2 Servicing clutch release mechanism	36
2.1 Servicing clutch release mechanism	36
3 Servicing clutch	40
3.1 Servicing clutch	40
34 - Controls, Housing	48
1 Servicing selector mechanism	48
1.1 Servicing selector mechanism	48
1.2 Removing and installing selector mechanism	53
1.3 Adjusting gear selector mechanism	53
1.4 Checking gear stick adjustment	54
2 Removing and installing gearbox	55
2.1 Removing and installing gearbox	55
2.2 Removing	55
2.3 Securing gearbox to repair stand	64
2.4 Transporting the gearbox	65
2.5 Installing	65
3 Checking oil level in gearbox	68
3.1 Checking oil level in gearbox	68
4 Dismantling and assembling gearbox	69
4.1 Dismantling and assembling gearbox	69
4.2 Overview	69
4.3 Assembly overview	71
4.4 Removing and installing input shaft ball bearing and multi-function sender	72
4.5 Removing and installing input shaft, pinion shaft, selector rods and gearbox cover	76
4.6 Removing and installing input shaft ball bearing, multi-function sender, input shaft, pinion shaft, selector rods and gearbox cover	79
5 Dismantling and assembling selector mechanism in gearbox	88
5.1 Dismantling and assembling selector mechanism in gearbox	88
35 - Gears, Shafts	96
1 Dismantling and assembling input shaft	96
1.1 Dismantling and assembling input shaft	96



2	Adjusting input shaft	111
2.1	Adjusting input shaft	111
3	Dismantling and assembling pinion shaft	113
3.1	Dismantling and assembling pinion shaft	113
4	Removing and installing reverse gear wheel	135
4.1	Removing and installing reverse gear wheel	135
39	Final drive, Differential	137
1	Renewing seal for flange shaft	137
1.1	Renewing seal for flange shaft	137
2	Removing and installing speedometer sender and drive wheel	140
2.1	Removing and installing speedometer sender and drive wheel	140
2.2	Removing and installing speedometer sender -G22	140
2.3	Removing and installing speedometer drive wheel	140
3	Removing and installing differential	142
3.1	Removing and installing differential	142
4	Dismantling and assembling differential	147
4.1	Dismantling and assembling differential	147
5	Adjusting pinion shaft and crown wheel	157
5.1	Adjusting pinion shaft and crown wheel	157
5.2	Adjusting and marking of gear sets	157
5.3	Position of shims	159
5.4	Adjustment overview	160
5.5	Recommended sequence for readjusting final drive set	160
5.6	Adjusting pinion shaft	161
5.7	Re-determining "S4" shim when fitting new gearbox cover	170
5.8	Adjusting crown wheel	172