

Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Identification of gearbox	1
2 Code letters, mechanical unit assignment, transmission ratios, capacities	2
2.1 Code letters, mechanical unit assignment, transmission ratios, capacities	2
3 Transmission layout	4
3.1 Transmission layout	4
4 Calculations	7
4.1 Calculations	7
4.2 Calculating transmission ratios "i"	7
4.3 Calculating speed "V"	7
5 Repair instructions	7
5.1 Repair instructions	7
30 - Clutch	11
1 Servicing clutch mechanism	11
1.1 Servicing clutch mechanism	11
1.2 Assembly overview, foot pedal cluster (LHD vehicles)	11
1.3 Assembly overview, foot pedal cluster (RHD vehicles)	19
1.4 Assembly overview, hydraulics	27
1.5 Bleeding clutch system	30
2 Servicing clutch release mechanism	32
2.1 Servicing clutch release mechanism	32
3 Servicing clutch	37
3.1 Servicing clutch	37
34 - Controls, Housing	43
1 Servicing shift mechanism	43
1.1 Servicing shift mechanism	43
1.2 Dismantling and assembling shift mechanism	44
1.3 Servicing selector rod and front push rod	45
1.4 Servicing gear stick and rear push rod	48
1.5 Removing and installing selector rods	52
1.6 Removing and installing push rods	52
1.7 Removing and installing boot	53
1.8 Replacing shaft seal for selector shaft	54
2 Checking and adjusting selector mechanism	55
2.1 Checking and adjusting selector mechanism	55
2.2 Basic adjustment (adjustment specifications)	55
2.3 Checking gear stick setting	57
2.4 Fine adjustment specifications	58
3 Removing and installing gearbox	58
3.1 Removing and installing gearbox	58
4 Checking oil level in manual gearbox	63
4.1 Checking oil level in manual gearbox	63
5 Dismantling and assembling gearbox	65
5.1 Dismantling and assembling gearbox	65
5.2 Removing and installing variable-speed gearbox and end cover	66
5.3 Removing and installing 5th and 6th gear	70
5.4 Removing and installing input shaft, drive pinion and internal selector mechanism from bearing plate	73
6 Removing and installing end cover, input shaft and drive pinion - assembly sequence . . .	76



6.1	Removing and installing end cover, input shaft and drive pinion - assembly sequence . . .	76
6.2	Removing	76
6.3	Installing	83
7	Servicing end cover	95
7.1	Servicing end cover	95
8	Servicing bearing plate	102
8.1	Servicing bearing plate	102
8.2	Re-determining shim "S4"	108
9	Servicing gearbox housing	113
9.1	Servicing gearbox housing	113
9.2	Dismantling and assembling complete selector shaft	127
35 - Gears, Shafts		131
1	Dismantling and assembling input shaft	131
1.1	Dismantling and assembling input shaft	131
2	Dismantling and assembling drive pinion	142
2.1	Dismantling and assembling drive pinion	142
39 - Final drive, Differential		155
1	Replacing flange shaft oil seal	155
1.1	Replacing flange shaft oil seal	155
2	Removing and installing speedometer sender -G22 and drive wheel for speedometer sender	156
2.1	Removing and installing speedometer sender -G22 and drive wheel for speedometer sender	156
3	Removing and installing differential	157
3.1	Removing and installing differential	157
4	Dismantling and assembling differential	159
4.1	Dismantling and assembling differential	159
5	Adjusting drive pinion and crown wheel	169
5.1	Adjusting drive pinion and crown wheel	169
5.2	Adjusting final drive sets; identification	170
5.3	Sequence for readjusting final drive set	170
5.4	Adjustment overview	171
5.5	Position of shims	172
6	Adjusting drive pinion	172
6.1	Adjusting drive pinion	172
7	Adjusting crown wheel	178
7.1	Adjusting crown wheel	178