

Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Technical data of self-diagnosis	1
1.3 Safety precautions	1
1.4 Connecting vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551 and selecting functions	1
2 Interrogating and erasing fault memory	5
2.1 Interrogating and erasing fault memory	5
2.2 Fault table	6
3 Final control diagnosis	13
3.1 Final control diagnosis	13
3.2 Preparing differential pressure regulator for pressure regulator measurement	13
3.3 Performing final control diagnosis	14
4 Basic setting	16
4.1 Basic setting	16
5 Encoding control unit	17
5.1 Encoding control unit	17
6 Reading measured value block	19
6.1 Reading measured value block	19
7 Testing diagnostic connector wiring connections	22
7.1 Testing diagnostic connector wiring connections	22
7.2 Testing voltage supply to black diagnostic connector	23
7.3 Testing wiring between "white" diagnostic connector and engine control unit	23
7.4 Testing cable connection of coding connector	25
25 - Mixture preparation, Injection	26
1 Servicing KE fuel injection system	26
1.1 Servicing KE fuel injection system	26
1.2 Safety precautions	26
1.3 Rules for cleanliness	26
1.4 Technical data	27
1.5 Fitting locations overview	28
1.6 Checking wiring and components with test box V.A.G 1598	33
1.7 Renewing engine control unit	34
1.8 Fuel pump relay -J17 and actuation	38
1.9 Test cold start valve -N17	44
1.10 Checking idling stabilisation valve -N71	50
1.11 Checking and adjusting idling switch -F60 and full throttle switch -F81	54
1.12 Checking air flow meter potentiometer -G19	58
1.13 Check pressure regulator -N73	63
1.14 Basic throttle valve setting	65
1.15 Checking intake air system for leaks (unmetered air)	66
2 Servicing fuel system	67
2.1 Servicing fuel system	67
2.2 Fuel distributor - overview	67
2.3 Removing and installing injection system components	72
2.4 Checking idling speed, CO content and ignition point	78
2.5 Connecting remote control V.A.G 1348/3A with adapter cable V.A.G 1348/3-2	82
2.6 Connecting pressure meter V.A.G 1318 with test adapter 1318/4	82
2.7 Checking system pressure, differential pressure and holding pressure	84
2.8 Removing and installing injectors	88
2.9 Checking injectors	89

2.10	Checking adjustment lever and control piston	93
2.11	Checking and adjusting resting position and idling run of baffle plate	94
2.12	Basic setting of adjustment lever	97
2.13	Removing and installing control piston	97
2.14	Checking cold acceleration enrichment and thrust switch-off	98
2.15	Checking late start and warm run enrichment	100
3	Checking lambda control	102
3.1	Checking lambda control	102
3.2	Testing lambda probe -G39 and lambda control	102
3.3	Testing lambda probe heater -Z19	104
3.4	Removing and installing lambda probe	106
4	Checking fuel tank breather	107
4.1	Checking fuel tank breather	107
4.2	Checking activated charcoal filter system solenoid valve 1 -N80	107
5	Checking auxiliary signals	112
5.1	Checking auxiliary signals	112
5.2	Checking the air conditioner compressor shutoff	113
5.3	Checking engine speed signal	114
5.4	Checking consumption signal for vehicle computer	114
5.5	Checking vehicle speed signal	114
6	Vacuum diagram	116
6.1	Vacuum diagram	116
28 - Ignition system		118
1	Checking ignition system	118
1.1	Checking ignition system	118
1.2	Safety precautions	118
1.3	Test data, spark plugs	118
1.4	Servicing ignition system	119
1.5	Dismantling and assembling ignition distributor	124
1.6	Replacing ignition distributor runner	125
1.7	Testing and adjusting ignition timing	126
1.8	Testing ignition coils	128
1.9	Checking output stage for ignition coil	130
1.10	Checking ignition timing -G4	134
1.11	Checking coolant temperature sender -G62	136
1.12	Checking control unit power supply	139
1.13	Checking knock sensors	142
1.14	Checking Hall sender -G40	144