

## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis</b> .....	<b>1</b>
1.1 Self-diagnosis .....	1
1.2 Technical self-diagnosis data .....	1
1.3 Safety precautions .....	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronic control unit .....	1
<b>2 Interrogating and erasing fault memory</b> .....	<b>4</b>
2.1 Interrogating and erasing fault memory .....	4
2.2 Fault table .....	5
<b>3 Final control diagnosis</b> .....	<b>13</b>
3.1 Final control diagnosis .....	13
<b>4 Basic setting</b> .....	<b>15</b>
4.1 Basic setting .....	15
<b>5 Coding control unit</b> .....	<b>16</b>
5.1 Coding control unit .....	16
<b>6 Reading measured value block</b> .....	<b>17</b>
6.1 Reading measured value block .....	17
<b>7 Testing wiring for diagnostic connector</b> .....	<b>29</b>
7.1 Testing wiring for diagnostic connector .....	29
7.2 Testing power supply for "black" diagnostic connector .....	29
7.3 Testing wiring between "white" diagnostic connector and engine control unit .....	30
<b>24 - Mixture preparation, Injection</b> .....	<b>35</b>
<b>1 Servicing Digifant fuel injection system</b> .....	<b>35</b>
1.1 Servicing Digifant fuel injection system .....	35
1.2 Safety precautions .....	35
1.3 Rules for cleanliness .....	35
1.4 Technical data .....	36
1.5 Fitting locations overview .....	37
1.6 Removing and installing injection system components .....	40
1.7 Dismantling and assembling air cleaner .....	43
1.8 Dismantling and assembling fuel manifold with injectors .....	45
1.9 Testing wiring and components using test box V.A.G 1598/18 .....	47
1.10 Renewing engine electronics control unit .....	48
1.11 Testing idling speed .....	51
1.12 Testing system pressure, fuel pressure regulator and holding pressure .....	53
1.13 Testing fuel pump relay -J17 and actuation .....	54
1.14 Testing injectors .....	59
1.15 Removing and installing injectors .....	63
1.16 Testing cold start valve -N17 .....	65
1.17 Testing idling stabilisation valve -N71 .....	69
1.18 Testing acceleration/full throttle enrichment and overrun cut-off .....	72
1.19 Testing air flow meter -G19 .....	72
<b>2 Testing Lambda control</b> .....	<b>75</b>
2.1 Testing Lambda control .....	75
2.2 Engine running problems after cold start .....	75
2.3 Testing Lambda probe -G39 and Lambda control .....	76
2.4 Testing Lambda probe heater -Z19 .....	78
<b>3 Testing fuel tank breather</b> .....	<b>80</b>
3.1 Testing fuel tank breather .....	80
3.2 Testing activated charcoal filter solenoid valve 1 -N80 .....	80
<b>4 Connection diagram for vacuum hoses</b> .....	<b>84</b>



4.1	Connection diagram for vacuum hoses . . . . .	84
<b>5</b>	<b>Testing throttle valve potentiometer -G69 . . . . .</b>	<b>86</b>
5.1	Testing throttle valve potentiometer -G69 . . . . .	86
5.2	Adapting the Digifant control unit -J169 and throttle valve potentiometer -G69 to each other . . . . .	89
5.3	Adapting automatic gearbox control unit and throttle valve potentiometer -G69 to each other . . . . .	89
5.4	Basic throttle valve setting . . . . .	89
5.5	Testing idling switch -F60 . . . . .	90
<b>6</b>	<b>Testing auxiliary signals . . . . .</b>	<b>92</b>
6.1	Testing auxiliary signals . . . . .	92
6.2	Testing engine speed increase for air conditioner . . . . .	92
6.3	Testing the air conditioner compressor shutoff . . . . .	93
6.4	Testing engine speed signal . . . . .	94
6.5	Testing fuel consumption signal . . . . .	94
6.6	Testing vehicle speed signal . . . . .	94
6.7	Testing wiring connection to automatic gearbox control unit . . . . .	96
6.8	Testing start signal . . . . .	97
<b>28</b>	<b>- Ignition system . . . . .</b>	<b>99</b>
<b>1</b>	<b>Testing ignition system . . . . .</b>	<b>99</b>
1.1	Testing ignition system . . . . .	99
1.2	Safety precautions . . . . .	99
1.3	Test data, spark plugs . . . . .	99
1.4	Servicing ignition system . . . . .	100
1.5	Installing distributor . . . . .	104
1.6	Testing and adjusting ignition timing . . . . .	105
1.7	Testing Hall sender -G40 . . . . .	106
1.8	Testing ignition coils . . . . .	108
1.9	Testing power output stage . . . . .	109
1.10	Testing intake air temperature sensor -G42 . . . . .	111
1.11	Testing coolant temperature sender -G62 . . . . .	112
1.12	Testing control unit power supply . . . . .	114
1.13	Testing current supply relay -J176 . . . . .	116
1.14	Testing knock sensor -G61 . . . . .	117