

Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Removing engine -engine code AAE-	3
1.3 Removing engine -engine codes AAD, ABB-	15
1.4 Removing engine -engine codes ABK, ADA, ADW-	28
1.5 Attaching engine to repair stand	40
1.6 Installing	41
1.7 Tightening torques	43
13 - Crankshaft group	45
1 Dismantling and assembling engine	45
1.1 Dismantling and assembling engine	45
1.2 Belt drive for alternator, coolant pump, and vane pump	45
1.3 Removing and installing V-belt for coolant pump and power assisted steering vane pump	50
1.4 Checking V-belt tension for coolant pump and power assisted steering vane pump, tensioning V-belt	51
1.5 Removing and installing V-belt for alternator > 08.91	52
1.6 Checking V-belt tension for alternator, tensioning V-belt	53
1.7 Removing and installing ribbed belt for alternator > 09.91	55
1.8 Checking ribbed belt tension for alternator, tensioning ribbed belt	56
1.9 V-belt drive for air conditioning compressor	58
1.10 Removing and installing V-belt for air conditioning compressor	60
1.11 Checking V-belt tension for alternator, tensioning V-belt	60
1.12 Toothed belt drive	62
1.13 Removing and installing toothed belt	68
1.14 Checking toothed belt tension and thermo tension roller - Vehicles > approx. 12.94	76
1.15 Checking tensioner - Vehicles approx. 12.94 >	77
2 Removing and installing sealing flange and flywheel	79
2.1 Removing and installing sealing flange and flywheel	79
2.2 Replacing crankshaft oil seal on pulley end	83
2.3 Removing and installing flywheel/drive plate	85
3 Removing and installing crankshaft	88
3.1 Removing and installing crankshaft	88
3.2 Removing and installing needle bearing in crankshaft	91
3.3 Crankshaft dimensions	92
4 Dismantling and assembling pistons and conrods	93
4.1 Dismantling and assembling pistons and conrods	93
4.2 Piston and cylinder dimensions	100
4.3 Checking radial play of conrods	100
15 - Cylinder head, Valve gear	102
1 Removing and installing cylinder head	102
1.1 Removing and installing cylinder head	102
1.2 Removing and installing intake manifold -engine code AAE-	108
1.3 Removing and installing intake manifold -engine codes AAD, ABB-	111
1.4 Removing and installing intake manifold -engine codes ABK, ADA, ADW-	113



1.5	Removing and installing cylinder head cover	115
1.6	Removing cylinder head -engine code AAE-	118
1.7	Removing cylinder head -engine codes AAD, ABB-	123
1.8	Removing cylinder head -engine codes ABK, ADA, ADW-	129
1.9	Installing cylinder head	134
1.10	Checking compression	137
2	Servicing valve gear	139
2.1	Servicing valve gear	139
2.2	Different valve gear designs	139
2.3	Replacing camshaft oil seal	148
2.4	Removing and installing camshaft	151
2.5	Checking hydraulic bucket tappets	155
2.6	Replacing valve stem seals	156
2.7	Checking valve guides	159
2.8	Checking valves	160
2.9	Replacing valve guides	161
2.10	Reworking valve seats	163
17 - Lubrication		166
1	Removing and installing parts of the lubrication system	166
1.1	Removing and installing parts of the lubrication system	166
1.2	Part I	167
1.3	Part II	171
1.4	Removing and installing oil pan	175
1.5	Removing and installing oil pump	179
1.6	Checking oil pressure and oil pressure switch	180
1.7	Engine oil	182
1.8	Checking oil level	182
19 - Cooling system		184
1	Removing and installing parts of the cooling system	184
1.1	Removing and installing parts of the cooling system	184
1.2	Parts of cooling system	185
1.3	Draining and filling cooling system	187
1.4	Coolant pump and coolant thermostat - Exploded view	190
1.5	Removing and installing coolant pump	192
1.6	Removing, installing and checking coolant thermostat	194
1.7	Removing and installing radiator	195
1.8	Checking cooling system for leaks	199
26 - Exhaust system		201
1	Removing and installing parts of exhaust system	201
1.1	Removing and installing parts of exhaust system	201
1.2	Vehicles with front-wheel drive without catalytic converter	201
1.3	Vehicles with front-wheel drive with catalytic converter	205
1.4	Vehicles with four-wheel drive	212
1.5	Separating centre and rear silencers	219
1.6	Exhaust manifold - Overview	220
1.7	Removing and installing exhaust manifold	222
1.8	Stress free alignment of exhaust system	225
1.9	Checking exhaust system for leaks	227