

Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Removing	4
1.3 Attaching engine to repair stand	12
1.4 Installing	13
13 - Crankshaft group	17
1 Dismantling and assembling engine	17
1.1 Dismantling and assembling engine	17
1.2 Ribbed belt drive for vane pump, alternator and idler wheel; V-belt drive for coolant pump	17
1.3 Ribbed belt drive for air conditioner	24
1.4 Routing of V-belt and ribbed belt	27
1.5 Removing and installing retainer for alternator, vane pump (power steering) and idler wheel	29
1.6 Removing and installing ribbed belt	30
1.7 Removing and installing V-belt	32
1.8 Removing and installing bearing for idler wheel	34
1.9 Removing and installing toothed belt	36
2 Removing and installing sealing flanges and flywheel/drive plate	45
2.1 Removing and installing sealing flanges and flywheel/drive plate	45
2.2 Replacing crankshaft oil seal on pulley end	49
2.3 Removing and installing dual mass flywheel/drive plate	52
3 Removing and installing crankshaft	55
3.1 Removing and installing crankshaft	55
3.2 Removing and installing needle bearing in crankshaft	58
3.3 Crankshaft dimensions	60
4 Dismantling and assembling pistons and conrods	61
4.1 Dismantling and assembling pistons and conrods	61
4.2 Piston and cylinder dimensions	67
15 - Cylinder head, Valve gear	69
1 Removing and installing cylinder head	69
1.1 Removing and installing cylinder head	69
1.2 Part I	70
1.3 Part II	73
1.4 Removing and installing intake manifold	76
1.5 Removing and installing cylinder head cover	81
1.6 Removing cylinder head	83
1.7 Installing cylinder head	85
1.8 Checking compression	87
2 Servicing valve gear	89
2.1 Servicing valve gear	89
2.2 Checking camshaft axial play	95
2.3 Replacing exhaust camshaft oil seal	97
2.4 Replacing oil seal for inlet camshaft	100
2.5 Removing and installing camshafts and camshaft adjuster	103

2.6	Checking hydraulic bucket tappets	110
2.7	Replacing valve stem seals	111
2.8	Checking valve guides	115
2.9	Checking valves	116
2.10	Reworking valve seats	116
3	Checking camshaft timing control	118
3.1	Checking camshaft timing control	118
3.2	Checking camshaft adjustment solenoid valve -N205	119
17 - Lubrication		124
1	Removing and installing parts of the lubrication system	124
1.1	Removing and installing parts of the lubrication system	124
1.2	Part I	125
1.3	Part II	128
1.4	Removing and installing oil pan	131
1.5	Removing and installing oil pump	134
1.6	Checking oil pressure and oil pressure switch	135
1.7	Engine oil	137
1.8	Checking oil level	137
19 - Cooling system		138
1	Removing and installing parts of the cooling system	138
1.1	Removing and installing parts of the cooling system	138
1.2	Draining and filling cooling system	141
1.3	Removing and installing coolant pump and coolant thermostat	145
1.4	Removing and installing coolant pump	146
1.5	Removing, installing and checking coolant thermostat	150
1.6	Removing and installing radiator	151
1.7	Checking cooling system for leaks	155
26 - Exhaust system		157
1	Removing and installing parts of exhaust system	157
1.1	Removing and installing parts of exhaust system	157
1.2	Vehicles with front-wheel drive	157
1.3	Vehicles with four-wheel drive	162
1.4	Separating centre and rear silencers	168
1.5	Stress free alignment of exhaust system	169
1.6	Checking exhaust system for leaks	171