

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Technical data .....	1
1.2 Engine number .....	1
1.3 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing and installing engine .....	3
1.2 Removing .....	4
1.3 Attaching engine to engine stand .....	15
1.4 Installing .....	16
1.5 Tightening torques .....	18
<b>13 - Crankshaft group</b> .....	<b>19</b>
<b>1 Dismantling and assembling engine</b> .....	<b>19</b>
1.1 Dismantling and assembling engine .....	19
1.2 Ribbed belt drive for vane pump, alternator and viscous fan .....	19
1.3 Removing and installing ribbed belt .....	24
1.4 Removing and installing vibration damper .....	26
1.5 Toothed belt drive .....	28
1.6 Removing and installing toothed belt (when removing belt completely) .....	33
1.7 Removing toothed belt from camshaft sprocket .....	40
1.8 Positioning crankshaft to TDC with engine removed .....	45
<b>2 Removing and installing crankshaft, flywheel/drive plate and sealing flange</b> .....	<b>47</b>
2.1 Removing and installing crankshaft, flywheel/drive plate and sealing flange .....	47
2.2 Renewing crankshaft oil seal on pulley end .....	53
2.3 Removing and installing flywheel/drive plate .....	54
2.4 Removing and installing ball bearing in crankshaft .....	57
2.5 Crankshaft dimensions .....	58
<b>3 Dismantling and assembling pistons and conrods</b> .....	<b>59</b>
3.1 Dismantling and assembling pistons and conrods .....	59
3.2 Piston and cylinder dimensions .....	66
3.3 Checking radial play of conrods .....	66
<b>15 - Cylinder head, Valve gear</b> .....	<b>67</b>
<b>1 Removing and installing cylinder head</b> .....	<b>67</b>
1.1 Removing and installing cylinder head .....	67
1.2 Upper part of intake manifold - Overview .....	68
1.3 Installing and removing upper part of intake manifold .....	69
1.4 Lower part of intake manifold - Overview .....	71
1.5 Installing and removing lower part of intake manifold .....	74
1.6 Cylinder head - Overview .....	78
1.7 Removing and installing cylinder head cover .....	82
1.8 Removing cylinder head .....	84
1.9 Installing cylinder head .....	88
1.10 Checking compression .....	90
<b>2 Servicing valve gear</b> .....	<b>92</b>
2.1 Servicing valve gear .....	92
2.2 Replacing camshaft oil seal .....	98
2.3 Removing and installing camshaft .....	100
2.4 Checking hydraulic bucket tappets .....	103
2.5 Replacing valve stem seals .....	105
2.6 Checking valve guides .....	108



2.7	Checking valves . . . . .	109
2.8	Renewing valve guides . . . . .	109
2.9	Reworking valve seats . . . . .	111
<b>17</b>	<b>- Lubrication . . . . .</b>	<b>114</b>
<b>1</b>	<b>Removing and installing parts of the lubrication system . . . . .</b>	<b>114</b>
1.1	Removing and installing parts of the lubrication system . . . . .	114
1.2	Removing and installing oil pan . . . . .	121
1.3	Removing and installing oil pump . . . . .	124
1.4	Checking oil pressure and oil pressure switch . . . . .	127
1.5	Engine oil . . . . .	129
1.6	Check oil level . . . . .	129
<b>19</b>	<b>- Cooling system . . . . .</b>	<b>131</b>
<b>1</b>	<b>Removing and installing parts of the cooling system . . . . .</b>	<b>131</b>
1.1	Removing and installing parts of the cooling system . . . . .	131
1.2	Parts of cooling system . . . . .	132
1.3	Draining and filling cooling system . . . . .	136
1.4	Coolant pump and thermostat - Overview . . . . .	140
1.5	Removing and installing coolant pump . . . . .	142
1.6	Removing, installing and checking coolant thermostat . . . . .	143
1.7	Removing and installing viscous fan . . . . .	144
1.8	Checking viscous fan . . . . .	145
1.9	Removing and installing radiator . . . . .	146
1.10	Checking cooling system for leaks . . . . .	150
<b>26</b>	<b>- Exhaust system . . . . .</b>	<b>152</b>
<b>1</b>	<b>Removing and installing parts of exhaust system . . . . .</b>	<b>152</b>
1.1	Removing and installing parts of exhaust system . . . . .	152
1.2	Vehicles with front-wheel drive . . . . .	152
1.3	4WD vehicles . . . . .	159
1.4	Separating centre and rear silencers . . . . .	165
1.5	Exhaust manifold - Overview . . . . .	166
1.6	Removing and installing exhaust manifold . . . . .	168
1.7	Stress free alignment of exhaust system . . . . .	171
1.8	Checking exhaust system for leaks . . . . .	174