

Contents

| | |
|--|------------|
| 00 - Technical data | 1 |
| 1 Technical data | 1 |
| 1.1 Technical data | 1 |
| 1.2 Engine number | 1 |
| 1.3 Changes during the production period | 1 |
| 1.4 Engine data | 2 |
| 10 - Removing and installing engine | 4 |
| 1 Removing and installing engine | 4 |
| 1.1 Removing and installing engine | 4 |
| 1.2 Removing | 5 |
| 1.3 Attaching engine to engine stand | 22 |
| 1.4 Installing | 22 |
| 1.5 Tightening torques | 25 |
| 13 - Crankshaft group | 28 |
| 1 Dismantling and assembling engine | 28 |
| 1.1 Dismantling and assembling engine | 28 |
| 1.2 Ribbed belt drive for vane pump, alternator and air conditioner | 28 |
| 1.3 Removing and installing ribbed belt | 35 |
| 1.4 Checking alignment of ribbed belt - Vehicles up to 07.91 | 37 |
| 1.5 Removing and installing vibration damper/pulley | 39 |
| 1.6 Toothed belt drive | 41 |
| 1.7 Removing and installing toothed belt | 46 |
| 2 Removing and installing sealing flange and flywheel/drive plate | 51 |
| 2.1 Removing and installing sealing flange and flywheel/drive plate | 51 |
| 2.2 Replacing crankshaft oil seal on pulley end | 57 |
| 2.3 Removing and installing flywheel/drive plate | 59 |
| 2.4 Removing and installing needle bearing in flywheel | 63 |
| 2.5 Adjusting bracket of engine speed sender | 64 |
| 3 Removing and installing crankshaft | 66 |
| 3.1 Removing and installing crankshaft | 66 |
| 3.2 Crankshaft dimensions | 70 |
| 3.3 Measuring axial and radial play | 70 |
| 4 Dismantling and assembling pistons and conrods | 72 |
| 4.1 Dismantling and assembling pistons and conrods | 72 |
| 4.2 Piston and cylinder dimensions | 77 |
| 4.3 Checking radial play of conrods | 77 |
| 15 - Cylinder head, Valve gear | 79 |
| 1 Removing and installing cylinder head | 79 |
| 1.1 Removing and installing cylinder head | 79 |
| 1.2 Different valve gear designs | 79 |
| 1.3 Removing and installing intake manifold | 86 |
| 1.4 Removing and installing left cylinder head cover | 91 |
| 1.5 Removing and installing right cylinder head cover | 93 |
| 1.6 Removing left cylinder head | 95 |
| 1.7 Removing right cylinder head | 99 |
| 1.8 Installing cylinder head | 102 |
| 1.9 Checking compression | 105 |
| 2 Servicing valve gear | 107 |
| 2.1 Servicing valve gear | 107 |
| 2.2 Checking camshaft axial clearance | 116 |

| | | |
|----------------------------|--|-----|
| 2.3 | Replacing front camshaft oil seals | 116 |
| 2.4 | Replacing rear oil seal of left camshaft | 119 |
| 2.5 | Removing and installing camshafts | 120 |
| 2.6 | Checking hydraulic bucket tappets | 122 |
| 2.7 | Replacing valve stem seals | 123 |
| 2.8 | Checking valve guides | 127 |
| 2.9 | Checking valves | 128 |
| 2.10 | Replacing valve guides | 128 |
| 2.11 | Reworking valve seats | 130 |
| 17 - Lubrication | 132 | |
| 1 | Removing and installing parts of the lubrication system | 132 |
| 1.1 | Removing and installing parts of the lubrication system | 132 |
| 1.2 | Different oil circuits | 132 |
| 1.3 | Engine generation I | 133 |
| 1.4 | Engine generation II | 139 |
| 1.5 | Removing and installing lower section of sump | 144 |
| 1.6 | Removing and installing upper section of sump | 147 |
| 1.7 | Removing and installing oil pump | 152 |
| 1.8 | Replacing oil retention valves | 156 |
| 1.9 | Checking oil pressure and oil pressure switch | 157 |
| 1.10 | Engine oil | 160 |
| 1.11 | Check oil level | 160 |
| 19 - Cooling system | 162 | |
| 1 | Removing and installing parts of the cooling system | 162 |
| 1.1 | Removing and installing parts of the cooling system | 162 |
| 1.2 | Coolant pump and coolant thermostat | 163 |
| 1.3 | Draining and filling cooling system | 164 |
| 1.4 | Removing and installing coolant pump | 169 |
| 1.5 | Removing and installing, checking coolant thermostat | 170 |
| 1.6 | Coolant pipes - overview | 172 |
| 1.7 | Removing and installing small coolant pipe | 174 |
| 1.8 | Removing and installing large coolant pipe | 175 |
| 1.9 | Removing and installing radiator | 176 |
| 1.10 | Checking cooling system for leaks | 181 |
| 26 - Exhaust system | 183 | |
| 1 | Removing and installing parts of exhaust system | 183 |
| 1.1 | Removing and installing parts of exhaust system | 183 |
| 1.2 | Vehicles with front-wheel drive and two catalytic converters - manual gearbox or automatic gearbox 097 | 183 |
| 1.3 | Installing exhaust system stress-free - vehicles with two catalytic converters | 190 |
| 1.4 | Vehicles with front-wheel drive and two catalytic converters - Automatic gearbox 01K | 195 |
| 1.5 | Installing exhaust system stress-free - vehicles with two catalytic converters, automatic gearbox 01K | 200 |
| 1.6 | Vehicles with front-wheel drive and single catalytic converter | 203 |
| 1.7 | Installing exhaust system stress-free - vehicles with single catalytic converter | 208 |
| 1.8 | 4WD vehicles | 213 |
| 1.9 | Installing exhaust system stress-free - vehicles with four-wheel drive | 218 |
| 1.10 | Separating centre and rear silencers - vehicles with four-wheel drive | 221 |
| 1.11 | Removing and installing left exhaust manifold | 222 |
| 1.12 | Removing and installing right exhaust manifold | 226 |
| 1.13 | Checking exhaust system for leaks | 229 |