

Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine, ABH, AEC	3
1.1 Removing and installing engine, ABH, AEC	3
1.2 Removing	3
1.3 Attaching engine to engine stand	15
1.4 Installing	15
1.5 Tightening torques	16
2 Removing and installing engine, AHK	17
2.1 Removing and installing engine, AHK	17
2.2 Removing	17
2.3 Attaching engine to engine stand	27
2.4 Installing	27
2.5 Tightening torques	28
13 - Crankshaft group	29
1 Crank assembly	29
1.1 Crank assembly	29
1.2 Note:	29
15 - Cylinder head, Valve gear	30
1 Cylinder head, valve gear	30
1.1 Cylinder head, valve gear	30
1.2 Removing and installing ribbed belt	30
2 Removing and installing toothed belt, ABH, AEC	31
2.1 Removing and installing toothed belt, ABH, AEC	31
2.2 Removing and installing viscous fan	33
2.3 Removing and installing toothed belt, AHK	45
3 Removing and installing cylinder head, ABH, AEC	54
3.1 Removing and installing cylinder head, ABH, AEC	54
3.2 Removing and installing cylinder head, AHK	61
3.3 Installing cylinder head covers	66
3.4 Checking compression pressure	67
4 Servicing valve gear	68
4.1 Servicing valve gear	68
4.2 Removing and installing camshafts	78
4.3 Renewing valve stem seals	81
4.4 Checking valve guides	83
4.5 Renewing valve guides	83
4.6 Reworking valve seats	85
4.7 Servicing flywheel	89
17 - Lubrication	91
1 Removing and installing parts of the lubrication system	91
1.1 Removing and installing parts of the lubrication system	91
1.2 Removing oil pump	97
1.3 Replacing crankshaft seal	97
1.4 Replacing seal for oil pump drive	98



1.5	Replacing oil retention valves	99
1.6	Checking oil pressure switch and oil pressure	103
1.7	Engine oil	105
1.8	Checking oil level	106
19	- Cooling system	107
1	Removing and installing parts of the cooling system	107
1.1	Removing and installing parts of the cooling system	107
1.2	Coolant pump	109
1.3	Checking cooling system for leaks	113
1.4	Checking pressure relief valve in cap	113
20	- Fuel supply system	114
1	Removing and installing parts of fuel supply system	114
1.1	Removing and installing parts of fuel supply system	114
1.2	Safety precautions when performing work on fuel tank	117
1.3	Cleanliness rules when working on fuel supply system	118
1.4	Connecting remote control V.A.G 1348/3A	118
1.5	Removing and installing sender for fuel supply display	119
1.6	Removing and installing fuel pump	120
2	Dismantling and assembling fuel pump	121
2.1	Dismantling and assembling fuel pump	121
2.2	Testing fuel pump	121
2.3	Checking fuel pump delivery rate	123
2.4	Testing non-return valve of fuel pump	124
3	Servicing fuel tank breather with activated charcoal filter	125
3.1	Servicing fuel tank breather with activated charcoal filter	125
3.2	Testing solenoid valve for activated charcoal filter	126
4	Servicing throttle mechanism	127
4.1	Servicing throttle mechanism	127
4.2	Adjusting throttle cable	130
26	- Exhaust system	135
1	Removing and installing exhaust system, ABH	135
1.1	Removing and installing exhaust system, ABH	135
1.2	Stress-free exhaust system alignment, engine code ABH	141
1.3	Checking exhaust system for leaks	143
2	Removing and installing exhaust system, AEC, AHK	144
2.1	Removing and installing exhaust system, AEC, AHK	144
2.2	Suspension of catalytic converters and heat shield	149
2.3	Removal of exhaust manifold	151
2.4	Stress-free exhaust system alignment, engine codes AEC, AHK	156
2.5	Checking exhaust system for leaks	157