

## Contents

<b>01 - Self diagnosis . . . . .</b>	<b>1</b>
1 <b>Self-diagnosis . . . . .</b>	1
1.1   Self-diagnosis . . . . .	1
1.2   Technical data of self-diagnosis . . . . .	1
1.3   Safety notes . . . . .	1
1.4   Connecting fault reader V.A.G 1551 and selecting engine electronics control unit . . . . .	1
2 <b>Interrogating and erasing fault memory . . . . .</b>	4
2.1   Interrogating and erasing fault memory . . . . .	4
2.2   Fault table . . . . .	5
3 <b>Final control diagnosis . . . . .</b>	15
3.1   Final control diagnosis . . . . .	15
4 <b>Basic setting . . . . .</b>	18
4.1   Basic setting . . . . .	18
5 <b>Coding control unit . . . . .</b>	20
5.1   Coding control unit . . . . .	20
6 <b>Reading measured value block . . . . .</b>	22
6.1   Reading measured value block . . . . .	22
6.2   Readout specifications for general vehicle inspection . . . . .	26
6.3   Readout specifications for injection pump . . . . .	27
6.4   Readout specifications for engine idling speed . . . . .	29
6.5   Readout specifications for exhaust gas recirculation . . . . .	30
6.6   Readout specifications for temperature senders . . . . .	30
6.7   Readout specifications for engine power output . . . . .	31
6.8   Readout specifications for charge pressure control . . . . .	32
<b>23 - Mixture preparation, Injection . . . . .</b>	<b>33</b>
1 <b>Servicing Diesel direct injection system . . . . .</b>	33
1.1   Servicing Diesel direct injection system . . . . .	33
1.2   Safety precautions . . . . .	33
1.3   Rules for cleanliness . . . . .	33
1.4   Fitting locations overview . . . . .	34
1.5   Servicing fuel injection system . . . . .	37
1.6   Servicing fuel filter . . . . .	42
1.7   Servicing accelerator linkage . . . . .	45
1.8   Installing and adjusting accelerator position sender -G79 . . . . .	46
1.9   Removing, installing and adjusting injection pump . . . . .	47
1.10   Bleeding fuel system . . . . .	52
1.11   Dynamically checking and adjusting commencement of injection . . . . .	52
1.12   Checking fuel system for leaks . . . . .	54
1.13   Removing, installing and testing injectors and constant pressure valves . . . . .	55
1.14   Renewing injection timing device cover O-ring . . . . .	57
1.15   Renewing engine electronics control unit . . . . .	58
1.16   Wiring and component check with test box V.A.G 1598/18 . . . . .	59
2 <b>Testing charge pressure system . . . . .</b>	60
2.1   Testing charge pressure system . . . . .	60
2.2   Checking charge pressure . . . . .	60
2.3   Testing charge pressure control solenoid valve -N75 . . . . .	64
2.4   Testing intake manifold temperature sender -G72 . . . . .	65
2.5   Testing intake manifold pressure sender -G71 and altitude sender -F96 . . . . .	66
2.6   Hose routing diagram for charge pressure control system . . . . .	68
3 <b>Testing injection control . . . . .</b>	69
3.1   Testing injection control . . . . .	69
3.2   Checking injection timing control range . . . . .	69

3.3	Testing commencement of injection valve -N108 . . . . .	70
3.4	Testing fuel temperature sender -G81 . . . . .	72
<b>4</b>	<b>Testing exhaust gas recirculation (EGR) . . . . .</b>	<b>73</b>
4.1	Testing exhaust gas recirculation (EGR) . . . . .	73
4.2	Testing operation . . . . .	73
4.3	Testing exhaust gas recirculation valve -N18 . . . . .	74
4.4	Testing air mass meter -G70 . . . . .	76
4.5	Hose routing diagram for exhaust gas recirculation . . . . .	79
<b>5</b>	<b>Checking control unit input values . . . . .</b>	<b>80</b>
5.1	Checking control unit input values . . . . .	80
5.2	Checking Diesel direct injection system voltage supply . . . . .	80
5.3	Testing engine speed sender -G28 . . . . .	84
5.4	Testing needle lift sender -G80 . . . . .	85
5.5	Testing coolant temperature sender -G62 . . . . .	86
5.6	Testing brake light switch -F and brake pedal switch -F47 . . . . .	87
5.7	Testing modulating piston movement sender -G149 and quantity adjuster -N146 . . . . .	88
5.8	Testing accelerator position sender -G79 . . . . .	91
<b>6</b>	<b>Testing auxiliary signals . . . . .</b>	<b>93</b>
6.1	Testing auxiliary signals . . . . .	93
6.2	Testing signals from and to automatic gearbox . . . . .	93
6.3	Testing signals from and to air conditioner . . . . .	95
6.4	Testing speed signal . . . . .	96
6.5	Testing clutch pedal switch -F36 . . . . .	97
6.6	Testing cruise control system (CCS) . . . . .	98
6.7	Testing engine speed signal . . . . .	101
6.8	Testing fuel consumption signal . . . . .	102
<b>28 - Glow plug system . . . . .</b>	<b>103</b>	
<b>1</b>	<b>Testing glow plug system . . . . .</b>	<b>103</b>
1.1	Testing glow plug system . . . . .	103
1.2	Testing operation . . . . .	103
1.3	Checking glow plugs . . . . .	104
1.4	Testing glow period warning lamp -K29 . . . . .	104