

I N D E X

00	Materials	Page
	Adhesives	00-1
	Sealants	00-6
	Locking materials	00-10
	Surface protection materials	00-10
	Chemical materials for body repairs/maintenance	00-11
50	Body, front	Page
	Removing and installing apron	50-1
	Removing and installing front wing	50-6
55	Bonnet, boot lid, tailgate	Page
	Bonnet - Lock pins and Cd seal	55-1
	- Removing bonnet	55-3
	- Installing and adjusting bonnet	55-4
	- Renewing gas-filled strut for bonnet	55-5
	- Removing and installing Bowden cable for bonnet	55-7
	Removing and installing tailgate	55-8
	- Adjusting tailgate	55-10
	- Renewing gas-filled strut for tailgate	55-11
	Servicing lock on boot lid	55-12
57	Doors	Page
	Servicing door shell	57-1
	Servicing window lifter	57-4
	Adjusting door - Adjustment sequence	57-7
	Servicing door lock with actuating elements	57-11
	Removing door handle	57-16
	Servicing central locking system	57-19
60	Sliding/tilting roof	Page
	Servicing sliding/tilting roof	60-1
	Servicing sliding/tilting roof panel	60-3
	- Removing and installing sliding/tilting roof panel	60-5
	- Removing and installing cable drive	60-8
	- Checking and adjusting zero position (motor)	60-9
	- Removing rear guide from guide plate	60-10
	- Checking and adjusting zero position (guide plate)	60-10
	- Height adjustment at front	60-12
	- Height adjustment at rear	60-12
	Cleaning water drain hoses	60-13
63	Bumpers	Page
	Removing and installing front bumper	63-1
	Removing and installing rear bumper	63-5
64	Windows	Page
	Removing and installing flush-bonded windows - General	64-1
	Removing and installing windscreen	64-5
	Removing and installing side window	64-14

INDEX

66 Exterior trim	Page
Removing and installing radiator grille	66-1
Removing and installing wheel housing liner	66-2
Renewing exterior rear-view mirror	66-3
- Installation position, driver's side	66-3
- Installation position, passenger's side	66-4
- Renewing mirror glass	66-5
Removing and installing A-pillar trim	66-6
Removing and installing B-pillar trim	66-8
Removing and installing roof moulding	66-10
Removing and installing protective mouldings	66-12
Removing and installing side member gap cover	66-13
Removing and installing sill panel	66-14
Removing and installing trim panel for number plate	66-15
68 Interior trim	Page
Seat belts - Anchorage points	68-1
- Removing and installing automatic seat belt, B-pillar	68-2
- Removing and installing automatic seat belt, rear	68-3
- Seat frame anchorage point	68-4
- Floor group anchorage point, outer	68-4
- Floor group anchorage point, centre	68-5
- Floor group anchorage point, centre - without retractor	68-5
- Floor group anchorage point, centre - with retractor	68-6
Removing and installing interior rear-view mirror	68-7
- Bonding in retaining plate for interior rear-view mirror	68-8
70 Trim	Page
Removing and installing trim panel for door	70-1
Removing and installing rear side trim panel	70-6
Removing and installing A-pillar trim panel	70-8
Removing and installing inner sill panel trim	70-9
Removing and installing B-pillar trim panel	70-11
Removing and installing C-pillar trim panel	70-13
Removing and installing trim for belt reel bracket	70-14
Removing and installing rear roof frame trim	70-15
Removing and installing trim for rear end panel, top	70-16
Removing and installing trim panels for tailgate	70-17
Repairing instrument panel	70-18
- Removing centre console	70-19
- Instructions for fitting handbrake lever trim	70-20
- Removing and installing instrument panel	70-23
- Removing centre section of instrument panel	70-27
- Removing glove compartment	70-29
72 Rear seat	Page
Removing and installing rear seat bench	72-1
Removing and installing rear seat backrest	72-1
- Removing and installing upholstery at side	72-2
- Removing and installing armrest for rear seat	72-2