Index

80 Heating	Page
Servicing heater and fresh air blower	80-1
- Heater controls R+I	80-5
- Connecting diagram for bowden cables	80-6
Heater R+I	80-8
Dismantling and assembling heater	80-12
Dismantling and assembling arms and flaps in left half of housing	9 80-15
87 Air conditioner	Page
Safety precautions when working on vehicles with air conditioner	
or when handling refridgerant	87-1
Refridgerant circuit	87-4
Notes for general repairs	87-6
Opening and discharging refridgerant circuit	87-6
Servicing work which does not involve the refridgerant circuit	
- 4 cylinder engine	87-8
- 5 cylinder engine	87-10
- Passenger compartment	87-12
Servicing magnetic coupling N 25	87-30
Compressor R+I	
- 4 cylinder engine	87-31
- 5 cylinder engine	
Vacuum diagram	87-35
Checking operation of air conditioner	87-36
- Checking cooling performance	87-37
- Checking switch off temperature	87-40