

## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis (SD); Anti-lock braking system (ABS)</b> .....	<b>1</b>
1.1 Self-diagnosis (SD); Anti-lock braking system (ABS) .....	1
1.2 Function .....	1
1.3 Technical data of self-diagnosis .....	2
1.4 Safety precautions and basic fault finding information .....	2
1.5 Connecting fault reader V.A.G 1551, interrogating and erasing fault memory, ending output .....	3
1.6 Fault table .....	6
1.7 Reading measured value block .....	10
<b>40 - Front suspension</b> .....	<b>16</b>
<b>1 Replacing wheel bearing housing</b> .....	<b>16</b>
1.1 Replacing wheel bearing housing .....	16
<b>2 Removing and installing suspension strut and drive shaft</b> .....	<b>23</b>
2.1 Removing and installing suspension strut and drive shaft .....	23
<b>3 Servicing suspension strut</b> .....	<b>30</b>
3.1 Servicing suspension strut .....	30
<b>4 Servicing drive shaft with constant velocity joint</b> .....	<b>38</b>
4.1 Servicing drive shaft with constant velocity joint .....	38
<b>5 Servicing suspension</b> .....	<b>46</b>
5.1 Servicing suspension .....	46
5.2 Servicing forged transverse link .....	56
<b>42 - Rear suspension</b> .....	<b>60</b>
<b>1 Servicing subframe</b> .....	<b>60</b>
1.1 Servicing subframe .....	60
<b>2 Removing and installing drive shaft</b> .....	<b>64</b>
2.1 Removing and installing drive shaft .....	64
<b>3 Servicing drive shaft with constant velocity joint</b> .....	<b>68</b>
3.1 Servicing drive shaft with constant velocity joint .....	68
3.2 Audi 80 Saloon .....	68
3.3 Audi 80 Avant and vehicles with 169 kW engine .....	73
<b>4 Removing, installing and servicing rear axle</b> .....	<b>80</b>
4.1 Removing, installing and servicing rear axle .....	80
<b>5 Servicing upper transverse link</b> .....	<b>89</b>
5.1 Servicing upper transverse link .....	89
5.2 Servicing forged transverse link .....	89
5.3 Servicing sheet-steel transverse link .....	93
<b>6 Servicing lower transverse link</b> .....	<b>95</b>
6.1 Servicing lower transverse link .....	95
<b>7 Servicing wheel bearing housing</b> .....	<b>98</b>
7.1 Servicing wheel bearing housing .....	98
<b>8 Servicing suspension strut</b> .....	<b>105</b>
8.1 Servicing suspension strut .....	105
<b>44 - Wheels, Tyres, Wheel alignment</b> .....	<b>116</b>
<b>1 Wheels and tyres</b> .....	<b>116</b>
1.1 Wheels and tyres .....	116
1.2 Steel disc wheel .....	116
1.3 Light-alloy disc wheel, Aero design .....	119
1.4 Light-alloy disc wheel, Speedline design .....	122



<b>2</b>	<b>Wheel alignment</b> . . . . .	<b>123</b>
2.1	Wheel alignment . . . . .	123
2.2	Test prerequisites . . . . .	123
2.3	Specified values for wheel alignment . . . . .	124
2.4	Adjusting front axle toe . . . . .	124
2.5	Adjusting front axle camber . . . . .	127
2.6	Adjusting rear axle toe . . . . .	129
2.7	Setting rear axle camber . . . . .	129
2.8	Rebalancing/balancing wheels on vehicle . . . . .	130
<b>45</b>	<b>Anti-locking brake system</b> . . . . .	<b>131</b>
<b>1</b>	<b>General repair information</b> . . . . .	<b>131</b>
1.1	General repair information . . . . .	131
<b>2</b>	<b>Removing and installing hydraulic modulator</b> . . . . .	<b>132</b>
2.1	Removing and installing hydraulic modulator . . . . .	132
2.2	High- and low pressure testing . . . . .	137
<b>3</b>	<b>Removing and installing parts of electronic control system</b> . . . . .	<b>137</b>
3.1	Removing and installing parts of electronic control system . . . . .	137
<b>4</b>	<b>Removing and installing components of ABS system</b> . . . . .	<b>139</b>
4.1	Removing and installing components of ABS system . . . . .	139
4.2	Front axle . . . . .	140
4.3	Rear axle . . . . .	143
<b>46</b>	<b>Brakes, Brake mechanics</b> . . . . .	<b>146</b>
<b>1</b>	<b>Servicing front brakes, Girling</b> . . . . .	<b>146</b>
1.1	Servicing front brakes, Girling . . . . .	146
1.2	Checking brake lining thickness . . . . .	150
1.3	Replacing brake linings (Girling) . . . . .	150
<b>2</b>	<b>Servicing front brakes, dual-piston version</b> . . . . .	<b>152</b>
2.1	Servicing front brakes, dual-piston version . . . . .	152
2.2	Checking brake lining thickness . . . . .	155
2.3	Replacing brake linings (dual-piston) . . . . .	155
<b>3</b>	<b>Servicing rear brake, disc brake</b> . . . . .	<b>158</b>
3.1	Servicing rear brake, disc brake . . . . .	158
3.2	Checking brake lining thickness . . . . .	161
3.3	Replacing rear brake linings . . . . .	162
3.4	Basic setting of rear brakes . . . . .	163
<b>4</b>	<b>Servicing handbrake</b> . . . . .	<b>164</b>
4.1	Servicing handbrake . . . . .	164
4.2	Removing and installing handbrake lever . . . . .	167
4.3	Adjusting handbrake (vehicles with disc brake) . . . . .	168
<b>5</b>	<b>Removing, installing and servicing pedal cluster</b> . . . . .	<b>170</b>
5.1	Removing, installing and servicing pedal cluster . . . . .	170
5.2	Removing, installing and servicing pedal cluster for vehicles with 169 kW engine . . . . .	175
<b>47</b>	<b>Brakes, Brake hydraulics</b> . . . . .	<b>185</b>
<b>1</b>	<b>Servicing front brake calliper</b> . . . . .	<b>185</b>
1.1	Servicing front brake calliper . . . . .	185
1.2	Girling brake calliper . . . . .	185
1.3	Dual-piston brake calliper . . . . .	190
<b>2</b>	<b>Servicing rear brake callipers</b> . . . . .	<b>196</b>
2.1	Servicing rear brake callipers . . . . .	196
<b>3</b>	<b>Servicing brake master cylinder/brake servo</b> . . . . .	<b>202</b>
3.1	Servicing brake master cylinder/brake servo . . . . .	202
3.2	Vehicles with 6-cylinder engine as of chassis no. 8C NA 132 158 . . . . .	214

3.3	Replacing sealing plug (pushrod circuit) . . . . .	224
<b>4</b>	<b>Components of hydraulic brake servo system . . . . .</b>	<b>226</b>
4.1	Components of hydraulic brake servo system . . . . .	226
4.2	Checking operating pressure of hydraulic servo unit . . . . .	233
4.3	Measuring piston pump delivery . . . . .	235
4.4	Checking charging pressure of pressure accumulator . . . . .	236
4.5	Checking relief valve in pressure accumulator . . . . .	237
4.6	Checking non-return valve in pressure accumulator for leaks . . . . .	238
4.7	Removing and installing brake master cylinder/hydraulic servo unit . . . . .	239
<b>5</b>	<b>Location of brake pressure regulator . . . . .</b>	<b>246</b>
5.1	Location of brake pressure regulator . . . . .	246
5.2	Checking brake pressure regulator, up to model year 1992 . . . . .	249
5.3	Checking brake pressure regulator, from model year 1992 . . . . .	250
<b>6</b>	<b>Bleeding braking system and brake fluid replacement . . . . .</b>	<b>251</b>
6.1	Bleeding braking system and brake fluid replacement . . . . .	251
6.2	Bleeding brake system . . . . .	251
6.3	Brake fluid replacement . . . . .	251
<b>48 - Steering . . . . .</b>		<b>253</b>
<b>1</b>	<b>Steering box components . . . . .</b>	<b>253</b>
1.1	Steering box components . . . . .	253
1.2	Tightening sequence for bolted connection between steering box and track rod driver . . . . .	265
<b>2</b>	<b>Removing and installing steering box . . . . .</b>	<b>268</b>
2.1	Removing and installing steering box . . . . .	268
<b>3</b>	<b>Servicing power-assisted steering . . . . .</b>	<b>273</b>
3.1	Servicing power-assisted steering . . . . .	273
3.2	Replacing seal in valve housing . . . . .	282
3.3	Fitting rack . . . . .	283
<b>4</b>	<b>Servicing power-assisted steering with Servotronic . . . . .</b>	<b>285</b>
4.1	Servicing power-assisted steering with Servotronic . . . . .	285
4.2	Fitting rack . . . . .	295
4.3	Checking power supply for Servotronic control unit . . . . .	297
4.4	Checking wiring between plug at Servotronic control unit and plug at Servotronic valve . . . . .	298
4.5	Checking Servotronic valve . . . . .	299
4.6	Checking valve wiring for short to earth . . . . .	299
4.7	Checking valve wiring for short to positive . . . . .	300
<b>5</b>	<b>Removing and installing steering column with column tube . . . . .</b>	<b>300</b>
5.1	Removing and installing steering column with column tube . . . . .	300
<b>6</b>	<b>Servicing steering column with column tube . . . . .</b>	<b>306</b>
6.1	Servicing steering column with column tube . . . . .	306
<b>7</b>	<b>Removing and installing steering wheel . . . . .</b>	<b>313</b>
7.1	Removing and installing steering wheel . . . . .	313
7.2	Standard version . . . . .	313
7.3	Sports steering wheel . . . . .	315
7.4	Solid-wood steering wheel . . . . .	320
7.5	Airbag steering wheel . . . . .	324
<b>8</b>	<b>Checking delivery pressure of vane pump . . . . .</b>	<b>327</b>
8.1	Checking delivery pressure of vane pump . . . . .	327
8.2	Vehicles with 4-cylinder engine . . . . .	327
8.3	Vehicles with 5-cylinder engine . . . . .	329
8.4	Vehicles with 6-cylinder engine . . . . .	331
8.5	169 kW engine, tandem pump . . . . .	333
<b>9</b>	<b>Removing and installing vane pump, 4-cylinder engine . . . . .</b>	<b>335</b>
9.1	Removing and installing vane pump, 4-cylinder engine . . . . .	335
9.2	Tensioning or replacing V-belt for vane pump . . . . .	340



<b>10</b>	<b>Removing and installing ZF vane pump, 5-cylinder engine</b> .....	<b>341</b>
10.1	Removing and installing ZF vane pump, 5-cylinder engine .....	341
10.2	Tensioning or replacing V-belt for ZF vane pump .....	344
<b>11</b>	<b>Servicing vane pump, ZF pump</b> .....	<b>345</b>
11.1	Servicing vane pump, ZF pump .....	345
11.2	Checking pressure and current limiting valve .....	350
<b>12</b>	<b>Removing and installing Vickers vane pump, 5-cylinder engine</b> .....	<b>351</b>
12.1	Removing and installing Vickers vane pump, 5-cylinder engine .....	351
12.2	Tensioning or replacing V-belt for Vickers vane pump .....	355
<b>13</b>	<b>Removing and installing tandem pump, vehicles with 169 kW engine</b> .....	<b>356</b>
13.1	Removing and installing tandem pump, vehicles with 169 kW engine .....	356
13.2	Tensioning or replacing V-belt for tandem pump .....	362
<b>14</b>	<b>Removing and installing hydraulic fluid cooler for vane pump</b> .....	<b>363</b>
14.1	Removing and installing hydraulic fluid cooler for vane pump .....	363
14.2	Vehicles with 4-cylinder and 4-valve engine, vehicles with 6-cylinder engine .....	363
14.3	Vehicles with 5-cylinder engine .....	365
14.4	Topping up hydraulic fluid - bleeding steering system .....	366
14.5	Check steering system for leaks .....	367
<b>15</b>	<b>Removing and installing fluid reservoir</b> .....	<b>368</b>
15.1	Removing and installing fluid reservoir .....	368