

## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis</b> .....	<b>1</b>
1.1 Self-diagnosis .....	1
1.2 Immobiliser self-diagnosis .....	1
1.3 Connecting V.A.G 1551 fault reader .....	1
1.4 Starting immobiliser self-diagnosis .....	2
1.5 Interrogate fault memory .....	3
1.6 Erase fault memory .....	3
1.7 Reading measured value block .....	4
1.8 Immobiliser fault table .....	5
1.9 Performing vehicle key adaptation .....	5
1.10 Adaptation during engine control unit replacement .....	7
1.11 Testing system .....	8
1.12 Lost key procedure .....	9
1.13 Establishing code number .....	9
<b>27 - Starter, Current supply</b> .....	<b>10</b>
<b>1 Checking and charging battery</b> .....	<b>10</b>
1.1 Checking and charging battery .....	10
1.2 Checking electrolyte level .....	10
1.3 Measuring voltage under load .....	10
1.4 Checking specific gravity of acid .....	11
1.5 Notes on handling batteries .....	11
1.6 Charging battery .....	11
1.7 Quick charging/starting boost .....	12
<b>90 - Gauges, Instruments</b> .....	<b>13</b>
<b>1 Dash panel insert</b> .....	<b>13</b>
1.1 Dash panel insert .....	13
1.2 VDO dash panel insert - exploded view .....	14
1.3 Nippon Seiki dash panel insert - exploded view .....	17
1.4 Removing and installing dash panel insert .....	19
1.5 Assignment of lamps in dash panel insert .....	20
1.6 Assignment of contacts at multi-pin dash panel insert connectors .....	23
1.7 Removing and attaching multi-pin connector plugs .....	26
1.8 Repairing multi-pin connector plugs .....	27
<b>2 Checking dash panel insert components</b> .....	<b>28</b>
2.1 Checking dash panel insert components .....	28
2.2 Checking voltage stabilizer .....	28
2.3 Checking and adjusting fuel gauge .....	29
2.4 Checking oil pressure switch - vehicles with mini-check system .....	30
2.5 Checking oil pressure switch - vehicles with auto-check system .....	31
2.6 Checking coolant temperature gauge .....	31
2.7 Checking speedometer sensor .....	35
2.8 Checking speedometer signal at instrument panel wiring harness .....	36
2.9 Checking engine speed signal .....	37
<b>3 Removal and installation of dash panel insert components:</b> .....	<b>37</b>
3.1 Removal and installation of dash panel insert components: .....	37
3.2 VDO dash panel insert .....	38
3.3 Removing and installing VDO printed circuit board .....	45
3.4 Removing and installing VDO front surround .....	45
3.5 Removing and installing VDO speedometer .....	46
3.6 Removing and installing VDO rev counter .....	46
3.7 Removing and installing VDO fuel gauge .....	47



3.8	Removing and installing VDO coolant temperature gauge . . . . .	47
3.9	Removing and installing VDO digital clock . . . . .	47
3.10	Removing and installing VDO analogue clock . . . . .	48
3.11	Nippon Seiki dash panel insert . . . . .	50
3.12	Removing and installing Nippon Seiki printed circuit board . . . . .	58
3.13	Removing and installing Nippon Seiki front surround . . . . .	58
3.14	Removing and installing Nippon Seiki speedometer . . . . .	60
3.15	Removing and installing Nippon Seiki rev counter . . . . .	60
3.16	Removing and installing Nippon Seiki fuel gauge . . . . .	61
3.17	Removing and installing Nippon Seiki coolant temperature gauge . . . . .	62
3.18	Removing and installing Nippon Seiki digital clock . . . . .	62
3.19	Removing and installing brightness control for dash panel insert lighting, switches and instruments . . . . .	63
3.20	Removing and installing pedestal lamps . . . . .	63
3.21	Removing and installing display unit for mini-check system. . . . .	64
3.22	Removing and installing display unit for auto-check system/on-board computer. . . . .	64
3.23	Removing and installing voltage stabilizer . . . . .	64
3.24	Removing and installing gear indicator . . . . .	65
3.25	5-pin connector behind dash panel insert for gear indicator . . . . .	65
3.26	Removing and installing outside temperature gauge . . . . .	66
3.27	5-pin connector behind dash panel insert for outside temperature gauge . . . . .	67
3.28	Checking outside temperature gauge . . . . .	68
3.29	Removing and installing outside temperature gauge sensor . . . . .	69
<b>4</b>	<b>Additional instruments . . . . .</b>	<b>69</b>
4.1	Additional instruments . . . . .	69
4.2	Servicing additional instruments > 01.92 . . . . .	70
4.3	Servicing additional instruments 02.92 ä . . . . .	73
4.4	Removing and installing components of additional instruments 02.92 ä . . . . .	77
4.5	Checking oil pressure gauge . . . . .	80
4.6	Checking oil temperature gauge . . . . .	81
4.7	Checking voltmeter . . . . .	82
<b>91</b>	<b>Radio, 2-way radio, Telephone . . . . .</b>	<b>83</b>
<b>1</b>	<b>Car radio systems . . . . .</b>	<b>83</b>
1.1	Car radio systems . . . . .	83
1.2	Radio systems - general layout . . . . .	84
1.3	Removing and installing the radio > 06.94 . . . . .	86
1.4	Removing and installing radio 07.94 ä . . . . .	86
1.5	Removing and installing amplifier ("gamma CD" radio only) . . . . .	87
<b>2</b>	<b>Structure of radio systems . . . . .</b>	<b>88</b>
2.1	Structure of radio systems . . . . .	88
2.2	"Alpha" and "Beta" radio > 06.94 . . . . .	88
2.3	"Gamma CC" radio > 06.94 . . . . .	89
2.4	"Gamma CD" radio > 06.94 . . . . .	91
2.5	"Beta" radio 07.94 ä . . . . .	93
2.6	"Gamma" radio 07.94 ä . . . . .	94
<b>3</b>	<b>Layout of loudspeaker systems . . . . .</b>	<b>96</b>
3.1	Layout of loudspeaker systems . . . . .	96
3.2	Removing and installing front loudspeaker . . . . .	98
3.3	Removing and installing rear loudspeaker . . . . .	99
<b>4</b>	<b>Layout of aerial systems . . . . .</b>	<b>104</b>
4.1	Layout of aerial systems . . . . .	104
4.2	Removing and installing rod aerial . . . . .	108
4.3	Removing and installing power aerial . . . . .	110
4.4	Avant roof aerial > 06.94 . . . . .	112
4.5	Roof aerial with amplifier, Avant 07.94 ä . . . . .	114

<b>92 - Windscreen wipe and wash system</b> . . . . .	<b>117</b>
<b>1 Servicing windscreen washer system</b> . . . . .	<b>117</b>
1.1 Servicing windscreen washer system . . . . .	117
<b>2 Servicing windscreen washer system and headlight washer system</b> . . . . .	<b>122</b>
2.1 Servicing windscreen washer system and headlight washer system . . . . .	122
2.2 Removing and installing reservoir for windscreen and headlight washer system . . . . .	130
2.3 Removing and installing jets for windscreen washer system . . . . .	130
<b>3 Servicing rear window wiper system</b> . . . . .	<b>132</b>
3.1 Servicing rear window wiper system . . . . .	132
3.2 Removing and installing rear window wiper arm . . . . .	132
3.3 Removing and installing rear window wiper motor . . . . .	133
3.4 Removing, installing and adjusting jet for rear window washer system . . . . .	135
<b>94 - Lights, Lamps, Switches - exterior</b> . . . . .	<b>137</b>
<b>1 Servicing headlights</b> . . . . .	<b>137</b>
1.1 Servicing headlights . . . . .	137
1.2 Servicing headlights, 4- and 5-cylinder . . . . .	138
1.3 Servicing dual headlights, 6-cylinder, S2 . . . . .	144
1.4 Servicing electrical headlight range adjustment . . . . .	151
1.5 Removing and installing control motor . . . . .	154
1.6 Removing and installing dual headlight control motor . . . . .	155
<b>2 Servicing tail light</b> . . . . .	<b>156</b>
2.1 Servicing tail light . . . . .	156
<b>3 Removing and installing steering column switch</b> . . . . .	<b>160</b>
3.1 Removing and installing steering column switch . . . . .	160
3.2 Servicing steering column switch . . . . .	164
<b>4 Removing and installing ignition switch</b> . . . . .	<b>169</b>
4.1 Removing and installing ignition switch . . . . .	169
<b>5 Removing and installing steering column lock switch with lock cylinder</b> . . . . .	<b>171</b>
5.1 Removing and installing steering column lock switch with lock cylinder . . . . .	171
<b>96 - Lights, Lamps, Switches - interior</b> . . . . .	<b>174</b>
<b>1 Servicing switches in centre console</b> . . . . .	<b>174</b>
1.1 Servicing switches in centre console . . . . .	174
1.2 Removing and installing pushbutton switches . . . . .	177
1.3 Replacing bulbs in pushbutton switches . . . . .	178
1.4 Checking switch for electrically heated mirrors 07.92 ä . . . . .	178
<b>2 Electric window lifters</b> . . . . .	<b>179</b>
2.1 Electric window lifters . . . . .	179
2.2 Front electric window lifter - exploded view . . . . .	180
2.3 Rear electric window lifters - exploded view . . . . .	185
2.4 Dismantling and assembling electric window lifters . . . . .	190
<b>3 Electrically adjustable seats</b> . . . . .	<b>194</b>
3.1 Electrically adjustable seats . . . . .	194
3.2 Electrically adjustable seat - exploded view . . . . .	195
3.3 Electrically adjustable backrest - exploded view . . . . .	200
3.4 Removing and installing switch unit on seat . . . . .	201
3.5 Removing and installing front/rear seat height adjustment motor . . . . .	202
3.6 Removing and installing longitudinal adjustment motor . . . . .	202
3.7 Removing and installing front/rear height adjuster . . . . .	203
3.8 Removing and installing longitudinal adjuster . . . . .	203
3.9 Removing and installing backrest adjustment motor . . . . .	203
3.10 Functional test of electrically adjustable seats . . . . .	203
<b>4 Servicing cruise control system</b> . . . . .	<b>204</b>



4.1	Servicing cruise control system . . . . .	204
4.2	Testing vacuum system for cruise control . . . . .	210
<b>5</b>	<b>  Servicing immobiliser . . . . .</b>	<b>211</b>
5.1	Servicing immobiliser . . . . .	211
5.2	Overview . . . . .	211
5.3	Removing and installing immobiliser control unit . . . . .	212
5.4	Replacing reader coil -D2 . . . . .	213
<b>97</b>	<b>- Wiring . . . . .</b>	<b>214</b>
<b>1</b>	<b>  Relay plate . . . . .</b>	<b>214</b>
1.1	Relay plate . . . . .	214
1.2	Removing and installing relay plate with fuse box . . . . .	214
1.3	Removing and installing auxiliary relay carrier with connector point . . . . .	220