

Contents

01	Self diagnosis	Page
	Self-diagnosis of driver and front passenger airbag system (Airbag II)	01-1
	– General	01-1
	– Connecting V.A.G 1551 fault reader	01-3
	– Starting airbag system self-diagnosis	01-4
	– Interrogating fault memory	01-6
	– Erase fault memory	01-8
	– Fault table 10.92 ▶ 06.93	01-9
	– Fault table 07.93 ▶	01-13
	Self-diagnosis of driver and front passenger airbag system BTU (Basic Triggering Unit; Airbag IV and V)	01-19
	– General	01-19
	– Starting airbag system self-diagnosis.....	01-21
	– Fault table for the airbag system BTU (Airbag IV and V).....	01-24
	– Coding control unit	01-35
	– Reading measured value block	01-38
50	Body front	Page
	Body, front	50-1
	– Removing and installing rear cross panel	50-1
	Removing and installing front wing	50-7
	Removing and installing noise insulation	50-11
55	Bonnet, Flaps	Page
	Bonnet	55-1
	– Removing and installing bonnet	55-1
	– Releasing gas from gas-filled strut.....	55-6
	– Removing and installing bonnet Bowden cable.....	55-7
	Boot lid	55-8
	– Removing and installing boot lid (Saloon)	55-8
	– Removing and installing tailgate (Avant)	55-13
	– Removing and installing boot lid lock (Saloon)	55-16
	– Tailgate lock with operating components (Avant)	55-22
57	Front doors/Door components/Central locking system	Page
	Front door	57-1
	– Door shell - exploded view	57-1
	– Door subframe- exploded view	57-5
	– Removing and installing window lifter.....	57-10
	Door lock with operating mechanism - exploded overview	57-12
	Front door handle - exploded view	57-17
	Adjusting door - adjustment sequence	57-20
	– I - Adjusting door shell - Overview	57-20
	– II - Adjusting door subframe - Overview	57-22
	Central locking system	57-28
	– Central locking, saloon ▶ 06.93 - exploded view.....	57-29
	– Central locking saloon 07.93 ▶ - exploded view.....	57-35
	– Central lockingAvant - exploded view	57-40
	– Synchronising key for infrared remote control.....	57-44
58	Rear doors/Door components	Page
	Rear door	58-1
	– Door shell - exploded view	58-1
	– Door subframe - exploded view	58-4
	– Removing and installing window lifter.....	58-10
	Rear door lock with operating components - exploded view	58-12
	Adjusting door - adjustment sequence	58-19
	– I - Adjusting door shell - Overview	58-19
	– II - Adjusting door subframe - overview	58-21

60	Sliding/tilting roof	Page
	Sliding/tilting roof, Saloon	60-1
	– Sliding/tilting roof: Exploded view	60-1
	– Manual cable drive - exploded view	60-8
	– Electric cable drive - exploded view.....	60-10
	– Sliding/tilting roof panel: Exploded view.....	60-12
	– Adjustment work - order	60-18
	– Adjusting zero setting.....	60-23
	– Removing and installing sliding/tilting roof (assembly unit).....	60-26
	– Removing and installing rear locators (and cables).....	60-31
	– Removing and installing tilt mechanism and guide plates.....	60-34
	Schiebe-/Ausstelldach Limousine	60-1
	– Schiebe-/Ausstelldach - Montageübersicht	60-1
	– Manueller Seilzugantrieb - Montageübersicht	60-8
	– Elektrischer Seilzugantrieb - Montageübersicht.....	60-10
	– Schiebe-/Ausstelldachdeckel - Montageübersicht	60-12
	– Einstellarbeiten - Reihenfolge.....	60-18
	– Nullstellung einstellen	60-23
	– Schiebe-/Ausstelldach (Montageeinheit) aus- und einbauen	60-26
	– Führungen hinten (mit Seilzügen) aus- und einbauen.....	60-31
	– Aussteller und Kulissenführungen aus- und einbauen	60-34
	Sliding/tilting roof, Avant	60-36
	– Sliding/tilting roof: Exploded view	60-36
	– Sliding/tilting roof panel: Exploded view.....	60-39
	– Removing and installing sliding/tilting roof panel	60-42
	– Removing and installing headliner frame.....	60-43
	– Removing and installing sliding roof motor	60-45
	– Testing and adjusting motor zero-setting.....	60-46
	– Removing and installing guide plate with cable	60-47
	– Testing and adjusting guide plate zero-setting.....	60-48
	– Adjusting height of sliding/tilting roof panel.....	60-49
	Cleaning water drain hoses	60-50
63	Bumpers	Page
	Front bumper	63-1
	– Front bumper- exploded view	63-1
	Rear bumper	63-6
	– Rear bumper, Saloon- exploded view.....	63-6
	– Rear bumper, Avant - exploded view	63-10
64	Glazing	Page
	Flush-bonded windows	64-1
	– Removing and installing flush-bonded windows - general	64-1
	Removing and installing windscreen	64-8
	– Removal	64-8
	– Installing.....	64-14
	Removing and installing rear window	64-19
	– Removal and installation (Saloon).....	64-19
	– Removal and installation (Avant).....	64-27
	– Removing and installing trim cover.....	64-35
	Removing and installing side window	64-38
	– Removal and installation (Saloon).....	64-38
	– Removal and installation (Avant).....	64-45
66	Exterior equipment	Page
	Radiator grille	66-1
	– Removing and installing radiator grille.....	66-1
	Wheel housing liners	66-2
	– Removing and installing front wheel housing liner	66-2

– Removing and installing rear wheel housing liner	66-4
B-pillar and C-pillar trims	66-5
– Removing and installing B-pillar trim (Saloon)	66-5
– Removing and installing B-pillar trim (Avant)	66-6
– Removing and installing C-pillar trim (Avant)	66-8
Protective trim strips	66-9
– Removing and installing protective trim strips	66-9
Trim cover for side member	66-11
– Removing and installing trim cover for side member	66-11
– PUR-bonding	66-13
Roof trim strip	66-16
– Removing and installing roof trim strip (Saloon)	66-16
– Removing and installing roof trim strip (Avant)	66-21
Wing spoiler	66-24
– Removing and installing wing spoiler	66-24
– Retrofitting wing spoiler	66-25
Roof rail (Avant)	66-26
– Removing and installing roof rail	66-26
Exterior rear-view mirror	66-28
– Removing and installing exterior rear-view mirror	66-28

68

Interior equipment	Page
Seat belts	68-1
– Safety rules for handling pyrotechnic belt tensioners	68-1
– Testing belt tensioners	68-3
– Seat belt anchorage points - overview	68-4
– A - Removing and installing coupling tube for ten cable	68-6
– B - Removing and installing three-point seat belt, B-pillar with mechanical seat belt tensioner	68-9
– B - Removing and installing three-point seat belt, B-pillar with pyrotechnic seat belt tensioner....	68-12
– C - Removing and installing rear three-point seat belt (Saloon)	68-16
– D - Anchorage point, floor group, centre	68-19
– E - Anchorage point, floor group, centre without retractor	68-20
– E - Anchorage point, floor group, centre with retractor	68-21
– F - Anchorage point, floor group, outer	68-21
– G - Anchorage point, seat frame	68-22
– Rear seat belt anchorage points, Avant- overview	68-23
– A - Anchorage point, floor group, outer	68-24
– B - Anchorage point, floor group, centre	68-24
– C - Anchorage point, floor group, centre without retractor	68-25
– C - Anchorage point, floor group, centre with retractor	68-26
– D - Removing and installing rear three-point seat belt	68-26
– Function test on seat belts with retractor function	68-27
Repairing procon ten system, left-hand drive ▶ 06.94	68-28
– Testing procon ten system after an accident	68-28
– Removing and installing procon ten system	68-30
– Removing ten cables	68-32
– Removing procon cable	68-36
– Installing ten cables	68-40
– Installing procon cable	68-48
– Removing and installing cable grab	68-55
– Removing and installing relay block (left)	68-57
– Removing and installing stop block (right)	68-58
– Labelling of ten cables	68-59
Repairing procon ten system, right-hand drive ▶ 06.93	68-60
– Testing procon ten system after an accident	68-60
– Removing and installing procon ten system	68-61
– Removing ten cables	68-63
– Removing procon cable	68-66
– Installing ten cables	68-69
– Installing procon cable	68-76

	– Removing and installing cable grab.....	68-81
	– Removing and installing relay block (right).....	68-83
	– Removing and installing stop block (left).....	68-84
	– Labelling of ten cables.....	68-85
	Removing and installing interior mirror.....	68-86
	– Bonding in retainer plate for interior rear-view mirror.....	68-87
	Removing and installing partition grille (Avant).....	68-88
	Footrest.....	68-90
	– Removing and installing foot rest.....	68-90
69	Passenger protection.....	Page
	Airbag.....	69-1
	– General safety rules.....	69-1
	Repairing airbag.....	69-6
	– Repairing airbag ▶ 09.92.....	69-6
	– Repairing driver and passenger airbag10.92 ▶ 06.94 (Airbag II).....	69-13
	– Repairing driver airbag07.93 ▶ (Airbag IV) Repairing driver and front passenger airbag07.94 ▶ (Airbag IV and V).....	69-23
	– Removing and installing driver airbag unit for sports steering wheel.....	69-27
	– Retrofitting airbag sports steering wheel.....	69-32
70	Trim/Insulation.....	Page
	Door trims.....	70-1
	– Removing and installing front door trim (4- and 5-cylinder ▶ 06.93).....	70-1
	– Removing and installing front door trim (4- and 5-cylinder 07.93 ▶, 6-cylinder, S2).....	70-11
	– Removing and installing rear door trim.....	70-19
	Trims.....	70-26
	– Removing and installing A-pillar trim.....	70-26
	– Removing and installing inner sill panel.....	70-28
	– Removing and installing B-pillar trim.....	70-31
	– Removing and installing C-pillar trim (Saloon).....	70-33
	– Removing D-pillar trim (Saloon).....	70-33
	– Removing and installing rear shelf.....	70-34
	– Removing C-pillar trim (Avant).....	70-35
	– Removing and installing D-pillar trim (Avant).....	70-35
	– Removing roof frame trim (Avant).....	70-36
	– Removing and installing rear lock plate trim and boot side trim (Avant).....	70-37
	– Removing tailgate trims (Avant).....	70-42
	Roof trim.....	70-43
	– Replacing moulded headliner.....	70-43
	– Removing moulded headliner.....	70-44
	– Installing moulded headliner.....	70-49
	Dash panel.....	70-53
	– Removing and installing dash panel.....	70-53
	– Dash panel, left-hand drive - Exploded view.....	70-54
	– Dash panel, right-hand drive - exploded view.....	70-56
	– Removing and installing handbrake lever trim.....	70-58
	– Removing and installing rear section of centre console.....	70-61
	– Removing and installing front section of centre console.....	70-62
	– Removing dash panel centre section.....	70-64
	– Remove compartment on driver's side.....	70-66
	– Removing passenger side cover.....	70-67
	– Removing and installing glove compartment.....	70-68
72	Seat frames.....	Page
	Front seat.....	72-1
	– Removing and installing front seat.....	72-1
	– Removing and installing backrest.....	72-4
	Recaro seat, front.....	72-8
	– Removing and installing front seat.....	72-8
	– Removing and installing backrest.....	72-9

	– Removing and installing seat frame	72-11
74	Rear seat	72-12
	– Removing and installing rear backrest bench (Saloon)	72-12
	– Removing and installing fold-down rear backrest (Saloon)	72-13
	– Removing and installing rigid rear backrest (Saloon)	72-16
	– Removing and installing rear seat bench (Avant)	72-17
	– Removing and installing rear backrest (Avant).....	72-19
	Seats - Upholstery, Covers	Page
	Front seat	74-1
	– Removing and installing seat cover	74-1
	– Removing and installing backrest cover	74-4
	– Replacing seat heater element	74-7
	– Replacing backrest heater element	74-9
	Recaro seat, front	74-15
	– Removing and installing seat cover and seat padding centre section	74-15
	– Removing and installing seat cover for seat height adjuster	74-18
	– Removing and installing seat padding for seat height adjuster	74-18
	– Removing and installing seat cover/padding, left and right.....	74-19
	– Removing and installing backrest cover/padding centre section	74-20
	– Removing and installing backrest cover	74-22
	– Removing and installing backrest padding	74-23
	– Removing and installing head restraints	74-24
	– Replacing seat heater element	74-25
	– Replacing backrest heater element	74-26
	Rear seat	74-27
	– Removing and installing rear seat cover (Saloon).....	74-27
	– Removing and installing rear seat cover (Avant)	74-28
	– Removing and installing rear seat backrest cover (Saloon)	74-29
	– Removing and installing rear seat backrest cover (fold-down backrest).....	74-30
	Frame-type head restraints	74-33
	– Removing and installing frame-type head restraint cover	74-33