

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Transmission layout	10
2.1 Transmission layout	10
3 Calculations	12
3.1 Calculations	12
3.2 Calculating transmission ratios "i"	12
4 General repair instructions	12
4.1 General repair instructions	12
30 - Clutch	16
1 Servicing clutch mechanism	16
1.1 Servicing clutch mechanism	16
1.2 Assembly overview, pedal cluster	17
1.3 Hydraulic system - general layout	22
1.4 Removing and installing master cylinder	24
1.5 Bleeding clutch system	26
2 Servicing clutch release mechanism	27
2.1 Servicing clutch release mechanism	27
3 Servicing clutch	31
3.1 Servicing clutch	31
34 - Controls, Housing	38
1 Servicing selector mechanism	38
1.1 Servicing selector mechanism	38
1.2 Removing and installing selector mechanism	44
1.3 Adjusting gear selector mechanism	45
1.4 Checking gear stick adjustment	47
2 Removing and installing gearbox	47
2.1 Removing and installing gearbox	47
2.2 Securing gearbox to repair stand	57
2.3 Transporting the gearbox	58
3 Checking oil level in gearbox	62
3.1 Checking oil level in gearbox	62
4 Dismantling and assembling gearbox	63
4.1 Dismantling and assembling gearbox	63
4.2 Overview	64
4.3 Assembly overview	65
4.4 Removing and installing input shaft ball bearing and multi-function sender	66
4.5 Removing and installing input shaft, pinion shaft, selector rods and gearbox cover	70
4.6 Removing and installing input shaft ball bearing, multi-function sender, input shaft, pinion shaft, selector rods and gearbox cover	73
5 Dismantling and assembling selector mechanism in gearbox	82
5.1 Dismantling and assembling selector mechanism in gearbox	82
35 - Gears, Shafts	90
1 Dismantling and assembling input shaft	90
1.1 Dismantling and assembling input shaft	90
2 Adjusting input shaft	105
2.1 Adjusting input shaft	105

3	Dismantling and assembling pinion shaft	107
3.1	Dismantling and assembling pinion shaft	107
4	Removing and installing reverse gear wheel	129
4.1	Removing and installing reverse gear wheel	129
39 - Final drive, Differential	131	
1	Renewing seal for flange shaft	131
1.1	Renewing seal for flange shaft	131
2	Removing and installing speedometer sender and drive wheel	134
2.1	Removing and installing speedometer sender and drive wheel	134
2.2	Removing and installing speedometer sender -G22	134
2.3	Removing and installing speedometer drive wheel	134
3	Removing and installing differential	136
3.1	Removing and installing differential	136
4	Dismantling and assembling differential	141
4.1	Dismantling and assembling differential	141
5	Adjusting pinion shaft and crown wheel	151
5.1	Adjusting pinion shaft and crown wheel	151
5.2	Adjusting and marking of gear sets	151
5.3	Position of shims	153
5.4	Adjustment overview	154
5.5	Recommended sequence for readjusting final drive set	154
5.6	Adjusting pinion shaft	155
5.7	Re-determining "S4" shim when fitting new gearbox cover	164
5.8	Adjusting crown wheel	166