

Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Identification of gearbox	1
1.2 Code letters, mechanical unit assignment, transmission ratios, capacities	2
2 Rear final drive identification	5
2.1 Rear final drive identification	5
2.2 Code letters, mechanical unit assignment, transmission ratios, capacities	6
3 Transmission layout	7
3.1 Transmission layout	7
3.2 Notes on performance, brake testing and towing/tow starting	8
4 Calculations	9
4.1 Calculations	9
4.2 Calculating transmission ratios "i"	9
5 General repair instructions	9
5.1 General repair instructions	9
30 - Clutch	13
1 Servicing clutch mechanism	13
1.1 Servicing clutch mechanism	13
1.2 Assembly overview, foot pedal cluster	14
1.3 Assembly overview - Hydraulic system	19
1.4 Removing and installing master cylinder	21
1.5 Bleeding clutch system	23
2 Servicing clutch release mechanism	24
2.1 Servicing clutch release mechanism	24
3 Servicing clutch	28
3.1 Servicing clutch	28
34 - Controls, Housing	35
1 Servicing shift mechanism	35
1.1 Servicing shift mechanism	35
1.2 Removing and installing shift mechanism	41
1.3 Adjust shift mechanism	42
1.4 Checking gear stick alignment	44
2 Removing and installing gearbox	45
2.1 Removing and installing gearbox	45
2.2 Removing	45
2.3 Securing gearbox to repair stand	55
2.4 Transporting the gearbox	56
2.5 Installing	56
3 Checking oil level in manual gearbox	60
3.1 Checking oil level in manual gearbox	60
4 Removing and installing cover with Torsen differential	60
4.1 Removing and installing cover with Torsen differential	60
5 Dismantling and assembling gearbox	62
5.1 Dismantling and assembling gearbox	62
5.2 Gearbox overview	62
5.3 Assembly overview	64
5.4 Removing and installing input shaft ball bearing and multi-function sender	65
5.5 Removing and installing input shaft, drive pinion, hollow shaft, selector rods, gearbox cover and cover with Torsen differential	69



5.6	Removing and installing input shaft ball bearing, multi-function sender, input shaft, drive pinion, selector rods, gearbox cover and cover with Torsen differential	73
6	Servicing cover for Torsen differential, removing and installing Torsen differential	82
6.1	Servicing cover for Torsen differential, removing and installing Torsen differential	82
7	Dismantling and assembling shift mechanism in gearbox	90
7.1	Dismantling and assembling shift mechanism in gearbox	90
35 - Gears, Shafts		98
1	Dismantling and assembling input shaft	98
1.1	Dismantling and assembling input shaft	98
2	Adjusting input shaft	113
2.1	Adjusting input shaft	113
3	Dismantling and assembling drive pinion and hollow shaft	115
3.1	Dismantling and assembling drive pinion and hollow shaft	115
4	Removing and installing reverse idler gear	137
4.1	Removing and installing reverse idler gear	137
39 - Final drive, Differential rear		139
1	Replacing flange shaft oil seal	139
1.1	Replacing flange shaft oil seal	139
2	Replacing oil seal for Flange shaft/propshaft	142
2.1	Replacing oil seal for Flange shaft/propshaft	142
3	Removing and installing speedometer sender and drive wheel	144
3.1	Removing and installing speedometer sender and drive wheel	144
3.2	Removing and installing speedometer sender -G22	144
3.3	Removing and installing speedometer drive wheel	145
4	Removing and installing differential	146
4.1	Removing and installing differential	146
5	Dismantling and assembling differential	151
5.1	Dismantling and assembling differential	151
6	Adjusting drive pinion and crown wheel	161
6.1	Adjusting drive pinion and crown wheel	161
6.2	Adjusting final drive sets; identification	161
6.3	Position of shims	163
6.4	Adjustment overview	163
6.5	Sequence for re-adjusting final drive set	164
6.6	Adjusting drive pinion	165
6.7	Re-determining "S4" shim when fitting new gearbox cover	175
6.8	Adjusting crown wheel	176
7	Servicing propshaft	183
7.1	Servicing propshaft	183
7.2	Removing and installing propshaft	185
7.3	Measuring radial run-out at flange shaft of rear final drive	188
7.4	Adjusting propshaft	189
8	Checking oil level in rear final drive	193
8.1	Checking oil level in rear final drive	193
9	Removing and installing thrust tube	194
9.1	Removing and installing thrust tube	194
9.2	Assembly overview	194
9.3	Removing and installing thrust tube	195
10	Dismantling and assembling thrust tube - assembly overview	198
10.1	Dismantling and assembling thrust tube - assembly overview	198
10.2	Dismantling and assembling thrust tube	201
11	Replacing flange shaft oil seals	204

11.1	Replacing flange shaft oil seals204
12	Removing and installing rear final drive208
12.1	Removing and installing rear final drive208
12.2	Securing rear final drive to repair stand212
13	Dismantling and assembling rear final drive213
13.1	Dismantling and assembling rear final drive213
13.2	Assembly overview213
13.3	Removing and installing differential216
14	Dismantling and assembling differential222
14.1	Dismantling and assembling differential222
15	Removing and installing and dismantling and assembling drive pinion233
15.1	Removing and installing and dismantling and assembling drive pinion233
16	Servicing differential lock actuator241
16.1	Servicing differential lock actuator241
16.2	Removing and installing control unit for differential lock actuator241
16.3	Removing and installing differential lock control switch242
16.4	Routing diagram for piping and hoses244
16.5	Removing and installing vacuum element250
16.6	Dismantling and assembling differential lock251
16.7	Adjusting flange shaft, left257
17	Adjusting drive pinion and crown wheel259
17.1	Adjusting drive pinion and crown wheel259
17.2	Adjusting final drive sets; identification260
17.3	Sequence for re-adjusting final drive set261
17.4	Adjustment overview262
17.5	Position of shims263
17.6	Adjusting drive pinion264
17.7	Adjusting crown wheel270