

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
2 Code letters, allocation, ratios, capacities	2
2.1 Code letters, allocation, ratios, capacities	2
3 Identification of rear final drive	3
3.1 Identification of rear final drive	3
4 Code letters, allocation, ratios, capacities	4
4.1 Code letters, allocation, ratios, capacities	4
5 Transmission layout	5
5.1 Transmission layout	5
5.2 Notes on engine output/brake test and towing/tow starting	7
6 Calculations	8
6.1 Calculations	8
6.2 Calculating transmission ratios "i"	8
6.3 Calculating speed "V"	8
7 Repair instructions	9
7.1 Repair instructions	9
30 - Clutch	12
1 Servicing clutch mechanism	12
1.1 Servicing clutch mechanism	12
1.2 Assembly overview, pedal cluster	12
1.3 Assembly overview, hydraulics	19
1.4 Bleeding clutch system	21
2 Servicing clutch release mechanism	23
2.1 Servicing clutch release mechanism	23
2.2 Removing and installing clutch slave cylinder	27
3 Servicing clutch	28
3.1 Servicing clutch	28
34 - Controls, Housing	32
1 Servicing selector mechanism	32
1.1 Servicing selector mechanism	32
1.2 Removing and installing gear stick	32
1.3 Removing and installing selector rod - assembly overview	37
1.4 Removing and installing selector rod	39
1.5 Renewing shaft seal for selector shaft	40
2 Adjusting and checking selector mechanism	42
2.1 Adjusting and checking selector mechanism	42
2.2 Checking gear stick setting	43
3 Removing and installing gearbox	44
3.1 Removing and installing gearbox	44
4 Checking oil level in gearbox	51
4.1 Checking oil level in gearbox	51
5 Dismantling and assembling gearbox	52
5.1 Dismantling and assembling gearbox	52
5.2 Removing and installing bearing housing, Torsen differential and end cover	53
5.3 Removing and installing gearbox and selector shaft	56
5.4 Removing and installing 5th and 6th gear	58
5.5 Removing and installing input shaft, drive pinion, hollow shaft and internal selector mechanism from bearing plate	62



6	Removing and installing bearing housing, Torsen differential, end cover, internal selector mechanism, input shaft, drive pinion and hollow shaft - assembly sequence	65
6.1	Removing and installing bearing housing, Torsen differential, end cover, internal selector mechanism, input shaft, drive pinion and hollow shaft - assembly sequence	65
6.2	Removing	65
6.3	Installing	74
7	Dismantling and assembling bearing housing	86
7.1	Dismantling and assembling bearing housing	86
8	Servicing bearings for Torsen differential	91
8.1	Servicing bearings for Torsen differential	91
9	Servicing end cover	95
9.1	Servicing end cover	95
10	Servicing bearing plate	100
10.1	Servicing bearing plate	100
10.2	Re-determining shim "S4"	108
11	Servicing gearbox housing	112
11.1	Servicing gearbox housing	112
11.2	Dismantling and assembling selector shaft complete	125
35 - Gears, Shafts		128
1	Dismantling and assembling input shaft	128
1.1	Dismantling and assembling input shaft	128
2	Dismantling and assembling drive pinion and hollow shaft	139
2.1	Dismantling and assembling drive pinion and hollow shaft	139
39 - Final drive, Differential rear		154
1	Renewing seal for flange shaft	154
1.1	Renewing seal for flange shaft	154
2	Removing and installing speedometer sender -G22 and drive wheel for speedometer sender	155
2.1	Removing and installing speedometer sender -G22 and drive wheel for speedometer sender	155
3	Renewing seal and grooved ball bearing for flange for propshaft on gearbox	156
3.1	Renewing seal and grooved ball bearing for flange for propshaft on gearbox	156
4	Removing and installing differential	161
4.1	Removing and installing differential	161
5	Dismantling and assembling differential	163
5.1	Dismantling and assembling differential	163
6	Adjusting drive pinion and crown wheel	174
6.1	Adjusting drive pinion and crown wheel	174
6.2	Adjusting and marking of gear sets	175
6.3	Recommended sequence for readjusting final drive set	176
6.4	Adjustment overview	177
6.5	Position of shims	178
7	Adjusting drive pinion	179
7.1	Adjusting drive pinion	179
8	Adjusting crown wheel	185
8.1	Adjusting crown wheel	185
9	Servicing propshaft	191
9.1	Servicing propshaft	191
9.2	Removing and installing propshaft	193
9.3	Measuring radial run-out at flange shaft of rear final drive	195
9.4	Adjusting propshaft	196
10	Checking oil level in rear final drive	198

10.1	Checking oil level in rear final drive	198
11	Removing and installing thrust tube	199
11.1	Removing and installing thrust tube	199
11.2	Assembly overview	199
11.3	Removing and installing thrust tube	200
12	Dismantling and assembling thrust tube - assembly overview	203
12.1	Dismantling and assembling thrust tube - assembly overview	203
12.2	Dismantling and assembling thrust tube	205
13	Removing and installing oil seals for flange shafts	209
13.1	Removing and installing oil seals for flange shafts	209
14	Removing and installing rear final drive	212
14.1	Removing and installing rear final drive	212
14.2	Securing rear final drive to repair stand	216
15	Dismantling and assembling rear final drive	217
15.1	Dismantling and assembling rear final drive	217
15.2	Assembly overview	217
15.3	Removing and installing differential	220
15.4	Dismantling and assembling differential	227
15.5	Removing and installing drive pinion	238
16	Servicing differential lock actuator	245
16.1	Servicing differential lock actuator	245
16.2	Removing and installing switch for differential lock	245
16.3	Routing hoses and pipes	245
16.4	Removing and installing vacuum element	245
16.5	Dismantling and assembling differential lock	248
16.6	Adjusting left flange shaft	254
17	Adjusting drive pinion and crown wheel	255
17.1	Adjusting drive pinion and crown wheel	255
17.2	Adjusting and marking of gear sets	256
17.3	Recommended sequence for readjusting final drive set	257
17.4	Adjustment overview	258
17.5	Position of shims	259
18	Adjusting drive pinion	259
18.1	Adjusting drive pinion	259
19	Adjusting crown wheel	266
19.1	Adjusting crown wheel	266