

## Contents

		Page
<b>00</b>	<b>Technical data</b>	<b>Page</b>
	Gearbox identification.....	00-1
	Code letters, assignment, ratios, equipment.....	00-3
	Capacities .....	00-13
	General repair information.....	00-15
<b>32</b>	<b>Torque converter</b>	<b>Page</b>
	Torque converter .....	32-1
	- Torque converter identification.....	32-1
	- Checking torque converter .....	32-1
	- Draining torque converter.....	32-2
	- Replacing sealing ring for torque converter .....	32-3
	- Installing torque converter.....	32-5
<b>37</b>	<b>Controls, housing</b>	<b>Page</b>
	<b>Servicing shift mechanism</b> .....	<b>37-1</b>
	- Checking shift mechanism.....	37-1
	- Dismantling and assembling shift mechanism.....	37-4
	- Removing/installing and adjusting selector lever cable .....	37-14
	- Removing/installing and adjusting locking cable .....	37-17
	<b>Checking gearbox</b> .....	<b>37-21</b>
	- Performing self-diagnosis .....	37-21
	- Checking shift points .....	37-21
	- Fault-finding table for "automatic 4-speed gearbox" .....	37-21
	<b>Removing and installing gearbox</b> .....	<b>37-22</b>
	<b>Checking ATF level and topping up</b> .....	<b>37-32</b>
	- Checking ATF level.....	37-33
	- Topping up ATF .....	37-35
	<b>Gearbox with selector elements up to 11.92</b> .....	<b>37-36</b>
	- Position of selector elements on gearboxes up to 11.92 .....	37-37
	<b>Gearbox with selector elements as of 11.92</b> .....	<b>37-38</b>
	- Position of selector elements on gearboxes as of 11.92 .....	37-39
	<b>Dismantling and assembling gearbox</b> .....	<b>37-40</b>
	- Rules for cleanliness when working on automatic gearbox .....	37-41
	- Removing and installing ATF pipes .....	37-42
	- Cleaning ATF pipes and ATF cooler.....	37-46
	<b>Dismantling and assembling planetary gearbox</b> .....	<b>37-48</b>
	- Dismantling planetary gearbox: Exploded view .....	37-49
	- Dismantling planetary gearbox.....	37-54
	- Assembling planetary gearbox: Exploded view.....	37-61
	- I - Installing planet carrier .....	37-63
	- II - Installing reverse gear brake -B1- as far as circlip for supporting tube for -B2-.....	37-66
	- III - Installing small sun gear as far as reverse gear clutch -K2- .....	37-70
	- IV - Installing supporting tube for -B2- as far as ATF pump.....	37-75
	- Assembling planetary gearbox.....	37-79
	- Adjustment work on planetary gearbox: Exploded view.....	37-94
	- I - Adjusting planet carrier .....	37-95
	- II - Adjusting reverse gear brake -B1-: Exploded view .....	37-104
	- III - Adjusting clutch play between -K1- and -K2- .....	37-112
	- IV - Adjusting 2nd and 4th gear brake -B2-.....	37-121
<b>38</b>	<b>Gears, hydraulic controls</b>	<b>Page</b>
	<b>Dismantling and assembling ATF pump</b> .....	<b>38-1</b>
	<b>Dismantling and assembling free wheel with -B1- piston</b> .....	38-5
	<b>Dismantling and assembling 1st - 3rd gear clutch -K1- with turbine shaft for gearboxes up to 11.92</b> .....	38-8

<b>Dismantling and assembling 1st - 3rd gear clutch -K1- with turbine shaft for gearboxes as of 11.92.....</b>	<b>38-19</b>
<b>Dismantling and assembling reverse gear clutch -K2- .....</b>	<b>38-27</b>
<b>Dismantling and assembling 3rd and 4th gear clutch -K3- with pump shaft for gearboxes up to 11.92 .....</b>	<b>38-31</b>
<b>Dismantling and assembling 4th gear clutch -K3- with pump shaft for gearboxes as of 11.92.....</b>	<b>38-38</b>
<b>Removing and installing valve body .....</b>	<b>38-44</b>
<b>Dismantling and assembling parking lock.....</b>	<b>38-51</b>

<b>39 Final drive, differential</b>	<b>Page</b>
<b>Checking axle oil in final drive .....</b>	<b>39-1</b>
<b>Replacing sealing rings for left flange shaft or right drive flange (gearbox installed).....</b>	<b>39-2</b>
- Replacing sealing ring for left flange shaft .....	39-2
- Replacing sealing ring for right drive flange.....	39-6
<b>Dismantling and assembling final drive .....</b>	<b>39-11</b>
- Removing and installing input gear.....	39-11
- Removing and installing differential pinion.....	39-21
- Removing and installing differential .....	39-35
- Dismantling and assembling differential .....	39-42
- Removing and installing bevel gears .....	39-52
<b>Adjusting final drive .....</b>	<b>39-55</b>
- Exploded view.....	39-55
- Adjustment work when replacing individual components.....	39-58
- Adjusting input gear .....	39-59
- Adjusting and labelling final drive units .....	39-66
<b>Adjusting differential pinion and final drive gear .....</b>	<b>39-68</b>
- General .....	39-68
- Final drive unit adjustment sequence .....	39-69
- Adjusting differential pinion .....	39-70
- Adjusting final drive gear.....	39-86