

Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Identification of gearbox	1
2 Code letters, gearbox allocation, ratios, equipment	2
2.1 Code letters, gearbox allocation, ratios, equipment	2
3 Capacities	3
3.1 Capacities	3
4 General repair instructions	4
4.1 General repair instructions	4
32 - Torque converter	7
1 Torque converter	7
1.1 Torque converter	7
1.2 Identification of torque converter	8
1.3 Draining torque converter	8
1.4 Fitting a new torque converter oil seal	9
1.5 Checking torque converter	10
1.6 Installing torque convertor	10
37 - Controls, Housing	12
1 Servicing shift mechanism	12
1.1 Servicing shift mechanism	12
1.2 Checking shiftmechanism	12
1.3 Dismantling and assembling shift mechanism	13
1.4 Removing, installing and adjusting selector lever cable	21
1.5 Removing, installing and adjusting locking cable	23
2 Checking gearbox	25
2.1 Checking gearbox	25
2.2 Performing self-diagnosis	25
2.3 Checking shift points	25
2.4 Checking stall speed	25
2.5 Fault finding table for "4-speed automatic gearbox"	25
3 Removing and installing gearbox	25
3.1 Removing and installing gearbox	25
3.2 Securing gearbox to repair stand	35
3.3 Removing and installing gearbox support	36
4 Checking and topping up ATF level	38
4.1 Checking and topping up ATF level	38
4.2 Checking ATF level	38
4.3 Changing ATF or filling up after repairs	42
5 Gearbox with selector elements	45
5.1 Gearbox with selector elements	45
5.2 Position of selector elements	46
6 Dismantling and assembling gearbox	47
6.1 Dismantling and assembling gearbox	47
6.2 Rules for cleanliness when working on the automatic gearbox	47
6.3 Removing and installing ATF pipes	47
6.4 4-cylinder petrol engine	48
6.5 6-cylinder engine	50
6.6 Diesel engine	52
6.7 Cleaning ATF pipes and ATF cooler	53
6.8 Dismantling and assembling planetary gearbox	54



6.9	Dismantling planetary gearbox - overview	54
6.10	Dismantling planetary gearbox	59
6.11	Assembling planet carrier - overview	65
6.12	I - Installing planet carrier	66
6.13	II - Installing components from reverse gear brake -B1- up to circlip for -B2- supporting tube	68
6.14	III - Installing components from large sun gear up to reverse gear clutch -K2-	71
6.15	IV - Installing components from supporting tube for -B2- up to ATF pump	75
6.16	Planetary gearbox adjustments - overview	86
6.17	I - Adjusting planet carrier	87
6.18	II - Adjusting reverse gear brake -B1- - overview	93
6.19	III - Adjusting clutch play between -K1- and -K2-	98
6.20	IV - Adjusting 2nd and 4th gear brake -B2-	102
38	- Gears, Hydraulic controls	109
1	Dismantling and assembling ATF pump	109
1.1	Dismantling and assembling ATF pump	109
2	Dismantling and assembling free wheel with -B1- piston	113
2.1	Dismantling and assembling free wheel with -B1- piston	113
3	Dismantling and assembling 1st to 3rd gear clutch -K1-	116
3.1	Dismantling and assembling 1st to 3rd gear clutch -K1-	116
4	Dismantling and assembling reverse gear clutch -K2-	122
4.1	Dismantling and assembling reverse gear clutch -K2-	122
5	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft	126
5.1	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft	126
6	Removing and installing valve body	132
6.1	Removing and installing valve body	132
6.2	Removing and installing oil pan	139
6.3	Removing and installing ATF screen	140
6.4	Removing and installing valve body	141
6.5	Removing and installing conductor strip with 10-pin connector	143
7	Dismantling and assembling parking lock	144
7.1	Dismantling and assembling parking lock	144
39	- Final drive, Differential	154
1	Checking oil in final drive	154
1.1	Checking oil in final drive	154
2	Renewing flange shaft oil seals	154
2.1	Renewing flange shaft oil seals	154
2.2	Renewing left-hand flange shaft oil seal	154
2.3	Renewing right-hand drive flange oil seal	156
2.4	Removing and installing grooved ball bearing	158
3	Dismantling and assembling final drive	160
3.1	Dismantling and assembling final drive	160
3.2	Repair overview of final drive	160
3.3	Removing and installing input gear	161
3.4	Removing and installing drive pinion	167
3.5	Removing and installing differential	176
3.6	Dismantling and assembling differential	183
3.7	Removing and installing differential bevel gears	189
4	Adjusting final drive	191
4.1	Adjusting final drive	191
4.2	Overview of adjustments	192
4.3	Adjustment overview	194
4.4	Adjusting input gear	195

5	Adjusting drive pinion and crown wheel	198
5.1	Adjusting drive pinion and crown wheel	198
5.2	Adjusting gear sets; identification markings	199
5.3	Recommended sequence for readjusting final drive set	200
5.4	Adjusting drive pinion	201
5.5	Adjusting crown wheel	209
5.6	Adjusting backlash	212