

Contents

| | |
|--|-----------|
| 01 - Self-diagnosis, Electrical check | 1 |
| 1 Function of self-diagnosis | 1 |
| 1.1 Function of self-diagnosis | 1 |
| 1.2 Technical self-diagnosis data | 2 |
| 2 Electric/electronic components and installation locations | 3 |
| 2.1 Electric/electronic components and installation locations | 3 |
| 3 Performing self-diagnosis | 10 |
| 3.1 Performing self-diagnosis | 10 |
| 3.2 Connecting fault reader V.A.G 1551 and selecting functions | 11 |
| 3.3 Overview of function selection | 13 |
| 3.4 Interrogating fault memory | 13 |
| 3.5 Fault table | 14 |
| 3.6 Erasing fault memory | 20 |
| 3.7 Initiating basic setting | 21 |
| 3.8 Reading measured value block | 22 |
| 3.9 Test table | 23 |
| 4 Electrical test | 32 |
| 4.1 Electrical test | 32 |
| 4.2 Test table | 34 |