

Contents

01 - Self-diagnosis	1
1 Self-diagnosis function	1
1.1 Self-diagnosis function	1
1.2 Technical data of self-diagnosis	2
2 Locations of electrical/electronic components	3
2.1 Locations of electrical/electronic components	3
2.2 Adjusting kickdown switch -F8	16
3 Performing self-diagnosis	17
3.1 Performing self-diagnosis	17
3.2 Safety notes	17
3.3 Connecting fault reader V.A.G 1551 (or V.A.G 1552) and selecting functions	17
3.4 List of selectable functions	19
3.5 Interrogating fault memory	20
3.6 Fault table	20
3.7 Erasing fault memory	29
3.8 Initiating basic setting	30
3.9 Read measured value block	31
3.10 Test table	32
4 Electrical test	46
4.1 Electrical test	46
4.2 Test table	50