

Contents

01 - Self-diagnosis	1
1 Mono-Motronic self-diagnosis	1
1.1 Mono-Motronic self-diagnosis	1
1.2 List of control units	1
1.3 Technical data of self-diagnosis	1
1.4 Safety precautions	1
1.5 Connecting vehicle diagnostic, testing and information system VAS 5051/ fault reader V.A.G 1551 and selecting functions	1
2 Interrogating and erasing fault memory	4
2.1 Interrogating and erasing fault memory	4
2.2 Fault table	6
3 Final control diagnosis	12
3.1 Final control diagnosis	12
4 Basic setting	13
4.1 Basic setting	13
5 Encoding control unit	14
5.1 Encoding control unit	14
6 Reading measured value block	15
6.1 Reading measured value block	15
6.2 List of display groups	16
7 Checking wiring of diagnostic connectors	22
7.1 Checking wiring of diagnostic connectors	22
7.2 Checking power supply for "black" diagnostic connector	23
7.3 Checking wiring between "white" diagnostic connector and engine control unit	23
24 - Mixture preparation, Injection	27
1 Servicing Mono-Motronic injection system	27
1.1 Servicing Mono-Motronic injection system	27
1.2 Safety precautions	27
1.3 Rules for cleanliness	27
1.4 Technical data	28
1.5 Exploded view of fitting locations	29
1.6 Removing and installing injection system components	32
1.7 Servicing top part of injection unit	37
1.8 Servicing bottom part of injection unit	40
1.9 Wiring and component check using test box V.A.G 1598/18	43
1.10 Replacing engine control unit	44
1.11 Checking idling speed	46
1.12 Checking system pressure, fuel pressure regulator and holding pressure	48
1.13 Checking injector	52
1.14 Checking overrun shutoff	56
1.15 Checking fuel-pump relay -J17 and actuation	57
1.16 Checking intake system for leaks (unmetered air)	62
2 Checking Lambda control	63
2.1 Checking Lambda control	63
2.2 Checking Lambda probe -G39 and Lambda control	64
2.3 Checking Lambda probe heater -Z19	66
2.4 Removing and installing Lambda probe	69
3 Checking fuel tank breather system	70
3.1 Checking fuel tank breather system	70
3.2 Checking activated charcoal filter solenoid valve -N80	70
4 Checking throttle valve potentiometer -G69	74



4.1	Checking throttle valve potentiometer -G69	74
4.2	Checking throttle valve positioner -V60	77
4.3	Checking throttle valve positioner sender -G127	80
4.4	Checking and adjusting idling switch -F60	83
5	Checking intake air preheating	86
5.1	Checking intake air preheating	86
6	Checking intake-manifold preheating	87
6.1	Checking intake-manifold preheating	87
6.2	Checking intake-manifold preheating heater element -N51	88
6.3	Checking intake-manifold preheating relay -J81	89
7	Checking additional signals	93
7.1	Checking additional signals	93
7.2	Checking speed increase for air conditioner	94
7.3	Checking air-conditioner compressor shutoff	94
7.4	Checking engine-speed signal	95
7.5	Checking vehicle-speed signal	95
7.6	Checking gear signal	96
7.7	Checking ignition timing retardation on changing gear	97
8	Vacuum diagram	98
8.1	Vacuum diagram	98
28 - Ignition system		100
1	Checking ignition system	100
1.1	Checking ignition system	100
1.2	Safety precautions	100
1.3	Technical data	100
1.4	Servicing ignition system	101
1.5	Installing ignition distributor	104
1.6	Checking and adjusting ignition point	105
1.7	Checking ignition transformer-N152	107
1.8	Checking output stage for ignition transformer	109
1.9	Checking intake-air temperature sender -G42	112
1.10	Checking coolant temperature sender -G62	115
1.11	Checking control unit power supply	118
1.12	Checking Hall sender -G40	120