

## Contents

<b>01 - Self-diagnosis . . . . .</b>	<b>1</b>
<b>1 Self-diagnosis . . . . .</b>	<b>1</b>
1.1 Self-diagnosis . . . . .	1
1.2 Technical data of self-diagnosis . . . . .	1
1.3 Safety precautions . . . . .	1
1.4 Connecting vehicle diagnostic, testing and information system VAS 5051/ fault reader V.A.G 1551 and selecting functions . . . . .	1
<b>2 Interrogating and erasing fault memory . . . . .</b>	<b>5</b>
2.1 Interrogating and erasing fault memory . . . . .	5
2.2 Fault table . . . . .	6
<b>3 Final control diagnosis . . . . .</b>	<b>13</b>
3.1 Final control diagnosis . . . . .	13
3.2 Preparing differential pressure regulator for current measurement . . . . .	14
3.3 Implementing final control diagnosis . . . . .	15
<b>4 Basic setting . . . . .</b>	<b>16</b>
4.1 Basic setting . . . . .	16
<b>5 Encoding control unit . . . . .</b>	<b>17</b>
5.1 Encoding control unit . . . . .	17
<b>6 Reading measured value block . . . . .</b>	<b>18</b>
6.1 Reading measured value block . . . . .	18
<b>7 Checking wiring of diagnostic connectors . . . . .</b>	<b>22</b>
7.1 Checking wiring of diagnostic connectors . . . . .	22
7.2 Checking power supply for "black" diagnostic connector . . . . .	23
7.3 Checking wiring between "white" diagnostic connector and engine control unit . . . . .	23
7.4 Checking wiring of encoding connector . . . . .	27
<b>25 - Mixture preparation, Injection . . . . .</b>	<b>28</b>
<b>1 Servicing KE Motronic injection system . . . . .</b>	<b>28</b>
1.1 Servicing KE Motronic injection system . . . . .	28
1.2 Safety precautions . . . . .	28
1.3 Rules for cleanliness . . . . .	28
1.4 Technical data . . . . .	29
1.5 Exploded view of fitting locations . . . . .	30
1.6 Wiring and component check using test box V.A.G 1598 A . . . . .	35
1.7 Replacing engine control unit . . . . .	36
1.8 Checking fuel-pump relay -J17 and actuation . . . . .	38
1.9 Checking cold start valve -N17 . . . . .	43
1.10 Checking idling-speed stabilisation valve -N71 . . . . .	49
1.11 Checking and adjusting idling switch -F60 and full throttle switch -F81 . . . . .	53
1.12 Checking air-flow meter potentiometer -G19 . . . . .	57
1.13 Checking pressure regulator -N73 . . . . .	62
1.14 Basic setting of throttle valve . . . . .	64
1.15 Checking intake system for leaks (unmetered air) . . . . .	65
<b>2 Servicing fuel system . . . . .</b>	<b>66</b>
2.1 Servicing fuel system . . . . .	66
2.2 Exploded view of fuel distributor . . . . .	66
2.3 Removing and installing injection system components . . . . .	74
2.4 Checking idling speed, CO content and ignition point . . . . .	80
2.5 Connecting remote control V.A.G 1348/3A with adapter lead V.A.G 1348/3-2 . . . . .	84
2.6 Connecting pressure gauge V.A.G 1318 with test adapter 1318/4 . . . . .	84
2.7 Checking system pressure, differential pressure and holding pressure . . . . .	86
2.8 Removing and installing injectors . . . . .	90
2.9 Checking injectors . . . . .	91

2.10	Checking adjusting lever and control plunger . . . . .	95
2.11	Checking and adjusting rest position and idle motion of sensor plate . . . . .	96
2.12	Basic setting of adjusting lever . . . . .	99
2.13	Removing and installing control plunger . . . . .	99
2.14	Checking cold acceleration enrichment and overrun shutoff . . . . .	100
2.15	Checking post-start and warm-up enrichment . . . . .	102
<b>3</b>	<b>Checking Lambda control . . . . .</b>	<b>104</b>
3.1	Checking Lambda control . . . . .	104
3.2	Checking Lambda probe -G39 and Lambda control . . . . .	104
3.3	Checking Lambda probe heater -Z19 . . . . .	106
3.4	Removing and installing Lambda probe . . . . .	108
<b>4</b>	<b>Checking fuel tank breather system . . . . .</b>	<b>109</b>
4.1	Checking fuel tank breather system . . . . .	109
4.2	Checking activated charcoal filter solenoid valve -N80 . . . . .	109
<b>5</b>	<b>Checking additional signals . . . . .</b>	<b>114</b>
5.1	Checking additional signals . . . . .	114
5.2	Checking air-conditioner compressor shutoff . . . . .	115
5.3	Checking engine-speed signal . . . . .	116
5.4	Checking consumption signal for on-board computer . . . . .	116
5.5	Checking vehicle-speed signal . . . . .	116
<b>6</b>	<b>Vacuum diagram . . . . .</b>	<b>117</b>
6.1	Vacuum diagram . . . . .	117
<b>28 - Ignition system . . . . .</b>		<b>120</b>
<b>1</b>	<b>Checking ignition system . . . . .</b>	<b>120</b>
1.1	Checking ignition system . . . . .	120
1.2	Safety precautions . . . . .	120
1.3	Adjustment data, spark plugs . . . . .	120
1.4	Servicing ignition system . . . . .	121
1.5	Dismantling and assembling ignition distributor . . . . .	126
1.6	Replacing ignition distributor rotor . . . . .	127
1.7	Checking and adjusting ignition point . . . . .	128
1.8	Checking ignition transformer-N152 . . . . .	130
1.9	Checking output stage for ignition transformer . . . . .	132
1.10	Checking firing point sender -G4 . . . . .	136
1.11	Checking coolant temperature sender -G62 . . . . .	138
1.12	Checking control unit power supply . . . . .	141
1.13	Checking knock sensors . . . . .	144
1.14	Checking Hall sender -G40 . . . . .	146