

## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis</b> .....	<b>1</b>
1.1 Self-diagnosis .....	1
1.2 Technical data of self-diagnosis .....	1
1.3 Safety precautions .....	1
1.4 Connecting fault reader V.A.G 1551 and selecting control unit for engine electronics .....	1
<b>2 Interrogating and erasing fault memory</b> .....	<b>4</b>
2.1 Interrogating and erasing fault memory .....	4
2.2 Fault table .....	5
<b>3 Final control diagnosis</b> .....	<b>9</b>
3.1 Final control diagnosis .....	9
<b>4 Basic setting</b> .....	<b>11</b>
4.1 Basic setting .....	11
<b>5 Encoding control unit</b> .....	<b>12</b>
5.1 Encoding control unit .....	12
<b>6 Reading measured value block</b> .....	<b>13</b>
6.1 Reading measured value block .....	13
<b>7 Testing wiring connections</b> .....	<b>22</b>
7.1 Testing wiring connections .....	22
7.2 Testing voltage supply for "black" diagnostic connector .....	23
7.3 Testing wiring connection between "white" diagnostic connector and engine control unit ..	23
7.4 Testing cable connection of coding connector .....	26
<b>24 - Mixture preparation, Injection</b> .....	<b>28</b>
<b>1 Servicing Digifant fuel injection system</b> .....	<b>28</b>
1.1 Servicing Digifant fuel injection system .....	28
1.2 Safety precautions .....	28
1.3 Rules for cleanliness .....	28
1.4 Technical data .....	29
1.5 Overview of fitting locations .....	30
1.6 Removing and installing parts of the fuel injection system .....	34
1.7 Dismantling and assembling air cleaner .....	37
1.8 Dismantling and assembling fuel rail with injectors .....	39
1.9 Testing wiring and components with test box V.A.G 1598 A and adapter 1598/9 .....	40
1.10 Replacing control unit for engine electronics .....	41
1.11 Testing idling speed .....	43
1.12 Testing system pressure, fuel pressure regulator and holding pressure .....	45
1.13 Testing fuel pump relay -J17 and actuation .....	47
1.14 Testing injectors .....	50
1.15 Removing and installing injectors .....	54
1.16 Testing cold start valve -N17 .....	57
1.17 Testing idling stabilisation valve -N71 .....	61
1.18 Testing acceleration/full throttle enrichment and fuel cut-off in overrun .....	64
1.19 Testing air flow meter -G19 .....	64
<b>2 Testing lambda control</b> .....	<b>67</b>
2.1 Testing lambda control .....	67
2.2 Engine running problems after cold start .....	68
2.3 Testing lambda probe -G39 and lambda control .....	69
2.4 Testing lambda probe heater -Z19 .....	70
<b>3 Testing tank breather</b> .....	<b>72</b>
3.1 Testing tank breather .....	72
3.2 Testing solenoid valve 1 for activated charcoal filter -N80 .....	72



<b>4</b>	<b>Testing throttle valve potentiometer -G69</b> . . . . .	<b>75</b>
4.1	Testing throttle valve potentiometer -G69 . . . . .	75
4.2	Adapting Digifant control unit -J169 and throttle valve potentiometer -G69 to each other . .	79
4.3	Adapting automatic gearbox control unit and throttle valve potentiometer -G69 to each other . . . . .	79
4.4	Basic setting of the throttle valve . . . . .	80
4.5	Testing and adjusting closing damper . . . . .	80
<b>5</b>	<b>Testing intake air preheater</b> . . . . .	<b>81</b>
5.1	Testing intake air preheater . . . . .	81
5.2	Connection diagram for vacuum hoses . . . . .	82
<b>6</b>	<b>Testing auxiliary signals</b> . . . . .	<b>85</b>
6.1	Testing auxiliary signals . . . . .	85
6.2	Testing engine speed increase for air conditioner . . . . .	85
6.3	Testing AC compressor shutoff . . . . .	86
6.4	Testing engine speed signal . . . . .	87
6.5	Testing vehicle speed signal . . . . .	87
6.6	Testing fuel consumption signal . . . . .	88
6.7	Testing wiring connection to automatic gearbox control unit . . . . .	88
6.8	Testing start signal . . . . .	89
<b>28</b>	<b>- Ignition system</b> . . . . .	<b>91</b>
<b>1</b>	<b>Testing ignition system</b> . . . . .	<b>91</b>
1.1	Testing ignition system . . . . .	91
1.2	Safety precautions . . . . .	91
1.3	Adjustment data, spark plugs . . . . .	91
1.4	Servicing ignition system . . . . .	92
1.5	Installing distributor . . . . .	95
1.6	Testing and adjusting ignition timing . . . . .	96
1.7	Testing Hall sender -G40 . . . . .	97
1.8	Testing ignition transformer -N152 . . . . .	99
1.9	Testing output stage for ignition transformer . . . . .	100
1.10	Testing intake air temperature sensor -G42 . . . . .	103
1.11	Testing coolant temperature sensor -G62 . . . . .	104
1.12	Testing voltage supply for control unit . . . . .	106
1.13	Testing current supply relay -J176 . . . . .	108
1.14	Testing knock sensor -G61 . . . . .	110