

| 01 Self-diagnosis, Electrical test | Page |
|---|-------------|
| – Self diagnosis of Motronic system | 01– 1 |
| – Interrogating and erasing fault memory with fault reader V.A.G 1551 | 01– 5 |
| – Fault table | 01–12 |
| – Final control diagnosis with fault reader V.A.G 1551 | 01–44 |
| – Basic setting of engine with V.A.G 1551 | 01–50 |
| – Coding variants of Motronic control unit | 01–66 |
| – Testing cable connection of coding connector | 01–68 |
| – Testing cable connection of diagnostic connectors | 01–69 |
| – Removing and installing Motronic control unit | 01–75 |
| – Connecting test box V.A.G 1598 | 01–78 |
| – Reading measured value block | 01–79 |
| – Interrogating control unit version with V.A.G 1551 | 01–86 |
| | |
| | |
| | |
| 24 Fuel preparation, Fuel injection | Page |
| Motronic components | 24– 1 |
| – Technical data | 24– 4 |
| – Rules for cleanliness | 24– 5 |
| – Safety precautions | 24– 6 |
| Servicing Motronic fuel injection system | 24– 8 |
| – Testing system pressure and holding pressure | 24–11 |
| – Testing fuel pump relay and actuation | 24–15 |
| – Testing injectors | 24–19 |
| – Testing idling speed and CO content | 24–26 |
| – Testing idling speed stabilization | 24–28 |
| – Testing lambda probe and lambda control | 24–33 |
| – Removing and installing lambda probe | 24–36 |
| – Testing solenoid valve for activated charcoal filter | 24–37 |
| – Testing solenoid valve for boost pressure limiter | 24–41 |
| – Testing and adjusting idling speed switch | 24–46 |
| – Testing and adjusting throttle valve potentiometer | 24–50 |
| – Testing altitude sender | 24–54 |
| – Testing air mass sender | 24–58 |
| – Testing air conditioner additional signal and compressor cutoff | 24–65 |
| – Testing air conditioner additional signal for engine speed increase | 24–68 |
| – Testing actuation of on-board computer for fuel consumption display | 24–70 |
| – Testing road speed signal | 24–72 |
| – Testing actuation of tachometer | 24–75 |
| – Testing output signal for throttle valve position | 24–77 |
| – Testing additional signal for reducing boost pressure when engine hot | 24–79 |
| – Vacuum connections | 24–81 |
| | |
| | |
| | |
| | |
| | |

| 28 Ignition system | Page |
|--|-------|
| Motronic components | 28- 1 |
| - Technical data of ignition system | 28- 4 |
| - Safety precautions regarding Motronic system | 28- 6 |
| - Testing ignition coils, spark plug connectors and power output stage | 28- 8 |
| - Testing ignition timing sender | 28-13 |
| - Testing engine speed sender | 28-15 |
| - Testing intake air temperature sender | 28-18 |
| - Replacing intake air temperature sender | 28-20 |
| - Testing coolant temperature sender | 28-21 |
| - Testing voltage supply of Motronic control unit | 28-23 |
| - Testing knock sensors | 28-25 |
| - Testing Hall sender | 28-27 |
| - Basic setting of Hall sender | 28-29 |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |