

00 Technical data	Page
Technical data	00– 1
– Engine number	00– 1
– Engine overview	00– 2
10 Removing and installing engine	Page
Removing and installing engine	10– 1
– Removing engine	10– 1
– Securing engine to engine stand	10–15
– Installing engine	10–16
– Tightening torques	10–18
13 Crank gear	Page
Dismantling and assembling engine	13– 1
Dismantling and assembling cylinder – crankcase, crankshaft and flywheel	13– 3
Removing and installing ribbed V-belt.	13– 5
– Removing and installing ribbed V-belt pulley on crankshaft	13– 6
– Removing and installing toothed belt	13– 7
– Renewing crankshaft sealing rings	13–11
– Extracting and driving in flywheel needle roller bearing	13–13
Removing and installing double mass flywheel/drive plate, installation dimensions	13–14
– Adjusting bracket for RPM sender G28, using adjustment rig 3308	13–16
– Checking crankshaft for axial and radial play	13–17
– Crankshaft dimensions	13–19
– Piston and piston rings	13–20
– Checking cylinder bore	13–23
– Piston and cylinder dimensions	13–24
– Connecting rod, connecting rod bearing	13–25
15 Valve gear	Page
Servicing valve gear	15– 1
Removing and installing cylinder head	15– 3
– Removing cylinder head cover	15– 5
– Renewing cylinder head sealing rings	15– 6
– Removing and installing cylinder head	15– 9
– Checking cylinder head for distortion	15–15
– Checking compression	15–16
– Removing and installing camshaft	15–17
– Checking hydraulic bucket tappets	15–18
– Renewing valve stem seals	15–20
– Checking valves and grinding faces	15–22
– Checking and renewing valve guides	15–23
– Regrinding valve seats	15–25

17 Lubrication	Page
Removing and installing lubricating system components	17- 1
- Removing the oil pump	17- 2
- Renewing the oil retaining valves	17- 7
- Checking oil pressure switch and oil pressure	17- 8
19 Cooling	Page
Removing and installing cooling system components	19- 1
- Renewing thermostat	19- 2
- Removing coolant pipe	19- 3
- Checking thermostatic switch -F54 for radiator fan	19- 4
- Checking coolant system for leaks	19- 5
- Checking excess pressure at sealing cap	19- 5
- Draining and refilling with coolant	19- 6
20 Fuel supply	Page
Removing and installing fuel system components	20- 1
- Safety precautions applicable when working on fuel tank	20- 9
- Rules for cleanliness	20-10
Checking fuel tank and tank vent system for leaks	20-11
- Installation position for fuel filter on vehicles with front-wheel drive	20-12
- Installation position of fuel filter on vehicles with four-wheel drive	20-12
- Checking fuel pump	20-14
- Checking fuel pump delivery	20-16
- Checking fuel pump relay	20-22
- Power supply and control of fuel pump relay -J17	20-20
- Checking fuel pump non-return valve	20-22
- Removing and installing fuel gauge sender	20-24
- Removing and installing fuel pump	20-27
- Dismantling and assembling fuel pump	20-35
Servicing tank venting system with activated charcoal canister	20-35
Servicing accelerator	20-36
- Adjusting accelerator	20-37
26 Exhaust system	Page
Removing and installing exhaust system	26- 1
A - Vehicles with front-wheel drive	26- 1
B - Vehicles with four-wheel drive	26- 3
Aligning exhaust system without stress	26- 4
Tightening torques	26- 8
Checking exhaust system for leaks	26- 9