

## Contents

<b>01 - Self diagnosis . . . . .</b>	<b>1</b>
<b>1 Self diagnosis . . . . .</b>	<b>1</b>
1.1 Self diagnosis . . . . .	1
1.2 Technical data of self diagnosis . . . . .	1
1.3 Safety notes . . . . .	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit . . . . .	1
<b>2 Interrogating and erasing fault memory . . . . .</b>	<b>3</b>
2.1 Interrogating and erasing fault memory . . . . .	3
2.2 Fault table . . . . .	5
<b>3 Final control diagnosis . . . . .</b>	<b>11</b>
3.1 Final control diagnosis . . . . .	11
<b>4 Basic setting . . . . .</b>	<b>14</b>
4.1 Basic setting . . . . .	14
<b>5 Reading measured value block . . . . .</b>	<b>16</b>
5.1 Reading measured value block . . . . .	16
5.2 Readout specifications for general vehicle inspection . . . . .	17
<b>6 Reading individual measured values . . . . .</b>	<b>19</b>
6.1 Reading individual measured values . . . . .	19
<b>7 Testing wiring for diagnostic connector . . . . .</b>	<b>20</b>
7.1 Testing wiring for diagnostic connector . . . . .	20
<b>23 - Mixture preparation, Injection . . . . .</b>	<b>25</b>
<b>1 Servicing Diesel direct injection system . . . . .</b>	<b>25</b>
1.1 Servicing Diesel direct injection system . . . . .	25
1.2 Safety precautions . . . . .	25
1.3 Rules for cleanliness . . . . .	25
1.4 Fitting locations overview . . . . .	26
1.5 Servicing fuel injection system . . . . .	28
1.6 Servicing fuel filter . . . . .	34
1.7 Servicing accelerator linkage . . . . .	36
1.8 Installing and adjusting accelerator position sender -G79 . . . . .	37
1.9 Removing, installing and adjusting injection pump . . . . .	38
1.10 Bleeding fuel system . . . . .	44
1.11 Dynamically checking and adjusting commencement of injection . . . . .	44
1.12 Checking fuel system for leaks . . . . .	46
1.13 Removing, installing and testing injectors and constant pressure valves . . . . .	47
1.14 Renewing injection timing device cover O-ring . . . . .	49
1.15 Renewing engine electronics control unit . . . . .	50
1.16 Wiring and component check with test box V.A.G 1598 A and adapter V.A.G 1598/5 . . . . .	51
<b>2 Testing charge pressure system . . . . .</b>	<b>53</b>
2.1 Testing charge pressure system . . . . .	53
2.2 Checking charge pressure . . . . .	53
2.3 Testing charge pressure control solenoid valve -N75 . . . . .	56
2.4 Testing intake manifold pressure sender -G71 . . . . .	58
2.5 Testing intake manifold temperature sender -G72 . . . . .	60
2.6 Hose routing diagram for charge pressure control system . . . . .	62
<b>3 Testing injection control . . . . .</b>	<b>62</b>
3.1 Testing injection control . . . . .	62
3.2 Checking injection timing control range . . . . .	62
3.3 Testing commencement of injection valve -N108 . . . . .	63
3.4 Testing fuel temperature sender -G81 . . . . .	65
<b>4 Testing exhaust gas recirculation (EGR) . . . . .</b>	<b>67</b>

4.1	Testing exhaust gas recirculation (EGR) . . . . .	67
4.2	Testing operation . . . . .	67
4.3	Testing exhaust gas recirculation valve -N18 . . . . .	69
4.4	Testing air flow meter -G19 . . . . .	72
4.5	Hose routing diagram for exhaust gas recirculation . . . . .	75
<b>5</b>	<b>Checking control unit input values . . . . .</b>	<b>75</b>
5.1	Checking control unit input values . . . . .	75
5.2	Testing Diesel direct injection system voltage supply . . . . .	75
5.3	Testing engine speed sender -G28 . . . . .	77
5.4	Testing needle lift sender -G80 . . . . .	79
5.5	Testing coolant temperature sender -G62 . . . . .	80
5.6	Testing intake air temperature sender -G42 . . . . .	82
5.7	Testing brake light switch -F and brake pedal switch -F47 . . . . .	83
5.8	Testing slide travel potentiometer -G99 and quantity adjuster -N146 . . . . .	85
5.9	Testing accelerator position sender -G79 . . . . .	87
<b>6</b>	<b>Testing auxiliary signals . . . . .</b>	<b>90</b>
6.1	Testing auxiliary signals . . . . .	90
6.2	Testing air conditioner compressor shut-off . . . . .	90
6.3	Testing speed signal . . . . .	91
6.4	Testing clutch pedal switch -F36 . . . . .	91
6.5	Testing engine speed signal . . . . .	92
6.6	Testing water level sender -G120 . . . . .	93
6.7	Testing self-diagnosis fault warning lamp -K83 . . . . .	95
<b>28 - Glow plug system . . . . .</b>	<b>97</b>	
<b>1</b>	<b>Testing glow plug system . . . . .</b>	<b>97</b>
1.1	Testing glow plug system . . . . .	97
1.2	Testing operation . . . . .	97
1.3	Checking glow plugs . . . . .	97
1.4	Testing glow period warning lamp -K29 . . . . .	98