

Contents

01 - Self diagnosis	1
1 Self diagnosis	1
1.1 Self diagnosis	1
1.2 Differences between injection systems	1
1.3 Technical data of self diagnosis	1
1.4 Safety notes	1
1.5 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	2
2 Interrogating and erasing fault memory	4
2.1 Interrogating and erasing fault memory	4
2.2 Fault table	5
3 Final control diagnosis	16
3.1 Final control diagnosis	16
4 Basic setting	19
4.1 Basic setting	19
5 Coding control unit	21
5.1 Coding control unit	21
6 Reading measured value block	23
6.1 Reading measured value block	23
6.2 Readout specifications for general vehicle inspection	27
6.3 Readout specifications for injection pump	28
6.4 Readout specifications for engine idling speed	30
6.5 Readout specifications for exhaust gas recirculation	31
6.6 Readout specifications for temperature senders	32
6.7 Readout specifications for engine power output	32
6.8 Readout specifications for charge pressure control	33
23 - Mixture preparation, Injection	34
1 Servicing Diesel direct injection system	34
1.1 Servicing Diesel direct injection system	34
1.2 Safety precautions	34
1.3 Rules for cleanliness	34
1.4 Fitting locations overview	35
1.5 Servicing fuel injection system	37
1.6 Servicing fuel filter	42
1.7 Servicing accelerator linkage	44
1.8 Installing and adjusting accelerator position sender -G79	45
1.9 Removing, installing and adjusting injection pump	47
1.10 Bleeding fuel system	52
1.11 Dynamically checking and adjusting commencement of injection	52
1.12 Checking fuel system for leaks	54
1.13 Removing, installing and testing injectors and constant pressure valves	55
1.14 Renewing injection timing device cover O-ring	57
1.15 Renewing engine electronics control unit	58
1.16 Wiring and component check with test box V.A.G 1598/18	60
2 Testing charge pressure system	61
2.1 Testing charge pressure system	61
2.2 Checking charge pressure	61
2.3 Testing charge pressure control solenoid valve -N75	64
2.4 Testing intake manifold temperature sender -G72	66
2.5 Testing intake manifold pressure sender -G71 and altitude sender -F96	67
2.6 Hose routing diagram for charge pressure control system	70
3 Testing injection control	71
3.1 Testing injection control	71



3.2	Checking injection timing control range	71
3.3	Testing commencement of injection valve -N108	72
3.4	Testing fuel temperature sender -G81	73
4	Testing exhaust gas recirculation (EGR)	74
4.1	Testing exhaust gas recirculation (EGR)	74
4.2	Testing operation	74
4.3	Testing exhaust gas recirculation valve -N18	76
4.4	Testing air mass meter -G70	78
4.5	Hose routing diagram for exhaust gas recirculation	81
5	Checking control unit input values	82
5.1	Checking control unit input values	82
5.2	Checking Diesel direct injection system voltage supply	82
5.3	Testing engine speed sender -G28	86
5.4	Testing needle lift sender -G80	87
5.5	Testing coolant temperature sender -G62	88
5.6	Testing brake light switch -F and brake pedal switch -F47	89
5.7	Testing modulating piston movement sender -G149 and quantity adjuster -N146	91
5.8	Testing accelerator position sender -G79	93
6	Testing auxiliary signals	95
6.1	Testing auxiliary signals	95
6.2	Testing signals from and to automatic gearbox	95
6.3	Testing air conditioner compressor shut-off	97
6.4	Testing speed signal	98
6.5	Testing clutch pedal switch -F36	99
6.6	Testing cruise control system (CCS)	100
6.7	Testing engine speed signal	102
6.8	Testing fuel consumption signal	103
6.9	Testing self-diagnosis fault warning lamp -K83	104
28	Glow plug system	105
1	Testing glow plug system	105
1.1	Testing glow plug system	105
1.2	Testing operation	105
1.3	Checking glow plugs	106
1.4	Testing glow period warning lamp -K29	106