

Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Brakes	1
2 Brake test	2
2.1 Brake test	2
2.2 General information	2
2.3 Vehicles with front-wheel drive	2
3 General information on aluminium body	2
3.1 General information on aluminium body	2
3.2 Contact corrosion	2
4 Brake fluid	3
4.1 Brake fluid	3
4.2 General information	3
45 - Anti-locking brake system	5
1 Anti-lock brake system (ABS) ITT Mark 20 IE	5
1.1 Anti-lock brake system (ABS) ITT Mark 20 IE	5
1.2 General information on this ABS system	5
1.3 High- and low pressure test	6
2 Component overview, ABS/ESP Mark 20	7
2.1 Component overview, ABS/ESP Mark 20	7
2.2 Removing and installing lateral acceleration sender - G200 and yaw rate sender - G202 ..	11
2.3 Removing and installing steering angle sensor -G85	14
2.4 Removing and installing brake pressure sender from brake master cylinder	16
2.5 Adjusting brake light switch	17
3 Hydraulic unit, brake servo/brake master cylinder - assembly overview - 3 litre	18
3.1 Hydraulic unit, brake servo/brake master cylinder - assembly overview - 3 litre	18
3.2 ABS/EDL/TCS/ESP Mark 20 IE	18
4 Hydraulic unit, brake servo/brake master cylinder - assembly overview - 1.4 petrol engine and 1.4 TDI engine	23
4.1 Hydraulic unit, brake servo/brake master cylinder - assembly overview - 1.4 petrol engine and 1.4 TDI engine	23
4.2 ABS/EDL/TCS/ESP Mark 20 IE	23
4.3 Removing and installing control unit and hydraulic unit	28
5 Removing and installing components of ABS system on front and rear axle	32
5.1 Removing and installing components of ABS system on front and rear axle	32
5.2 Removing and installing components of ABS system on front axle	32
5.3 Removing and installing speed sensor on front axle	34
5.4 Removing and installing components of ABS system on rear axle, drum brake	38
5.5 Removing and installing speed sensor on rear axle	40
5.6 Removing and installing components of ABS system on rear axle, disk brakes	43
6 Component overview, ABS/ESP Mark 60	48
6.1 Component overview, ABS/ESP Mark 60	48
7 Removing and installing components of the ABS/ESP system, ITT Mark 60	53
7.1 Removing and installing components of the ABS/ESP system, ITT Mark 60	53
7.2 Removing and installing lateral acceleration sender -G200 and yaw rate sender -G202 up to approx. 08.01	53
7.3 Removing and installing ESP sensor unit -G419	56
7.4 Removing and installing steering angle sensor -G85	57
7.5 Removing and installing brake pressure sender -G201- from brake master cylinder	59
7.6 Adjusting brake light switch	60



8	Hydraulic unit, brake servo/brake master cylinder - assembly overview - 3 litre	61
8.1	Hydraulic unit, brake servo/brake master cylinder - assembly overview - 3 litre	61
8.2	ABS/EDL/TCS/ESP Mark 60 IE	61
9	Hydraulic unit, brake servo/brake master cylinder - 1.4 petrol engine and 1.4 TDI engine . .	66
9.1	Hydraulic unit, brake servo/brake master cylinder - 1.4 petrol engine and 1.4 TDI engine . .	66
9.2	ABS/EDL/TCS/ESP Mark 60 IE	66
9.3	Removing and installing control unit and hydraulic unit	71
46	- Brakes, Brake mechanics	76
1	Servicing front brakes	76
1.1	Servicing front brakes	76
1.2	Servicing front-wheel brake, brake caliper FS I - AL	76
1.3	Removing and installing brake pads	83
2	Servicing front brakes	85
2.1	Servicing front brakes	85
2.2	Servicing front-wheel brake, brake caliper FS III	85
2.3	Removing and installing brake pads	92
3	Servicing rear wheel brake, drum brake	94
3.1	Servicing rear wheel brake, drum brake	94
3.2	Removing and installing rear brake	95
3.3	Resetting brake	102
3.4	Servicing rear brakes	102
3.5	Removing and installing brake shoes	106
3.6	Adjusting handbrake	108
4	Removing and installing handbrake cable (drum brake)	109
4.1	Removing and installing handbrake cable (drum brake)	109
5	Servicing rear wheel brake (disc brake)	113
5.1	Servicing rear wheel brake (disc brake)	113
5.2	Removing and installing brake pads	120
5.3	Adjusting handbrake	122
6	Removing and installing handbrake cable (disc brake)	124
6.1	Removing and installing handbrake cable (disc brake)	124
7	Handbrake lever - Exploded view	127
7.1	Handbrake lever - Exploded view	127
7.2	Removing and installing handbrake lever	129
7.3	Adjusting handbrake	132
8	Removing and installing brake pedal/brake servo	133
8.1	Removing and installing brake pedal/brake servo	133
8.2	LHD vehicles	133
8.3	Detaching brake pedal from brake servo	137
8.4	Removing and installing brake pedal	138
9	Removing and installing brake pedal/brake servo	139
9.1	Removing and installing brake pedal/brake servo	139
9.2	RHD vehicles	139
9.3	Removing and installing brake pedal	142
9.4	Removing and installing mounting bracket	145
47	- Brakes, Brake hydraulics	150
1	Servicing front brake caliper, brake caliper FS I - AL	150
1.1	Servicing front brake caliper, brake caliper FS I - AL	150
1.2	Removing and installing piston for front brake caliper	152
2	Servicing front brake caliper, brake caliper FS III	155
2.1	Servicing front brake caliper, brake caliper FS III	155
2.2	Removing and installing piston for front brake caliper	157

3	Servicing rear brake caliper, brake caliper C 34	159
3.1	Servicing rear brake caliper, brake caliper C 34	159
3.2	Removing and installing rear brake caliper piston	162
3.3	Pressurised leak test	165
4	Bleeding brake system	165
4.1	Bleeding brake system	165
4.2	Bleeding brake system with brake filling and bleeding unit V.A.G 1869	166
4.3	Bleeding brake system without brake filling and bleeding unit	166
4.4	Initiating basic setting	167
5	Assembly overview: Servo unit/brake master cylinder	169
5.1	Assembly overview: Servo unit/brake master cylinder	169
6	Removing and installing brake master cylinder	172
6.1	Removing and installing brake master cylinder	172
7	Removing and installing brake servo	173
7.1	Removing and installing brake servo	173
8	Brake lines and brake pipes	175
8.1	Brake lines and brake pipes	175
8.2	Routing of lines	175
8.3	Tightening torques	175