

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Running gear .....	1
1.2 Steering .....	1
<b>2 General notes</b> .....	<b>2</b>
<b>3 Disposal of fluid-filled components to meet environmental requirements</b> .....	<b>3</b>
3.1 Releasing gas in front gas-filled shock absorbers .....	3
3.2 Releasing gas in rear gas-filled shock absorbers .....	4
3.3 Draining power steering box .....	5
3.4 Disposal of motor/pump unit .....	5
<b>4 Checking shock absorbers</b> .....	<b>7</b>
4.1 Leaks at shock absorbers .....	7
4.2 Noises from shock absorbers .....	7
4.3 Checking shock absorbers when removed .....	7
4.4 Checking shock absorbers on shock tester .....	8
<b>40 - Front suspension</b> .....	<b>10</b>
<b>1 Subframe (basic running gear): exploded view</b> .....	<b>10</b>
1.1 Locating subframe .....	12
1.2 Removing and installing anti-roll bar .....	14
1.3 Checking swivel joint .....	16
1.4 Removing and installing swivel joint (vehicles with fabricated wishbone and bolt-on swivel joint) .....	16
1.5 Installation position of swivel joints .....	19
1.6 Removing and installing wishbone with swivel joint and suspension bracket (vehicles with forged-steel wishbone) .....	20
1.7 Removing and installing wishbone with suspension bracket (vehicles with fabricated wishbone and bolt-on swivel joint) .....	23
1.8 Separating and assembling wishbone and suspension bracket .....	25
1.9 Renewing bonded rubber bush for suspension bracket .....	28
1.10 Renewing bonded rubber bush for suspension bracket using V.A.G 1459 B .....	30
1.11 Removing and installing subframe .....	34
<b>2 Subframe (1.2 TDI running gear): exploded view</b> .....	<b>37</b>
2.1 Locating subframe .....	38
2.2 Removing and installing anti-roll bar .....	39
2.3 Checking swivel joint .....	41
2.4 Removing and installing wishbone with swivel joint and suspension bracket .....	41
2.5 Separating and assembling wishbone and suspension bracket .....	44
2.6 Removing and installing subframe .....	46
<b>3 Wheel bearing (basic running gear): exploded view</b> .....	<b>49</b>
3.1 Removing and installing front wheel hub/wheel bearing unit with wheel bearing housing installed .....	51
<b>4 Wheel bearing (1.2 TDI running gear): exploded view</b> .....	<b>58</b>
4.1 Removing and installing front wheel hub/wheel bearing unit with wheel bearing housing installed .....	60
<b>5 Suspension strut (basic running gear): exploded view</b> .....	<b>65</b>
5.1 Removing and installing suspension strut/coil spring .....	66
<b>6 Suspension strut (1.2 TDI running gear): exploded view</b> .....	<b>71</b>
6.1 Removing and installing suspension strut/coil spring .....	72
<b>7 Drive shafts (basic running gear)</b> .....	<b>76</b>
7.1 Removing and installing drive shafts (vehicles with forged-steel wishbone) .....	76
7.2 Removing and installing drive shafts (vehicles with fabricated wishbone) .....	80



7.3	Servicing drive shaft with constant velocity joint	83
7.4	Checking outer constant velocity joint	89
7.5	Checking inner constant velocity joint	91
7.6	Servicing drive shaft with triple roller joint AAR 2000	92
7.7	Dismantling and assembling triple roller joint AAR 2000	95
<b>8</b>	<b>Drive shafts (1.2 TDI running gear)</b>	<b>100</b>
8.1	Removing and installing drive shafts	100
8.2	Servicing drive shaft	103
8.3	Checking outer constant velocity joint	109
<b>42</b>	<b>Rear suspension</b>	<b>111</b>
<b>1</b>	<b>Servicing rear axle</b>	<b>111</b>
1.1	Removing and installing rear axle	111
1.2	Rear axle beam (drum brakes; basic running gear and 1.2 TDI running gear): exploded view	114
1.3	Rear axle beam (disc brakes): exploded view	118
1.4	Removing and installing bonded rubber bush	119
1.5	Removing and installing hydraulic bonded rubber bush	129
1.6	Removing and installing shock absorber/spring	136
1.7	Shock absorber: exploded view	138
<b>2</b>	<b>Servicing wheel bearing</b>	<b>141</b>
2.1	Wheel bearing (basic running gear and 1.2 TDI running gear): exploded view	141
2.2	Removing and installing wheel bearing/hub unit (basic running gear)	143
2.3	Removing and installing wheel bearing/hub unit (1.2 TDI running gear)	145
2.4	Wheel bearing (disc brakes): exploded view	148
2.5	Removing and installing wheel bearing/hub unit (disc brakes)	150
<b>44</b>	<b>Wheels, tyres, vehicle geometry</b>	<b>153</b>
<b>1</b>	<b>Wheels and tyres</b>	<b>153</b>
1.1	General notes	153
1.2	Forged light-alloy wheel	153
1.3	Forged light-alloy wheel for 1.2 TDI running gear	155
1.4	Steel wheel	156
1.5	Steel wheel (winter)	157
1.6	Light-alloy wheel, 6-spoke design (6J x 15, ET 37)	158
1.7	Light-alloy wheel, 6-spoke design (6J x 16, ET 35)	159
1.8	Light-alloy wheel (5-spoke design)	160
1.9	Balancing wheels on vehicle	160
1.10	Instructions for changing/fitting wheels	161
<b>2</b>	<b>Wheel alignment</b>	<b>164</b>
2.1	General information	164
2.2	Wheel alignment specifications	165
2.3	Requirements for test	166
2.4	Measurement procedure	167
2.5	Centralising camber at front wheels	169
2.6	Checking camber at rear wheels	170
2.7	Centralising toe setting at rear wheels	170
2.8	Adjusting toe setting at front wheels	171
<b>48</b>	<b>Steering</b>	<b>172</b>
<b>1</b>	<b>Steering column and steering wheel with airbag</b>	<b>172</b>
1.1	Checking steering column for damage	172
1.2	Removing and installing steering wheel with airbag	172
1.3	Removing and installing steering column	174
1.4	Removing and installing ignition lock housing	181

<b>2</b>	<b>Manual steering box: exploded view</b>	<b>183</b>
2.1	Removing and installing manual steering box	184
2.2	Removing and installing track rod ball joints	187
2.3	Servicing manual steering box	189
2.4	Adjusting manual steering box	193
<b>3</b>	<b>Power steering</b>	<b>194</b>
3.1	Design and function	194
<b>4</b>	<b>Power steering box: exploded view</b>	<b>197</b>
4.1	Removing and installing power steering box	199
4.2	Removing and installing track rod ball joints	205
4.3	Servicing power steering box (TRW)	207
4.4	Adjusting power steering box (TRW)	211
<b>5</b>	<b>Power steering and hose connections: general view</b>	<b>212</b>
5.1	Removing and installing power steering sensor G250	212
5.2	Removing and installing hydraulic lines	214
<b>6</b>	<b>Routing of wiring for power steering sensor G250 (6Q2 423 291 A): general view</b>	<b>218</b>
6.1	Routing of wiring on LHD vehicles	218
6.2	Routing of wiring on RHD vehicles	219
<b>7</b>	<b>Motor/pump unit: exploded view</b>	<b>221</b>
7.1	Checking delivery pressure of motor/pump unit	223
7.2	Removing and installing motor/pump unit	227
<b>8</b>	<b>Checking fluid level, bleeding steering system and checking for leaks</b>	<b>231</b>
8.1	Checking fluid level of power steering	231
8.2	Bleeding steering system	233
8.3	Checking steering system for leaks	234