

Contents

01 - Self-diagnosis	1
1 Dash panel insert self-diagnosis	1
1.1 Dash panel insert self-diagnosis	1
1.2 General	1
1.3 Starting dash panel insert self-diagnosis	2
1.4 Safety precautions	3
1.5 Interrogating fault memory	5
1.6 Dash panel insert fault table	5
1.7 Final control diagnosis	10
1.8 Erasing fault memory	12
1.9 End of output	13
1.10 Encoding control unit	13
1.11 Reading measured value block	15
1.12 Adaption	22
1.13 Values to be entered on replacing dash panel insert	50
1.14 Resetting of service display without V.A.G 1551/1552 following service	51
1.15 Checking exchange of data between control units	51
2 Immobilizer self-diagnosis - immobilizer III	54
2.1 Immobilizer self-diagnosis - immobilizer III	54
2.2 General	55
2.3 Starting immobilizer self-diagnosis	56
2.4 Safety precautions	56
2.5 Interrogating control unit version	58
2.6 Interrogating fault memory	59
2.7 Immobilizer fault table:	59
2.8 Erasing fault memory	61
2.9 End of output	62
2.10 Reading measured value block	62
2.11 Adaption	65
2.12 Matching of vehicle keys	65
2.13 Procedure in the event of loss of keys	67
2.14 Adaption following replacement of dash panel insert	68
2.15 Adaption following replacement of engine control unit	71
2.16 Adaption following replacement of dash panel insert and engine control unit	74
2.17 Login procedure	75
3 Parking aid (parking system) self-diagnosis	76
3.1 Parking aid (parking system) self-diagnosis	76
3.2 General	76
3.3 Starting parking aid self-diagnosis	77
3.4 Safety precautions	78
3.5 Interrogating control unit version	79
3.6 Interrogating fault memory	80
3.7 Parking aid fault table	80
3.8 Erasing fault memory	82
3.9 End of output	83
3.10 Encoding control unit	84
3.11 Reading measured value block	85
3.12 Adaption	87
4 Connecting vehicle diagnostic, testing and information system VAS 5051/fault reader V.A.G 1551 and selecting functions	88
4.1 Connecting vehicle diagnostic, testing and information system VAS 5051/fault reader V.A.G 1551 and selecting functions	88