

## Contents

<b>01 - Self-diagnosis .....</b>	<b>1</b>
<b>1 Radio system self-diagnosis .....</b>	<b>1</b>
1.1 General information and safety measures .....	1
1.2 Starting self-diagnosis .....	1
1.3 Interrogating control unit version .....	3
1.4 Interrogating fault memory .....	3
1.5 Fault table .....	4
1.6 Erasing fault memory .....	8
1.7 End of output .....	9
1.8 Final control diagnosis .....	9
1.9 Encoding control unit .....	10
1.10 Reading measured value block .....	13
1.11 Adaption .....	18
<b>2 Telephone self-diagnosis .....</b>	<b>24</b>
2.1 General information and safety measures .....	24
2.2 Starting self-diagnosis .....	24
2.3 Interrogating control unit version .....	25
2.4 Interrogating fault memory .....	26
2.5 Fault table .....	27
2.6 Erasing fault memory .....	29
2.7 End of output .....	30
2.8 Final control diagnosis .....	30
2.9 Encoding control unit .....	31
2.10 Reading measured value block .....	32
2.11 Adaption .....	35
<b>3 Self-diagnosis of pre-fitted components for mobile phone installation .....</b>	<b>37</b>
3.1 General information and safety measures .....	37
3.2 Starting self-diagnosis .....	37
3.3 Interrogating fault memory .....	39
3.4 Fault table .....	40
3.5 Erasing fault memory .....	42
3.6 End of output .....	43
3.7 Final control diagnosis .....	44
3.8 Encoding control unit .....	45
3.9 Reading measured value block .....	48
3.10 Adaption .....	52
<b>4 Self-diagnosis of navigation system II-D .....</b>	<b>62</b>
4.1 General information and safety measures .....	62
4.2 Fault messages on navigation system display .....	63
4.3 Starting self-diagnosis .....	64
4.4 Interrogating control unit version .....	65
4.5 Interrogating fault memory .....	66
4.6 Fault table .....	67
4.7 Erasing fault memory .....	69
4.8 End of output .....	70
4.9 Final control diagnosis .....	70
4.10 Reading measured value block .....	71
4.11 Function status register .....	74
4.12 Adaption .....	74
<b>5 Self-diagnosis of navigation system III .....</b>	<b>86</b>
5.1 General information and safety measures .....	86
5.2 Starting self-diagnosis .....	87

5.3	Interrogating control unit version . . . . .	88
5.4	Interrogating fault memory . . . . .	89
5.5	Fault table . . . . .	90
5.6	Erasing fault memory . . . . .	91
5.7	End of output . . . . .	92
5.8	Final control diagnosis . . . . .	92
5.9	Reading measured value block . . . . .	93
5.10	Function status register . . . . .	97
5.11	Adaption . . . . .	98
<b>6</b>	<b>Self-diagnosis of navigation system Nav IV (BNS 4.0) . . . . .</b>	<b>103</b>
6.1	General information and safety measures . . . . .	103
6.2	Starting self-diagnosis . . . . .	104
6.3	Interrogating control unit version . . . . .	105
6.4	Interrogating fault memory . . . . .	105
6.5	Fault table . . . . .	106
6.6	Erasing fault memory . . . . .	108
6.7	End of output . . . . .	109
6.8	Final control diagnosis . . . . .	109
6.9	Reading measured value block . . . . .	110
6.10	Function status register . . . . .	114
6.11	Adaption . . . . .	114
<b>7</b>	<b>Self-diagnosis of TV tuner . . . . .</b>	<b>123</b>
7.1	General information and safety measures . . . . .	123
7.2	Starting self-diagnosis . . . . .	123
7.3	Interrogating control unit version . . . . .	124
7.4	Interrogating fault memory . . . . .	125
7.5	Fault table . . . . .	126
7.6	Erasing fault memory . . . . .	127
7.7	End of output . . . . .	128
7.8	Final control diagnosis . . . . .	128
7.9	Encoding control unit . . . . .	129
7.10	Reading measured value block . . . . .	130
<b>8</b>	<b>Multi-function steering wheel self-diagnosis . . . . .</b>	<b>133</b>
8.1	General information and safety measures . . . . .	133
8.2	Starting self-diagnosis . . . . .	134
8.3	Interrogating control unit version . . . . .	135
8.4	Interrogating fault memory . . . . .	135
8.5	Fault table . . . . .	136
8.6	Erasing fault memory . . . . .	137
8.7	End of output . . . . .	138
8.8	Final control diagnosis . . . . .	138
8.9	Encoding control unit . . . . .	139
8.10	Reading measured value block . . . . .	141
<b>9</b>	<b>Telematics self-diagnosis . . . . .</b>	<b>144</b>
9.1	General information and safety measures . . . . .	144
9.2	Notes on system release . . . . .	144
9.3	Starting self-diagnosis . . . . .	145
9.4	Interrogating control unit version . . . . .	146
9.5	Interrogating fault memory . . . . .	146
9.6	Fault table . . . . .	147
9.7	Erasing fault memory . . . . .	151
9.8	End of output . . . . .	152
9.9	Final control diagnosis . . . . .	152
9.10	Encoding control unit . . . . .	153
9.11	Reading measured value block . . . . .	154

---

9.12	Adaption	158
<b>10</b>	<b>Connecting up vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551</b>	<b>165</b>
10.1	Test conditions	165
10.2	Procedure	165