

Contents

00 - Technical data	1
1 Routing and attaching pipes and wiring	1
2 Contact corrosion	2
68 - Interior equipment	3
1 Storage compartments/covers	3
1.1 Removing and installing glove box	3
1.2 Removing cushioning mechanism for glove box lid	4
1.3 Removing and installing glove box lid	4
1.4 Removing storage compartment (driver side)	5
1.5 Removing ashtray and storage compartment	7
1.6 Removing cup holder and hazard warning switch	7
1.7 Removing and installing rear centre console side trim	8
1.8 Removing and installing rear centre console knee guide	9
1.9 Removing and installing rear centre console attachments	10
1.10 Removing and installing rear centre console	11
1.11 Removing and installing additional rear storage compartment	12
1.12 Removing and installing front holder for additional rear storage compartment	12
1.13 Removing and installing rear holder for additional rear storage compartment	12
2 Interior mirror	14
2.1 Removing interior mirror	14
2.2 Installing interior mirror	14
2.3 Removing interior mirror (automatic anti-glare mirror)	14
2.4 Installing interior mirror (automatic anti-glare mirror)	15
2.5 Checking operation of automatic anti-glare interior mirror	15
2.6 Bonding in retainer plate for interior mirror	16
69 - Passenger protection	19
1 Seat belts	19
1.1 Safety requirements for handling pyrotechnic belt tensioners	19
1.2 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolation units (pyrotechnic components)	19
1.3 Seat belt anchorage points (exploded view)	20
1.4 Removing and installing three-point seat belt with belt height adjuster and belt tensioner	21
1.5 Buckle anchorage point	23
1.6 Outer floor panel anchorage point	23
1.7 Rear buckle anchorage point	23
1.8 Rear buckle anchorage point for lightweight seats	24
1.9 Removing and installing rear three-point seat belt	24
2 Child seat anchor (Australia)	26
2.1 Removing child seat anchor	26
3 Removing and installing Isofix holder for front passenger's seat	27
4 Checking seat belts	28
4.1 Seat belts	28
4.2 Checking restraint function for additional children's seats (not for driver's seat belt)	30
5 Airbag safety regulations	32
5.1 Safety precautions when working on airbag	32
5.2 Side airbag safety regulations	32
5.3 Additional safety regulations for head airbag	33
5.4 Replacing airbag units after an accident	34
6 Servicing airbag	37



6.1	Exploded view of fitting locations	37
6.2	Removing and installing airbag control unit (J 234)	38
7	Servicing driver's airbag	39
7.1	Removing and installing driver's airbag unit	39
7.2	Removing and installing steering wheel	41
7.3	Removing and installing driver's airbag unit with sports steering wheel	41
7.4	Removing and installing sports steering wheel	43
7.5	Removing and installing coil connector with slip ring (steering angle sender G85)	44
8	Servicing front passenger's airbag	46
8.1	Removing and installing front passenger's airbag	46
8.2	Removing and installing key switch for front passenger's airbag	47
8.3	Removing "PASSENGER AIRBAG OFF" lamp	48
9	Servicing side airbags	49
9.1	Removing and installing side airbag	49
9.2	Side airbag cable routing	50
9.3	Removing and installing lateral acceleration sensor	51
10	Servicing head airbag	53
10.1	Removing and installing head airbag	53
10.2	C-pillar support	55
70 - Trim, insulation		56
1	Front door trim	56
1.1	Exploded view of attachments	56
1.2	Removing and installing front door trim	57
1.3	Removing and installing driver's window lifter switch unit with mirror adjustment switch	59
1.4	Removing driver's window lifter switch from trim	59
1.5	Removing mirror adjustment switch	59
1.6	Removing and installing front passenger's window lifter switch	60
1.7	Removing front passenger's window lifter switch from trim	60
1.8	Removing and installing sound absorber for front door trim	60
1.9	Removing central locking switch	60
1.10	Removing interior door handle	61
1.11	Removing and installing treble loudspeaker	61
1.12	Removing treble loudspeaker trim	61
1.13	Removing bass loudspeaker trim	61
1.14	Interior mirror trim panel	62
1.15	Exploded view of door trim cable routing	62
2	Rear door trim	63
2.1	Exploded view of fitting locations	63
2.2	Removing and installing rear door trim	64
2.3	Removing rear window crank	67
2.4	Removing and installing window lifter switch unit	68
2.5	Removing and installing sound absorber for rear door trim	68
2.6	Exploded view of door trim cable routing	69
2.7	Removing and installing treble loudspeaker	69
2.8	Interior mirror trim panel	69
2.9	Removing treble loudspeaker trim	69
2.10	Removing bass loudspeaker trim	70
2.11	Removing interior door handle	70
2.12	Removing window lifter switch from trim	70
3	Dash panel	71
3.1	Exploded view of fitting locations	71
3.2	Removing dash panel	72
3.3	Removing centre dash panel vent	76
3.4	Removing outer dash panel vent	76

3.5	Removing dash panel grab handle	77
4	Removing and installing central tube	78
4.1	Exploded view of fitting locations	78
4.2	Removing and installing dash panel central tube	78
4.3	Removing and installing centre dash panel holder	82
4.4	Removing and installing centre dash panel brace and mount	83
4.5	Cable routing at dash panel central tube	84
4.6	Edge protection at steering column console	86
5	Roof trim	87
5.1	Removing and installing moulded headliner and sun visors	87
5.2	Removing roof grab handles	91
6	Trim panels	92
6.1	Removing and installing upper A-pillar trim	92
6.2	Removing and installing rear upper A-pillar trim	93
6.3	Removing and installing lower A-pillar trim	94
6.4	Removing and installing upper B-pillar trim	95
6.5	Removing and installing lower B-pillar trim	96
6.6	Removing and installing handbrake lever trim	96
6.7	Removing and installing foot rest (LHD vehicles)	97
6.8	Removing and installing foot rest (RHD vehicles)	97
6.9	Removing and installing foot rest bracket (RHD vehicles)	97
6.10	Removing C-pillar trim	97
6.11	Removing D-pillar trim	98
6.12	Removing and installing holder for D-pillar	98
6.13	Rear inner wheel housing trim	98
6.14	Removing and installing rear cross panel trim	100
6.15	Removing and installing securing strap for rear cross panel trim	101
6.16	Luggage compartment floor lining	102
6.17	Removing load compartment floor	102
6.18	Luggage compartment floor lining trim strip	103
6.19	Luggage compartment side trim	103
6.20	Left load compartment floor mount	104
6.21	Right load compartment floor mount	104
6.22	Cover for load compartment floor mount	104
6.23	Removing and installing rear lid trim	104
6.24	Removing seat console trim on tunnel side	106
6.25	Removing seat console trim on sill panel side	107
6.26	Removing and installing front floor covering	107
6.27	Removing and installing rear floor covering	109
72	Seat frames	110
1	Front seats (standard seat, sports seat)	110
1.1	Exploded view of backrest components	110
1.2	Exploded view of seat components	111
1.3	Removing seat console trim on tunnel side	112
1.4	Removing seat console trim on sill panel side	112
1.5	Removing and installing seat	112
1.6	Connecting airbag adapter VAS 5094	114
1.7	Removing and installing front seat backrest	116
1.8	Interchanging left and right backrest	117
1.9	Removing seat side trim	117
1.10	Removing fitting trim	118
1.11	Removing backrest adjuster	119
1.12	Removing holder for seat side trim	119
1.13	Removing seat pan	119

1.14	Removing height adjustment handle	121
1.15	Removing handle for fore-and-aft adjustment	121
1.16	Removing plate at lever for fore-and-aft adjustment	121
1.17	Removing height adjustment lever	121
1.18	Removing side airbag frame	122
1.19	Removing spring mat	123
1.20	Removing and installing lumbar support with motor	124
1.21	Removing and installing lumbar support	125
1.22	Removing and installing lumbar support motor	126
2	Rear seats (4-seater)	127
2.1	Exploded view of components (split backrest)	127
2.2	Removing and installing split backrest	129
2.3	Rear seat front floor attachment	130
2.4	Rear seat rear floor attachment	131
2.5	Removing striker plate	131
2.6	Removing and installing lower release handle	131
2.7	Removing and installing upper release handle	132
2.8	Removing and installing upper release handle trim	132
2.9	Removing and installing release mechanism	133
2.10	Removing and installing seat cushion cover panel	133
2.11	Removing and installing backrest section cover panel	135
2.12	Removing and installing inner and outer fitting trim	135
2.13	Removing and installing release mechanism trim	136
2.14	Releasing rear seat following removal	136
3	Rear seats (5-seater)	137
3.1	Removing and installing rear seat	137
3.2	Removing and installing rear seat front floor attachment	139
3.3	Removing and installing rear seat rear floor attachment	140
3.4	Removing and installing striker plate	141
3.5	Removing and installing locking elements	141
3.6	Releasing rear seat following removal	141
3.7	Removing and installing lower release handle	142
3.8	Removing and installing inner and outer fitting trim	142
3.9	Removing and installing upper release handle trim	143
3.10	Removing and installing upper release handle	144
3.11	Removing and installing release mechanism trim	144
3.12	Removing and installing release mechanism	144
3.13	Removing and installing seat cushion cover panel	146
3.14	Removing and installing backrest section cover panel	148
4	Lightweight rear seats	149
4.1	Exploded view of lightweight rear seat bench components	149
4.2	Exploded view of fixed lightweight rear seat backrest components	150
4.3	Removing and installing lightweight rear seat bench	151
4.4	Removing and installing rear seat bench front floor attachment	153
4.5	Removing and installing fixed lightweight rear seat backrest	153
4.6	Removing and installing upper attachment	154
4.7	Removing and installing rear fastener	154
4.8	Removing and installing buckle plate	155
4.9	Removing and installing Horstfix	155
74	Seat - padding, covers	156
1	Front seat covers and padding (standard seat, sports seat)	156
1.1	Removing and installing cover and padding for seat cushion	156
1.2	Removing and installing backrest cover and padding	158
1.3	Cutting out cover for side airbag	162

2	Rear seat covers and padding (4-seater)	164
2.1	Removing and installing cover and padding for seat cushion (split rear seat)	164
2.2	Removing and installing cover and padding for backrest section (split rear seat)	165
3	Rear seat covers and padding (5-seater)	169
3.1	Removing and installing cover and padding for rear seat backrest (5-seater)	169
3.2	Removing and installing cover and padding for rear seat bench (5-seater)	172
4	Lightweight rear seat covers and padding	175
4.1	Removing and installing cover and padding for lightweight rear seat bench	175
4.2	Removing and installing cover and padding for lightweight rear seat backrest	176
4.3	Removing and installing filler pieces for lightweight rear seat backrest	178