

Contents

50 - Body - front	1
1 Body - front	1
1.1 Contact corrosion	1
1.2 Removing and installing lock carrier with attachments	1
1.3 Wing panel (front) - exploded view	3
1.4 Lateral adjustment of wing panel	4
1.5 Noise insulation - exploded view	5
55 - Bonnet, rear lid	6
1 Bonnet	6
1.1 Contact corrosion	6
1.2 Removing and installing bonnet, adjusting bonnet	6
1.3 Removing and installing lining for bonnet and air intake	8
1.4 Removing and installing bonnet release cable	9
1.5 Removing and installing plenum chamber cover	10
2 Rear lid	11
2.1 Removing, installing and adjusting rear lid and rear lid lock	11
57 - Front doors, door components, central locking	14
1 Front door	14
1.1 Contact corrosion	14
1.2 Tools	14
1.3 Removing and installing mounting panel	16
1.4 Removing and installing mounting panel	16
1.5 Removing and installing front door and door subframe	18
1.6 Panel gaps for door adjustment	21
1.7 Door hinges (front)	22
1.8 Panel gaps	23
1.9 Removing and installing door arrester	23
1.10 Removing and installing window lifter and door window	25
1.11 Door handle and door lock (front) - exploded view	26
1.12 Removing lock cylinder and door handle	27
1.13 Installing door handle	28
1.14 Removing and installing door lock (front)	28
1.15 Removing and installing window guide and window slot trim panel	30
1.16 Removing and installing door seal (outer)	31
1.17 Removing and installing door seal (inner)	32
1.18 Seal on door (front)/ mounting panel and on opening for exterior mirror wiring in door subframe	32
58 - Rear doors, door components	35
1 Rear doors	35
1.1 Contact corrosion	35
1.2 Tools	35
1.3 Removing and installing mounting panel	37
1.4 Removing and installing mounting panel	37
1.5 Removing and installing rear door and door subframe	39
1.6 Panel gaps for door adjustment	42
1.7 Door hinges (rear)	43
1.8 Panel gaps	43
1.9 Removing and installing door arrester	44
1.10 Removing and installing window lifter and door window	45
1.11 Rear door handle and door lock - exploded view	46



1.12	Removing and installing door lock (rear)	47
1.13	Removing and installing window guide and window slot trim panel	48
1.14	Removing and installing door seal (outer)	48
1.15	Removing and installing door seal (inner)	49
1.16	Seal on rear door/mounting panel	49
60	- Sunroof	52
1	Servicing sliding/tilting sunroof	52
1.1	Contact corrosion	52
1.2	Tools	52
1.3	Removing and installing sunroof	52
1.4	Removing sunroof	53
1.5	Renewing cable guide	56
1.6	Installing sunroof	65
1.7	Removing and installing sunroof panel	66
1.8	Removing and installing sliding frame	67
1.9	Removing and installing wind deflector	68
1.10	Renewing actuating spring for wind deflector	68
63	- Bumpers	70
1	Front bumper	70
1.1	Contact corrosion	70
1.2	Removing and installing front bumper - exploded view	70
2	Rear bumper	73
2.1	Removing and installing rear bumper - exploded view	73
64	- Glazing	74
1	Flush-bonded windows	74
1.1	Contact corrosion	74
1.2	Removing and installing flush-bonded windows - general comments	74
1.3	Repairing windows with resin, Talon VAS 1993/2	77
1.4	Sticker for windscreen	77
1.5	Materials	77
1.6	Minimum drying times	78
1.7	Cleaning off adhesive sealant	78
2	Windscreen	79
2.1	Removing and installing windscreen - exploded view	79
2.2	Removing windscreen	79
2.3	Preparations before installing a new windscreen	81
2.4	Installing windscreen	83
3	Side window (front)	85
3.1	Removing and installing side window (front) - exploded view	85
3.2	Removing side window (front)	86
3.3	Installing new window	86
4	Side window (rear)	88
4.1	Removing and installing side window (rear) - exploded view	88
4.2	Removing side window (rear)	88
4.3	Installing new window	90
5	Rear window	92
5.1	Removing and installing rear window - exploded view	92
5.2	Removing rear window	92
5.3	Installing rear window	95
5.4	Preparations before installing a new window	96
66	- Exterior equipment	99

1	Protective strips	99
1.1	Contact corrosion	99
1.2	Renewing protective side strips (top)	99
1.3	Renewing protective side strips (bottom)	101
1.4	Removing and installing trim cover for side member	102
2	Trim panels	103
2.1	Removing and installing trim panel for B-pillar	103
3	Rear-view mirror	104
3.1	Removing and installing rear-view mirror	104
3.2	Removing and installing mirror housing	105
3.3	Renewing mirror glass and adjuster unit	105
4	Side member trim	107
4.1	Removing and installing side member trim	107
5	Rear lid trim panel	109
5.1	Removing and installing trim panel	109
6	Wheel housing liner	110
6.1	Removing and installing wheel housing liner (front)	110
6.2	Removing and installing wheel housing liner (rear)	111
7	Wheel arch trim	112
7.1	Removing and installing wheel arch trim	112