

Contents

00 - Technical data	1
1 Safety briefing/employee qualification	1
1.1 Qualification	1
2 Safety precautions	2
2.1 Safety precautions	2
2.2 Safety precautions when working on the cooling system	4
2.3 Safety precautions when using testers and measuring instruments during a road test	4
3 Repair instructions	6
3.1 Important notes	6
3.2 General notes	6
3.3 Information on handling fine dust, aluminium dust and steel dust	7
3.4 Routing and attachment of pipes, hoses and wiring	7
3.5 Contact corrosion	8
3.6 Bonding surfaces for adhesive strips	8
3.7 Self-locking bolts	8
3.8 Identification plates	8
3.9 Impact wrenches	8
3.10 Bonded joints	9
3.11 Matching the surface contour	10
4 Vehicle identification data	11
4.1 Type plate and vehicle identification number	11
4.2 Vehicle data sticker	11
5 Using edge milling unit -VAS 882 005-	12
5.1 General information	12
5.2 Assembling unit/changing milling tool	15
5.3 Separating flanged edges	25
5.4 Separating panels at corners and along surfaces	31
5.5 Separating outer edges	34
5.6 Roof - Renewal	37
5.7 Separating laser weld seams using round head milling unit	39
5.8 Aluminium panels	41
6 Processing body structure adhesive D 180 004 M2	44
6.1 Preparing bonding surfaces	45
7 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)	59
8 Body dimensions	61
8.1 Floor group, front	61
8.2 Floor group, rear	61
8.3 Body - front	62
8.4 Body - centre	64
8.5 Body - rear	66
9 Body panel gaps/shut lines	68
9.1 Body - front	68
9.2 Body - centre	68
9.3 Body - rear	69
10 Tools	71
11 Straightening jig	74
11.1 Portal gauge	89
11.2 Procedure for repairing structural body damage on Audi vehicles	92
50 - Body - front	93



1	Safety precautions	93
2	Wing mounting flange - Renewal	94
2.1	Procedure	94
3	Front longitudinal member - Renewal	96
3.1	Procedure	96
4	Front longitudinal member - Partial renewal	100
4.1	Procedure	100
5	Front longitudinal member with suspension strut mounting - Renewal	104
5.1	Procedure	104
6	Longitudinal member (front section) - Renewal	108
6.1	Procedure	108
51 - Body - centre		110
1	Safety precautions	110
2	Roof - Renewal	111
2.1	Tools	111
2.2	Procedure	113
3	Roof side member - Renewal	123
3.1	Procedure	123
4	Roof cross member (rear) - Renewal	125
4.1	Procedure	125
5	Roof cross member (front) - Renewal	127
5.1	Procedure	127
6	A-pillar - Renewal	130
6.1	Procedure	130
7	A-pillar reinforcement (inner) - Renewal	133
7.1	Procedure	133
8	Outer B-pillar - Renewal	135
8.1	Procedure	135
9	Inner B-pillar - Renewal	138
9.1	Procedure	138
10	Outer side member - Renewal	140
10.1	Procedure	140
11	Inner side member - Partial renewal	143
11.1	Procedure	143
53 - Body - rear		147
1	Safety precautions	147
2	Rear upper cross panel - Renewal	148
2.1	Procedure	148
3	Lock cross member - Renewal	150
3.1	Procedure	150
4	Rear longitudinal member - Partial renewal	153
4.1	Procedure	153
5	Side panel - Renewal	155
5.1	Procedure	155
6	Inner rear wheel housing liner - Renewal	160
6.1	Procedure	160
7	Rear wheel housing liner - Renewal	163
7.1	Procedure	163