

## Contents

<b>01 - Self-diagnosis</b>	<b>1</b>
<b>1 Air conditioner self-diagnosis</b>	<b>1</b>
1.1 Technical data for self-diagnosis	1
1.2 Function	1
1.3 Fault recognition	1
1.4 Safety precautions	3
<b>2 Performing self-diagnosis</b>	<b>4</b>
2.1 Connecting vehicle diagnostic, testing and information system VAS 5051 and selecting functions	4
<b>3 Interrogating fault memory</b>	<b>9</b>
3.1 Fault table	11
<b>4 Final control diagnosis</b>	<b>29</b>
4.1 Final control diagnosis	29
<b>5 Basic setting</b>	<b>36</b>
<b>6 Erasing fault memory, end of output</b>	<b>38</b>
6.1 Erasing fault memory	38
6.2 End of output	38
<b>7 Encoding the operating and display unit for air conditioner/Climatronic E87</b>	<b>40</b>
7.1 Encoding the control unit	40
<b>8 Reading the measured value block</b>	<b>42</b>
8.1 List of available display group numbers	43
8.2 Display groups 001 to 005	46
8.3 Display groups 006 to 016	56
<b>9 Checking the convenience data bus system</b>	<b>71</b>
9.1 Function of data bus systems	71
9.2 Checking convenience data bus	73
<b>10 Electrical check</b>	<b>78</b>
10.1 Wiring and component check using test box V.A.G 1598 A	78
10.2 Test steps 1 to 4	81
10.3 Test steps 5 to 9	90
<b>11 Electrical check of heated rear window</b>	<b>103</b>
11.1 Electrical check for actuation of the heated rear window Z1	103
<b>12 Checking electric additional heater</b>	<b>106</b>
12.1 Checking actuation of electric additional heater by engine control unit	108
12.2 Checking electric additional heater with a capacity of 900 watts	110
12.3 Checking the electric additional heater with a capacity of 1500 watts	113
<b>80 - Heating</b>	<b>122</b>
<b>1 Dash panel vents and air ducts</b>	<b>122</b>
1.1 Air distribution in vehicle interior	122
1.2 Air duct in heater/ in air conditioner	124
1.3 Removing and installing intermediate piece for windscreens defroster vent	125
1.4 Checking the vent frame	126
1.5 Checking, removing and installing fresh air intake duct (in the engine compartment)	126
<b>2 Heater components</b>	<b>128</b>
2.1 Checking, removing and installing components	128
2.2 Contact corrosion!	130
2.3 Removing and installing dust and pollen filter	130
2.4 Removing and installing heater controls	131
2.5 Removing and installing flexible shafts	136

2.6	Removing and installing the fresh-air blower series resistor with overheating cut-out N24 .....	137
2.7	Removing and installing the fresh-air blower V2 .....	137
2.8	Removing and installing the fresh-air/recirculated-air flap positioning motor V154 .....	138
2.9	Preparing adapter cables for positioning motor actuation .....	141
2.10	Checking the function of the positioning motor for the fresh-air/recirculated-air flap V154 and the fresh-air/recirculated-air button in the heater controls .....	142
2.11	Removing and installing the step-up gear/temperature flap .....	144
2.12	Removing and installing the step-up gear/air distribution .....	146
2.13	Removing and installing the heating element for additional heater Z35 .....	147
2.14	Check the function of the Econ button in the heater control electronics .....	149
2.15	Removing and installing heater .....	150
2.16	Note for vehicles with 1.6 L FSI engine (if heater output is poor) .....	154
<b>3</b>	<b>Removing and installing the heating system heat exchanger .....</b>	<b>155</b>
3.1	Removing and installing the heat exchanger with the heater and air conditioner fitted .....	155
3.2	Removing and installing the heat exchanger with the heating system and air conditioner removed .....	159
<b>4</b>	<b>Dismantling and assembling heating system .....</b>	<b>161</b>
<b>5</b>	<b>Electrical check on the heated rear window .....</b>	<b>163</b>
5.1	Electrical check on the heated rear window .....	163
<b>87 - Air conditioning system .....</b>	<b>165</b>	
<b>1</b>	<b>Safety precautions when working on vehicles with air conditioners and when handling refrigerant .....</b>	<b>165</b>
1.1	Safety precautions when working on vehicles with air conditioners and when handling refrigerant .....	165
<b>2</b>	<b>Notes on general repairs .....</b>	<b>168</b>
2.1	Contact corrosion .....	168
<b>3</b>	<b>Servicing the refrigerant circuit .....</b>	<b>169</b>
3.1	Overview of components .....	169
3.2	Removing and installing air conditioner high-pressure sender G65 .....	170
3.3	O-ring seals for refrigerant circuit .....	171
3.4	Detaching and attaching compressor from/onto bracket .....	172
<b>4</b>	<b>Replacing compressor pulley .....</b>	<b>173</b>
4.1	Detaching and re-attaching pulley from/onto compressor .....	174
4.2	Checking and adjusting gap between pulley and drive plate .....	176
<b>5</b>	<b>Components for control and regulation of air conditioner .....</b>	<b>178</b>
5.1	Components in the engine compartment and in the rear of the vehicle .....	178
5.2	Removing and installing condensation drainage valve .....	180
5.3	Checking condensation drainage valve .....	180
5.4	Components in the passenger compartment .....	181
5.5	Removing and installing the heating system heat exchanger .....	186
5.6	Removing and installing heating element for additional heater Z35 .....	186
5.7	Removing and installing operating and display unit for air conditioner/Climatronic E87 .....	186
5.8	Removing and installing the fresh-air blower V2 .....	189
5.9	Removing and installing the fresh-air blower control unit J126 .....	189
5.10	Removing and installing the evaporator outlet temperature sender G263 .....	189
5.11	Removing and installing the footwell vent temperature sender G192 .....	190
5.12	Removing and installing the centre vent temperature sender G191 .....	190
5.13	Removing and installing the central flap positioning motor V70 .....	191
5.14	Removing and re-installing the positioning motor from/onto bracket .....	192
5.15	Preparing adapter cables for positioning motor actuation .....	193
5.16	Removing and installing the defrost flap positioning motor V107 and the temperature flap positioning motor V68 .....	194
5.17	Removing and installing the recirculated air flap positioning motor V113 .....	197
5.18	Removing and installing the fresh-air intake duct temperature sensor G89 .....	199

5.19	Removing and installing the temperature sensor blower V42 dash panel .....	199
5.20	Removing and installing the sunlight penetration photosensor G107 .....	200
<b>6</b>	<b>Checking air conditioner refrigeration capacity .....</b>	<b>201</b>
6.1	Checking air conditioner refrigeration capacity .....	201
6.2	Note for vehicles with a 1.6 L FSI engine (if heater output is poor) .....	209
<b>7</b>	<b>Repairing refrigerant circuit .....</b>	<b>210</b>
7.1	Repairing refrigerant circuit .....	210
7.2	Detaching and attaching refrigerant pipes from/to the compressor .....	213
7.3	Removing and installing compressor .....	214
7.4	Detaching and attaching refrigerant pipes from/to evaporator connection .....	215
7.5	Detaching and re-attaching refrigerant pipes from/to condenser .....	215
7.6	Removing and installing condenser .....	216
7.7	Removing and installing restrictor .....	217
7.8	Removing and installing reservoir .....	218
7.9	Removing and installing reservoir bracket .....	219
7.10	Capacities .....	219
<b>8</b>	<b>Removing and installing air conditioner .....</b>	<b>221</b>
8.1	Removing and installing air conditioner .....	221
<b>9</b>	<b>Dismantling and assembling air conditioner .....</b>	<b>226</b>
9.1	Detaching and attaching components from/to the air conditioner .....	226
9.2	Dismantling and assembling air conditioner .....	228